

Park / Neutral position switch circuit


CIRCUIT DESCRIPTION

This circuit sends a signal of the Park/Neutral Position switch (Park or other) to the Body ECU (Main).

HINT:

Refer to the Automatic Transmission section for the PNP switch check (See page [DI-410](#)).

WIRING DIAGRAM

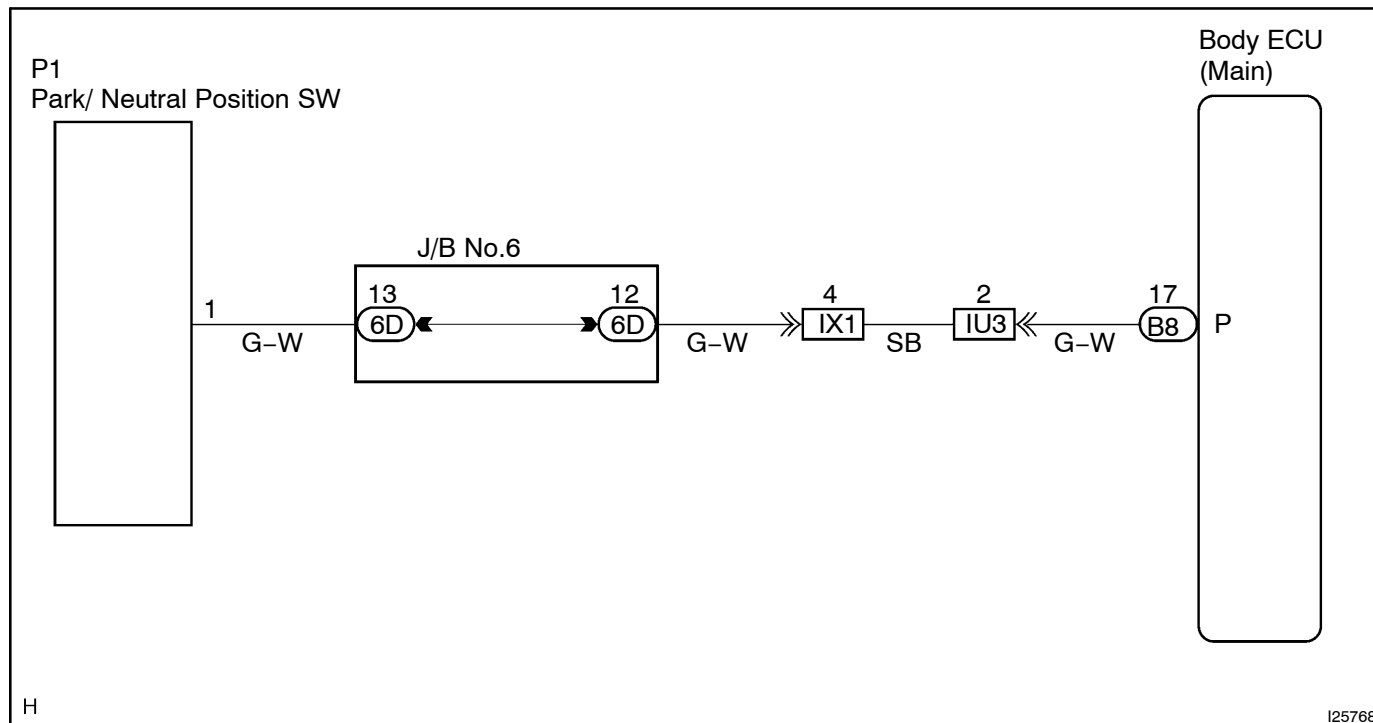

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Check park / Neutral position switch using hand-held tester. |
|---|--|

PREPARATION:

Connect the hand-held tester to DLC 3.

CHECK:

Check that the Park / Neutral position switch operate in DATA LIST (See page [DI-1402](#)).

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1408](#)).

NG

Repair or replace harness and connector between park/neutral position switch and Body ECU (Main) (See page [IN-36](#)).