


Rear wiper switch circuit

CIRCUIT DESCRIPTION

This circuit detects the state of the wiper and washer switch and send it to the Body ECU (Sub).

WIRING DIAGRAM

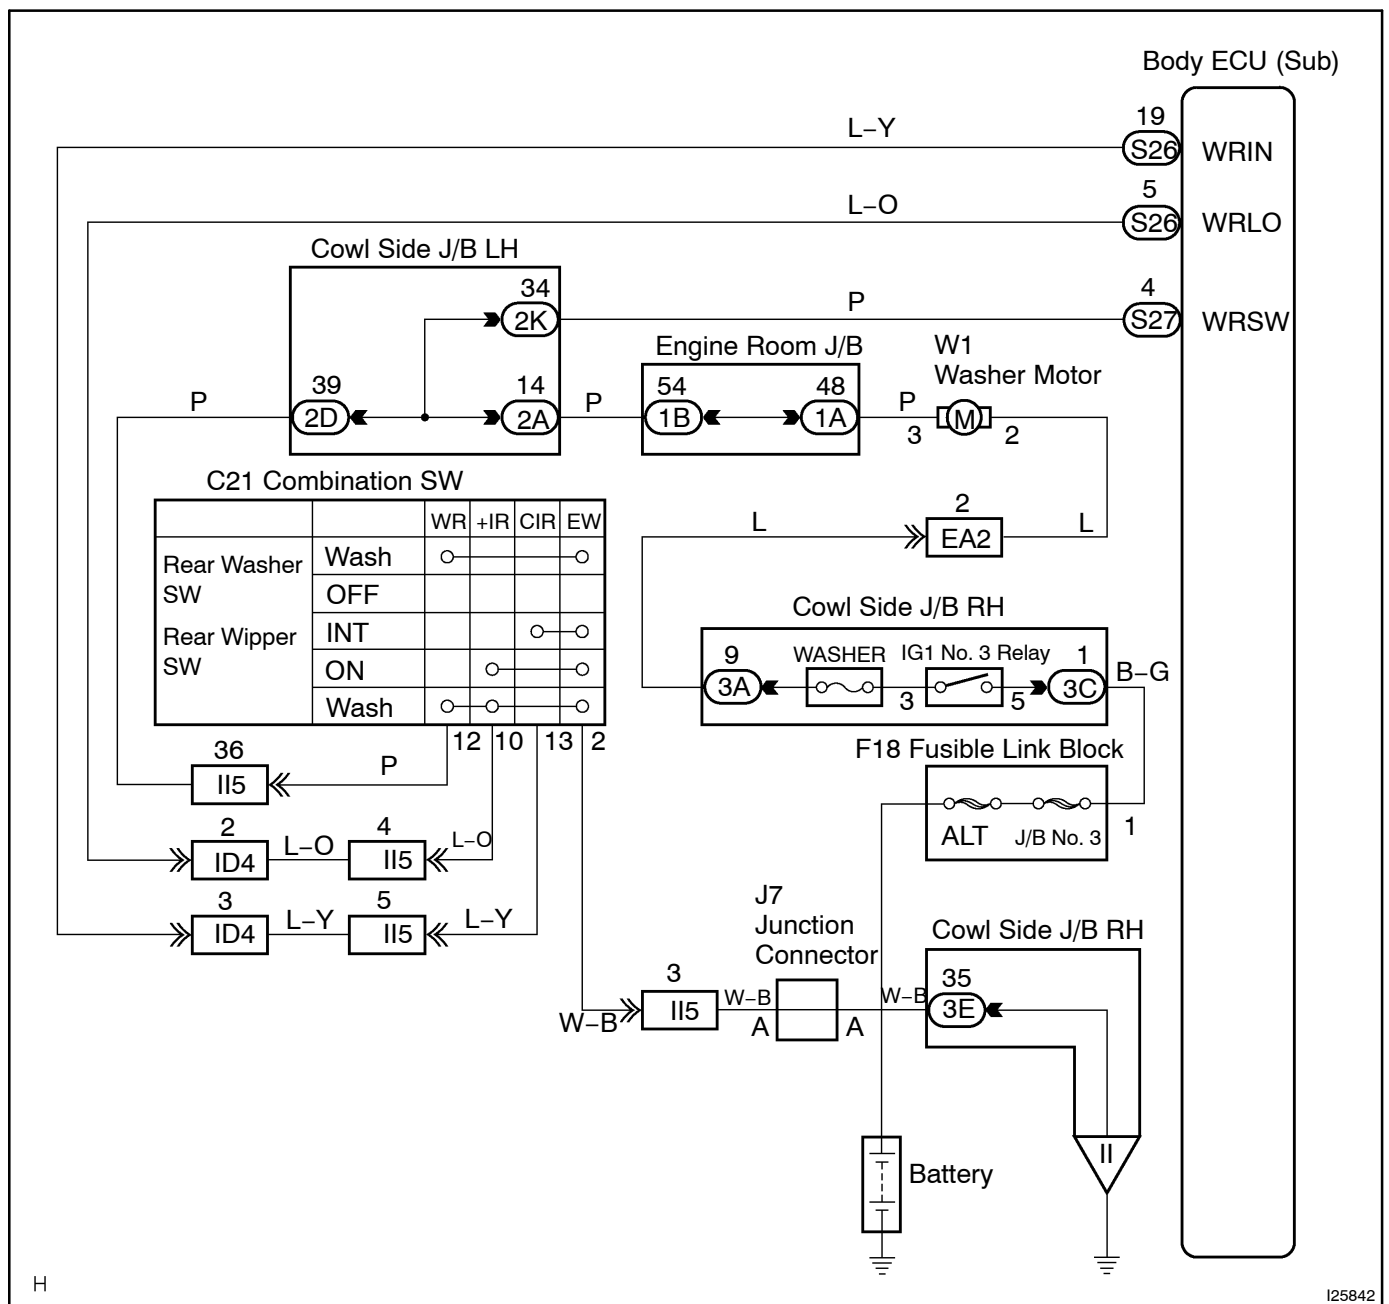

INSPECTION PROCEDURE**1 Check WASHER fuse.****CHECK:**

Check continuity of WASHER fuse.

OK:

Continuity

NG**Replace faulty fuse.****OK****2 Check rear wiper and washer switch (See page [BE-69](#)).****NG****Replace the rear wiper and washer switch.****OK****3 Check wireharness and connector between rear wiper and washer switch and Body ECU (Sub) (See page [IN-36](#)).****NG****Repair or replace wireharness or connector.****OK****Proceed to next circuit inspection shown on
problem symptoms table
(See page [DI-1408](#)).**