

## Taillight circuit


## CIRCUIT DESCRIPTION

This circuit is used to turn the taillight on.

HINT:

- A signal passed through "TIL1" terminal turns on the taillight on the right/left side on the body side.
- A signal passed through "TIL2" terminal turns on the taillight on the right/left side on the back door side.

## WIRING DIAGRAM

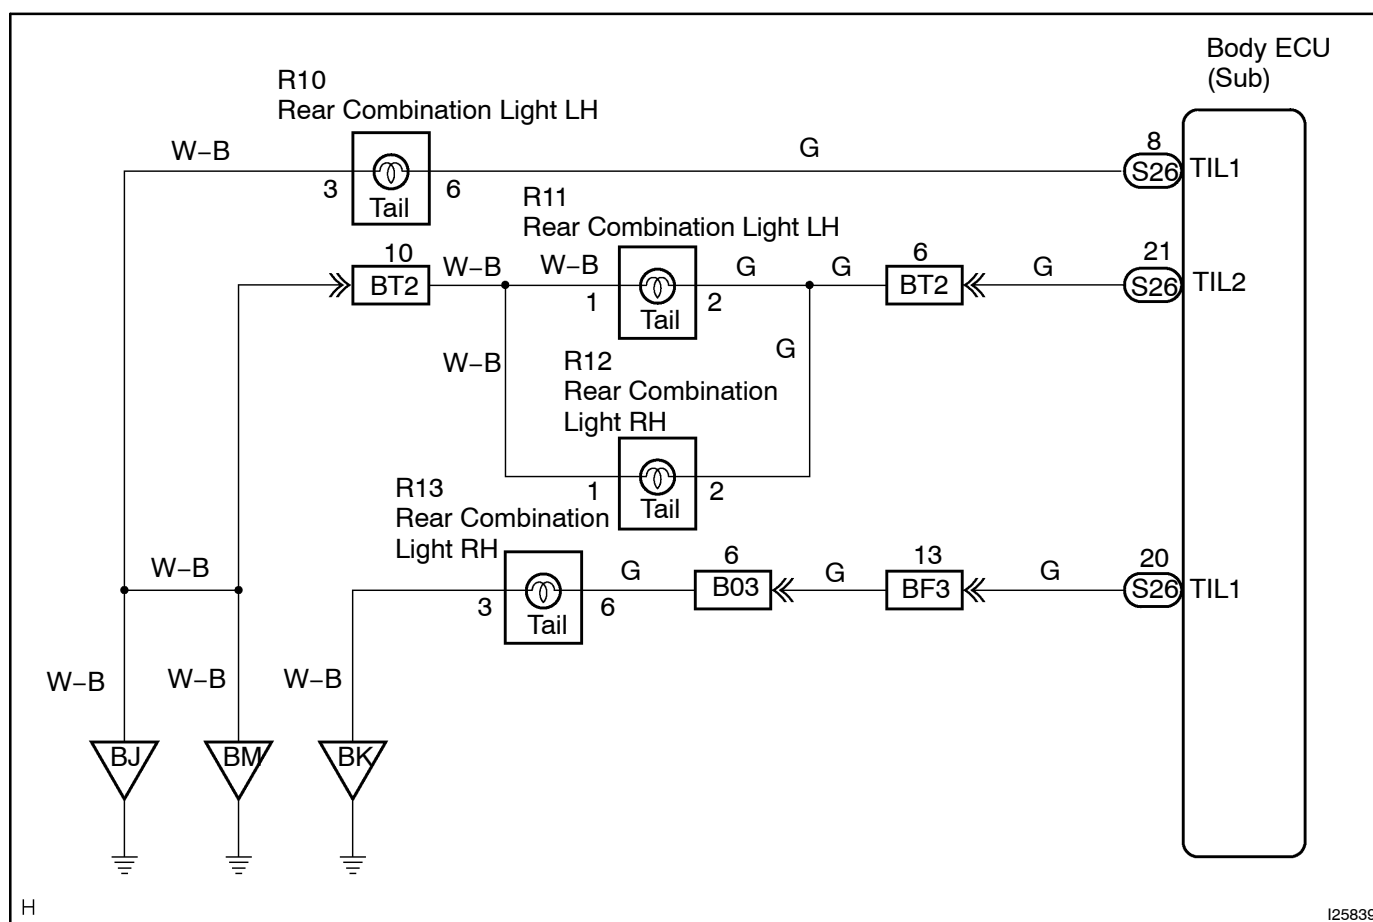

**INSPECTION PROCEDURE****1 Check the taillight bulb.****NG****Replace the failure light bulb.****OK****2 Check wire harness and connector between taillight and body ECU (Sub), taillight and body ground (See page [IN-36](#)).****NG****Repair or replace wire harness or connector.****OK****Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1408](#)).**