


Taillight relay circuit

CIRCUIT DESCRIPTION

The Headlight dimmer switch sends a signal to the Body ECU (Main).

WIRING DIAGRAM

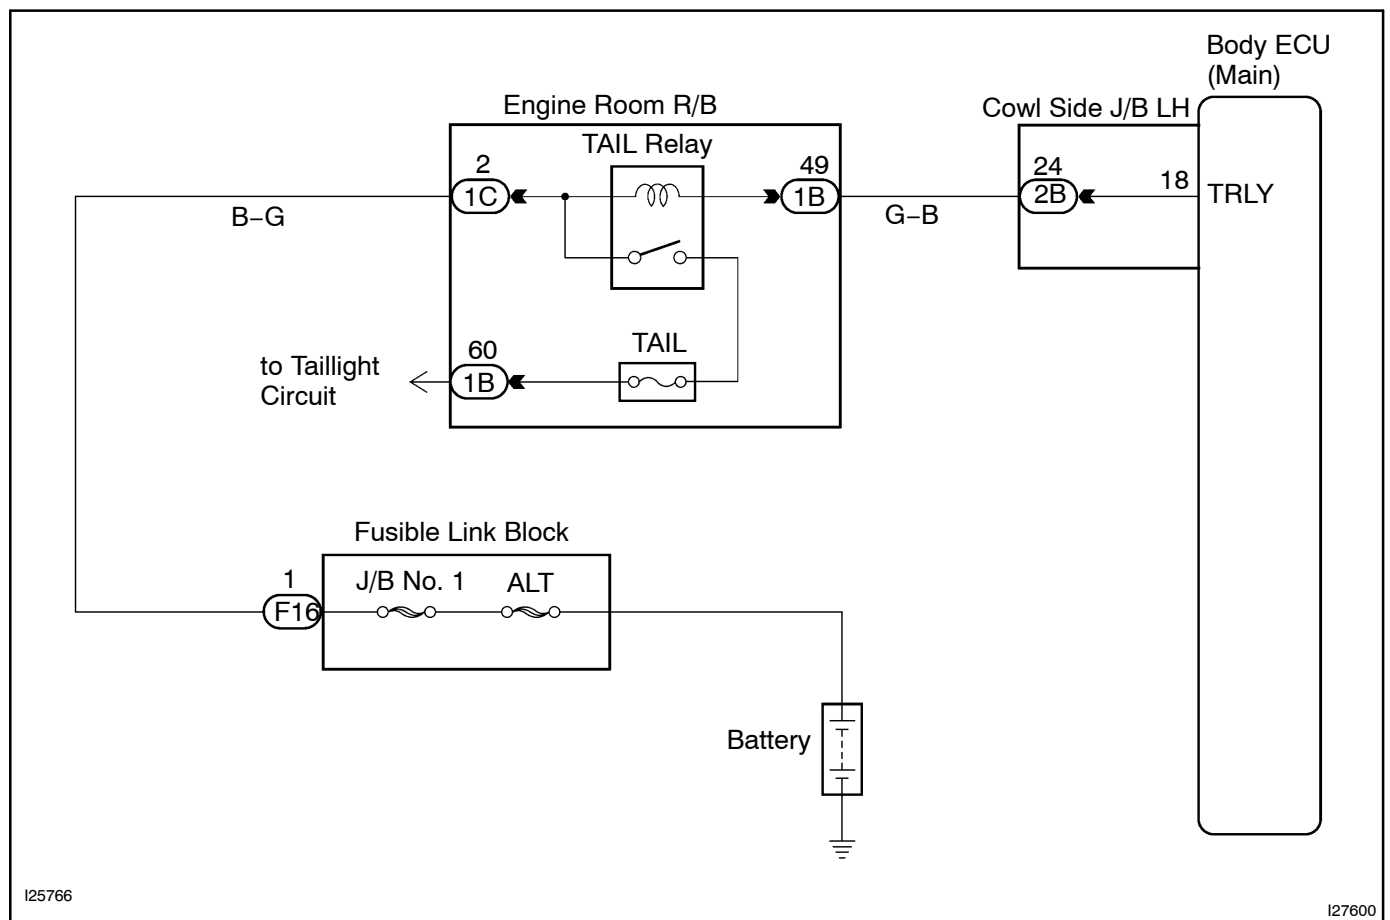

I25766

I27600

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1	Check hazard using hand-held tester.
---	--------------------------------------

PREPARATION:

Connect the hand-held tester to DLC 3.

CHECK:

Check that the door lock motor operate in ACTIVE TEST.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1408](#)).

NG

2	Check taillight relay circuit (See page BE-16).
---	--

NG

Replace engine room J/B assy with wire harness.

OK

3	Check wire harness and connector between taillight relay and body ECU (Main) (See page IN-36).
---	---

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1408](#)).