


Wireless door lock control circuit

WIRING DIAGRAM

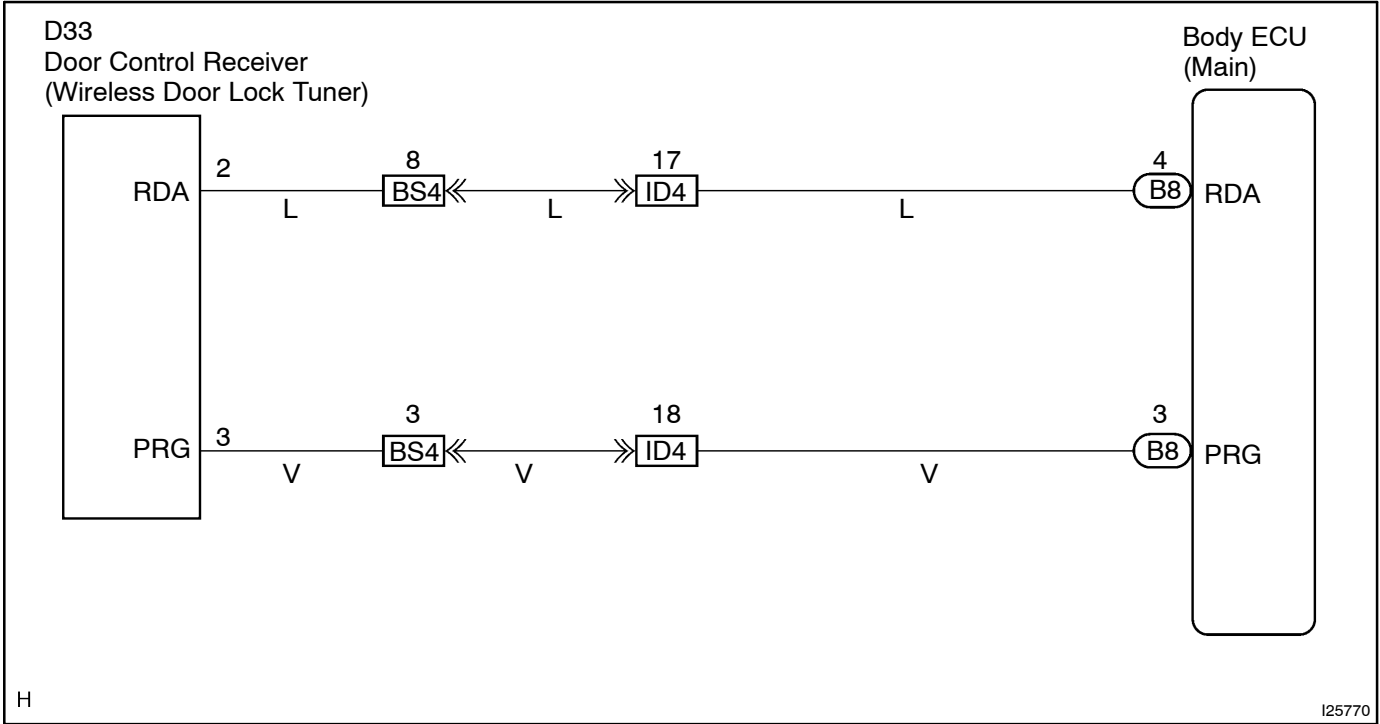

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1	Check wireless door lock using hand-held tester.
---	--

PREPARATION:

Connect the hand-held tester to DLC 3.

CHECK:

Check that the wireless door lock operate in ACTIVE TEST (See page [DI-1402](#)).

OK


Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1408](#)).

NG

2	Check wire harness and connector between wireless door lock ECU and Body ECU (Main) (See page IN-36).
---	--

NG

Repair or replace wire harness or connector.

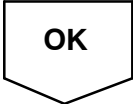OK

Go to Wireless Door Lock Control System
(See page [DI-1151](#)).