


Power source circuit (Body ECU (Main))

CIRCUIT DESCRIPTION

This circuit supplies power to operate the Body ECU (Main).

WIRING DIAGRAM

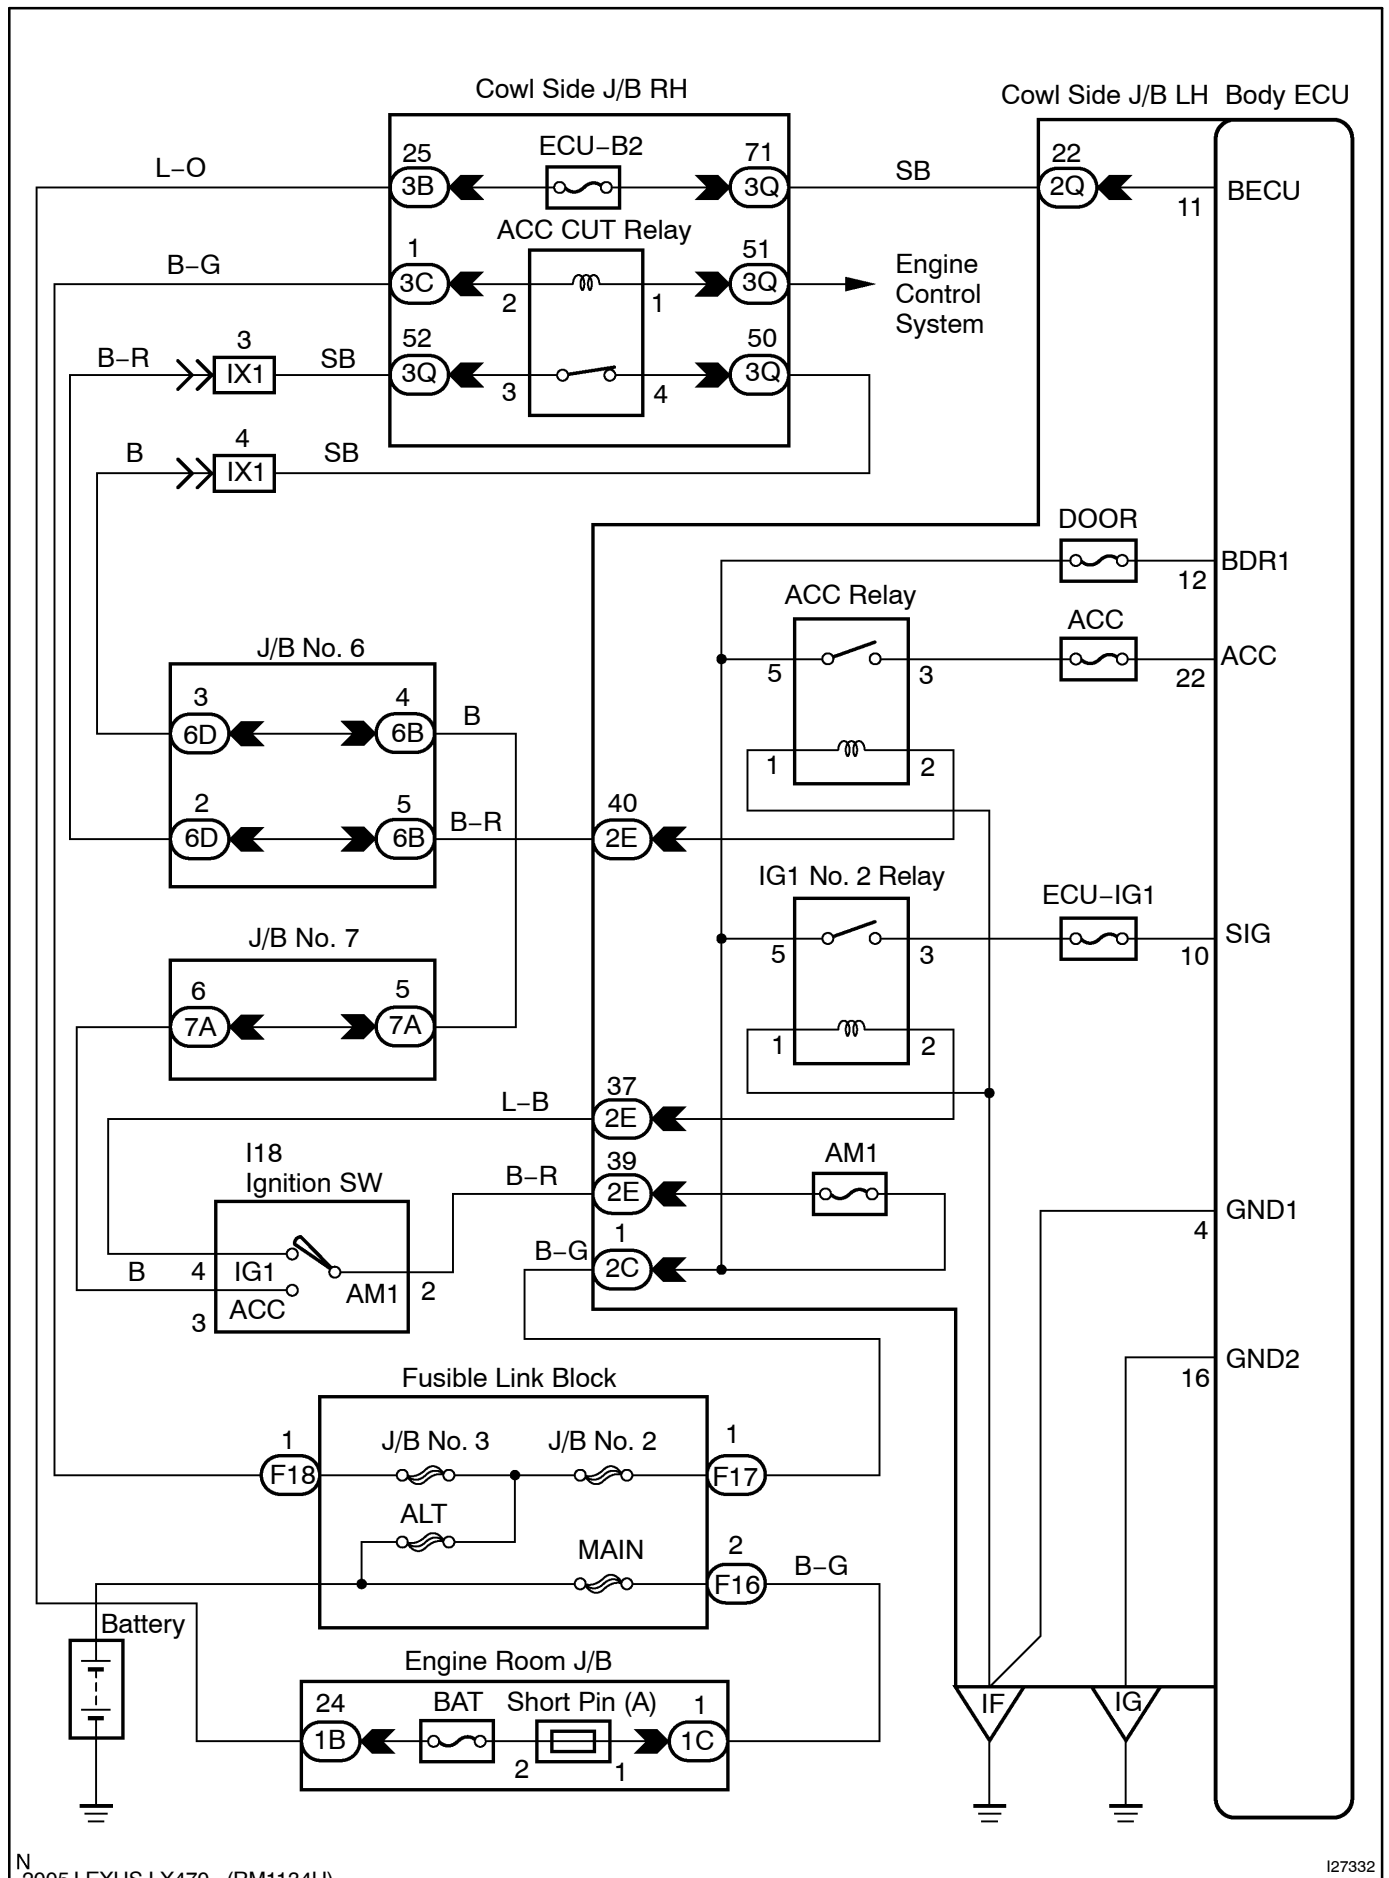

INSPECTION PROCEDURE

1	Check ECU–B2, DOOR fuse.
----------	---------------------------------

CHECK:

Check continuity of ECU–B2, DOOR fuse.

OK:

Continuity

NG

Replace faulty fuse.

OK

2	Check voltage between terminals BDR1, BECU and GND1, 2 of Body ECU (Main) connector.
----------	---

PREPARATION:

- (a) Turn the ignition switch OFF.
- (b) Disconnect the Body ECU (Main) connector.

CHECK:

Measure voltage between terminals BDR1, BECU and GND1, 2.

OK:

Voltage: 10 – 14V

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1408](#)).

NG

3	Check wire harness and connector between Body ECU (Main) and body ground, Body ECU (Main) and fuse (See page IN-36).
----------	---

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1408](#)).