

PROBLEM SYMPTOMS TABLE

LIGHTING SYSTEM:

Symptom	Suspected Area	See page
Headlight does not come on. (Low beam)	1. Light control switch circuit 2. Headlight relay circuit 3. Combination switch 4. Body ECU (Main)	DI-1433 DI-1441 BE-36 IN-36
Headlight system does not operate. (HI beam or Flash)	1. Headlight dimmer switch circuit 2. Light control switch circuit 3. Combination switch 4. Body ECU (Main)	DI-1435 DI-1433 BE-36 IN-36
Automatic light control system does not operate.	1. Light control sensor circuit 2. Light control sensor 3. Body ECU (Main)	DI-1421 BE-36 IN-36
Taillight system does not come on.	1. Taillight relay circuit 2. Taillight circuit 3. Light control switch circuit 4. Combination switch 5. Body ECU (Sub) 6. Body ECU (Main)	DI-1445 DI-1460 DI-1433 BE-36 IN-36 IN-36
Stop light system does not come on.	1. Stop light switch 2. Stop light circuit 3. Body ECU (Sub)	BE-63 DI-1462 IN-36

HAZARD WARNING SYSTEM:

Symptom	Suspected Area	See page
Hazard warning light does not come on.	1. Hazard switch 2. Flasher relay	BE-48 BE-48

ILLUMINATION LIGHT SYSTEM:

Symptom	Suspected Area	See page
Illumination light does not come on.	1. Power source circuit (Body ECU (Sub)) 2. Power source circuit (Body ECU (Main)) 3. Illumination circuit (Body ECU (Main) control) 4. Illumination circuit (Body ECU (Sub) control) 5. Body ECU (Sub) 6. Body ECU (Main)	DI-1456 DI-1423 DI-1464 DI-1467 IN-36 IN-36
Brightness does not change even when rheostat is turned on. (All)	1. Light control rheostat 2. Body ECU (Main)	BE-82 IN-36
Door courtesy light does not come on.	1. Door courtesy switch circuit 2. Body ECU (Main)	DI-1431 IN-36

DRIVER SEAT BELT SYSTEM:

Symptom	Suspected Area	See page
Driver seat belt warning does not come on.	1. Driver buckle switch circuit 2. Combination meter 3. Body ECU (Main)	DI-1439 BE-82 IN-36

POWER DOOR LOCK CONTROL SYSTEM:

Symptom	Suspect Area	See page
All the doors can not be locked or unlocked.	1. Power source circuit (Body ECU (Main)) 2. Body ECU (Main)	DI-1423 IN-36
Driver side door lock does not operate.	1. Door lock motor circuit 2. Body ECU (Main)	DI-1500 IN-36
Door key related function cannot be done.	1. Door key lock and unlock switch circuit 2. Door courtesy switch circuit 3. Body ECU (Main)	DI-1498 DI-1431 IN-36
Key confinement prevention function does not operate.	1. Door courtesy switch circuit 2. Door unlock detection switch circuit 3. Body ECU (Main)	DI-1431 DI-1502 IN-36

POWER SEAT CONTROL SYSTEM:

Symptom	Suspect Area	See page
Driving position memory system does not operate.	1. Memory switch circuit (w/ memory) 2. Power seat control ECU 3. Body ECU (Main)	DI-1454 IN-36 IN-36

WIRELESS DOOR LOCK CONTROL SYSTEM:

Symptom	Suspect Area	See page
Wireless door lock does not operate.	1. Wireless door lock control circuit 2. Wireless door lock tuner 3. Body ECU (Main)	DI-1447 IN-36 IN-36
Wireless door lock buzzer does not operate.	1. Wireless door lock buzzer circuit 2. Body ECU (Main)	DI-1165 IN-36

REAR WIPER SYSTEM:

Symptom	Suspect Area	See page
Rear wiper system does not operate.	1. Door courtesy switch circuit (back door) 2. Power source circuit (Body ECU (Sub)) 3. Rear wiper switch circuit 4. Rear wiper motor circuit 5. Body ECU (Sub)	DI-1431 DI-1456 DI-1470 DI-1472 IN-36
Rear washer linked function does not operate.	1. Rear wiper switch circuit 2. Body ECU (Sub)	DI-1470 IN-36
Vehicle speed switching function does not operate.	1. Door courtesy switch circuit (back door) 2. Speed signal circuit 3. Body ECU (Sub) 4. Body ECU (Main)	DI-1431 DI-1477 IN-36 IN-36
Reverse linked function does not operate.	1. Door courtesy switch circuit (back door) 2. Reverse signal circuit 3. Front wiper position circuit 4. Body ECU (Sub)	DI-1431 DI-1475 DI-1368 IN-36

OTHERS:

Symptom	Suspect Area	See page
Key unlock warning system does not operate.	1. Key unlock warning switch circuit 2. Key unlock warning switch 3. Combination meter 4. Body ECU (Main)	DI-1429 BE-30 BE-82 IN-36
Parking brake indicator does not come on.	1. Parking brake switch circuit 2. Combination meter 3. Body ECU (Main)	DI-1437 BE-77 IN-36
Open door warning light does not come on.	1. Open door warning light circuit 2. Door courtesy switch 3. Combination meter 4. Body ECU (Main)	DI-1449 BE-53 BE-77 IN-36