

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
SET cannot be done and/or CANCEL cannot be done. (DTC is Normal)	1. Input Signal Circuit 2. Vehicle Speed Sensor Circuit 3. Stop Light Switch Circuit 4. Park/Neutral Position Switch Circuit 5. ECM	DI-1210 DI-1205 DI-1206 DI-410 IN-36
SET cannot be done and/or CANCEL cannot be done. (DTC is not output)	1. ECM	IN-36
Actual vehicle speed deviates above or below the set speed.	1. Input Signal Circuit 2. ECM	DI-1210 IN-36
Gear shifting occurs frequently between 3rd and O/D when driving on uphill road. (Hurting)	1. ECM	IN-36
Cruise control is not cancelled even when brake pedal is depressed.	1. Stop Light Switch Circuit 2. ECM	DI-1206 IN-36
Cruise control not cancelled, even when transmission is shifted to "N" position.	1. Park/Neutral Position Switch Circuit 2. ECM	DI-410 IN-36
Control switch does not operate. (+/SET, +/-RES, CANCEL not possible)	1. Cruise Control Switch Circuit 2. ECM	DI-1211 IN-36
SET possible at 40 km/h (25 mph) or less, or CANCEL does not operate at 40 km/h (25 mph) or less.	1. Input Signal Circuit 2. ECM	DI-1210 IN-36
Poor response is ACCEL and RESUME modes.	1. ECM	IN-36
O/D does not resume even though the road is not uphill.	1. ECM	IN-36
DTC memory is erased.	1. ECM	IN-36
DTC is not output, or is output when should not be.	1. Diagnosis Circuit 2. ECM	– IN-36
Cruise MAIN indicator light remains ON or fails to come on.	1. Input Signal Circuit 2. ECM	DI-1210 IN-36
Cruise MAIN indicator light does not come on.	1. Cruise MAIN indicator Light Circuit 2. ECM	DI-1214 IN-36