

CUSTOMIZE FUNCTION

CUSTOMIZE PARAMETERS

DIDMZ-01

The followings are the possible items to be customized.

NOTICE:

- Among the following contents, the make-indicated(#) items should not be know to users.
- After confirming whether the items of the customer's request is applicable or not for the customized items, perform the customize operation.
- Be sure to record the current value before customizing. (You can use the attached customize check sheet.)
- In case of performing the troubleshooting, pay attention as there is a possibility that the function is OFF by customizing. (Example: In case of the symptom in which "The wireless operation does not function", check that the wireless operation is not OFF by customizing, then perform the troubleshooting.)

WIRELESS DOOR LOCK

DISPLAY(ITEM)	DEFAULT	CONTENTS	SETTING
OPEN DOOR WARN (Open Door Warning)	ON	Function to make the buzzer sound for 10 seconds if the door is open when locking with the wireless door lock function.	ON / OFF
WIRELS BUZZ VOL (Wireless Door Lock Buzzer Volume)	MID2	To adjust the volume of the wireless buzzer.	OFF / MIN / MID1 / MID2 / MID3 / MAX
WIRELESS OPER (Wireless Door Lock Control Function)	ON	ON/OFF of the wireless door lock function.	ON / OFF
ALARM FUNCTION (Panic Function)	ON	Function to operate the theft deterrent system by keeping pressing the lock button of the transmitter for 2.5 seconds. If there is the panic button, press the panic button instead of the lock button.	ON / OFF
UNLOCK / 2OPER (2 times operation wireless unlock)	ON	Function to unlock the driver's door by pressing the unlock button of the transmitter once and to unlock all the doors by pressing it twice. In the OFF setting, pressing one time makes all the doors unlocked.	ON / OFF
AUTO LOCK DELAY (Auto Lock Time)	30 s	To change the time until re-locking after unlocking with the wireless door lock function.	30 s / 60 s
HAZARD ANS BACK (Hazard answer back of the wireless)	ON	Function to light up the all turn signal light once when pressing the transmitter lock button and twice when pressing the unlock button under the condition that the Engine Hood, Trunk and all the doors are closed.	ON / OFF

DOOR LOCK

DISPLAY(ITEM)	DEFAULT	CONTENTS	SETTING
UNLOCK / PARK (#) (Unlock w/ IG ON, shift P, speed 0)	OFF	Function to unlock the doors by shifting the lever to P range from other than P range when the ignition is ON.	ON / OFF
ALL UNLK / OPN-CL (#) (All unlock w/ D door open-close)	OFF	Function to unlock all the other doors when opening the driver's door within 10 seconds after turning the ignition OFF from ON.	ON / OFF

UNLK / KEY TWICE (Unlock w/ 2 times D key operation)	ON	Function to unlock only the driver's door by doing the key operation once and to unlock all the doors by doing it twice. In the OFF setting, operating the key "UNLOCK" once makes all the doors unlocked.	ON / OFF
AUTO LOCK (Auto Lock)	OFF	Function to lock the door when the vehicle reaches to a certain speed.	ON / OFF
AUTO LOCK/SHIFT (Auto Lock/shift not P)	ON	Function to lock the doors when shifting the lever from P range to the range other than P.	ON / OFF

SECURITY

DISPLAY(ITEM)	DEFAULT	CONTENTS	SETTING
PASSIVE MODE (#) (Passive Mode)	OFF	PASSIVE MODE is the function to set the theft deterrent system 30 seconds later after having the driver's door closed from opening condition by removing the key from the ignition key cylinder. In case of PASSIVE MODE, under the condition that the theft deterrent system is set and after opening either one of the doors, if you do not perform the following operations within 15 seconds, the theft deterrent system will operate by judging that condition as a theft. • Press the transmitter unlock button. • Insert the key to the door key cylinder on the driver's or the passenger's door and turn it to unlock side. • Insert the key to the ignition key cylinder and turn the ignition ON. • Open the trunk with the transmitter. • Open the trunk with the key.	ON / OFF
WARNING(HORN) (#) (warning (horn))	ON	Function to make the warning by the horn and theft deterrent horn available.	ON / OFF
ENTRY DELAY (#) (Entry delay time)	14 s	to change the entry delay time (period before starting the warning) by the passive mode.	0 s / 14 s / 30 s
WARN BY GLS SEN (#) (Warning by glass broken sensor)	ON	Function to turn ON/OFF of the glass brake sensor. This function is only effective for the vehicle with glass break sensor.	ON / OFF
INTRUSION SEN (#) (Intrusion Sensor)	ON	Function to turn ON/OFF of the intrusion sensor. This function is only effective for the vehicle with intrusion sensor.	ON / OFF

POWER WINDOW

DISPLAY(ITEM)	DEFAULT	CONTENTS	SETTING
UP / DOOR KEY (Door key linked P/W UP)	ON	Function to make all the door windows up manually by holding the driver's side door key to the lock side for 1.5 seconds when the ignition switch is OFF.	ON / OFF
DOWN / DOOR KEY (Door key linked P/W DOWN)	ON	Function to make all the door windows down manually by holding the driver's side door key to the unlock side for 1.5 seconds when the ignition switch is OFF.	ON / OFF
DOWN / WIRELESS (P/W DOWN w/ transmitter)	ON	Function to make all the door windows down manually by pressing on the transmitter unlock button for 2.5 seconds when ignition switch is OFF.	ON / OFF

WIPER

DISPLAY(ITEM)	DEFAULT	CONTENTS	SETTING
R-LINKED WIPER (R-linked wiper)	ON	Function to operate the rear wiper once when shift position is R while operating the front wiper.	ON / OFF
SPEED MODE (Speed Mode)	Avail	Function to change to the intermittent operation when the vehicle comes to a stop(0 vehicle speed) from running condition in case that the wiper switch is at the LO position.	Not Avail / Avail
AUTO WIPE (#) (Auto wipe)	Avail	Function to operate the wiper automatically when it is raining.	Not Avail / Avail
REWIPE CONTROL (Rewipe Control)	SPD MOD	Function to change time until operating the wiper to prevent dropping after having used the washer.	OFF / 3s / SPD MOD

ILLUMINATED ENTRY

DISPLAY(ITEM)	DEFAULT	CONTENTS	SETTING
LIGHTING TIME (Lighting Time)	15 s	To change the lighting time after closing the door. (It will quickly fade out in case of turning the ignition ON.	7.5 s / 15 s / 30 s
ILLUMI SYSTEM (Operation of illumination)	ON	Function to light up the step light, center console light and door inside handle light when one of the following occurs; the ignition turned ON, door unlock or door open.	ON / OFF
LIGHT CONTROL (Light control)	ON	Function to light up the step light and door inside handle light when the ignition switch is ON and the shift position is not P.	ON / OFF
I/L ON / UNLOCK (Interior light ON w/ door key unlock)	ON	Function to light up the interior light*, ignition light and step light when unlocking with the door key cylinder. *: Interior light comes on when the interior light switch is at the DOOR position.	ON / OFF
I/L ON/ACC OFF (Illumination system with ACC OFF)	ON	Function to light the interior light* and door courtesy light when the ignition switch is operated from "ACC" to "LOCK". *: interior light comes on when the interior light switch is at the DOOR position.	ON / OFF

LIGHT CONTROL**HINT:**

Sensitivity adjustment can hardly be confirmed. Please check by customer's actual driving.

DISPLAY(ITEM)	DEFAULT	CONTENTS	SETTING
DISP EX ON SEN (#) (Display Extinction Luminous Intensity)	NORMAL	To change the brightness of lowering the lights such as the indicator light of the combination meter, A/C indicator light, clock. Refer to *1 illustration .	DARK2 / DARK1 / NORMAL / LIGHT1 / LIGHT2
DISP EX OFF SEN (#) (Display Extinction Release Luminous Intensity)	NORMAL	To change the brightness of canceling the lowering the lights such as the indicator light of the combination meter, A/C indicator light, clock. Refer to *2 illustration.	DARK2 / DARK1 / NORMAL / LIGHT1 / LIGHT2
SENSITIVITY (Turn ON luminous intensity)	NORMAL	To adjust the sensitivity of the lighting illumination. Refer to the *3 illustration.	DARK2 / DARK1 / NORMAL / LIGHT1 / LIGHT2
LIGHT OFF DELAY (Light Auto OFF Delay)	30 s	Function to keep on lighting the headlight for a certain period of time after closing all the doors with the ignition switch turned OFF from ON under the condition that the light control switch is at HEAD or AUTO with the headlight ON.	OFF / 30 s / 60 s / 90 s
DRL FUNCTION (#) (DRL function) (USA ONLY)	ON	ON / OFF of the DRL function.	ON / OFF

Illustration of *1

Brightness of lowering the lights	Dark ←————→ Bright
Setting	DARK2 ——— DARK1 ——— NORMAL ——— LIGHT1 ——— LIGHT2

Illustration of *2

Brightness when canceling the lowering of the lights	Dark ←————→ Bright
Setting	DARK2 ——— DARK1 ——— NORMAL ——— LIGHT1 ——— LIGHT2

Illustration of *3

Lighting brightness	Dark ←————→ Bright
Setting	DARK2 ——— DARK1 ——— NORMAL ——— LIGHT1 ——— LIGHT2

TILT & TELESCO

DISPLAY(ITEM)	DEFAULT	CONTENTS	SETTING
AUTO TILT AWAY (#) (Auto Away / Return Function)	ON	ON / OFF of the Auto away / return function.	ON / OFF

SLIDE ROOF

DISPLAY(ITEM)	DEFAULT	CONTENTS	SETTING
OPEN / DOOR KEY* (Door key linked OPEN)	ON	Function to open the sliding roof manually linking with the power window if holding the driver side door key for 2.5 seconds or more to the unlock side when the ignition switch is OFF.	ON / OFF
CLOSE / DOOR KEY* (Door key linked CLOSE)	ON	Function to close the sliding roof manually linking with the power window if holding the driver side door key for 2.5 seconds or more to the lock side when the ignition switch is OFF.	ON / OFF
OPEN / WIRELESS* (Wireless key linked OPEN)	ON	Function to open the sliding roof manually linking with the power window if pressing on the transmitter unlock button for 2.5 seconds or more when the ignition switch is OFF.	ON / OFF
DOOR KEY OPER (Door key linked operation)	SLIDE	Function to select the opening direction of the manual opening of the sliding roof linking with the power window if holding the driver side door key for 2.5 seconds or more to the unlock side when the ignition switch is OFF.	SLIDE / TILT
WIRELESS OPER (Wireless linked operation)	SLIDE	Function to select the opening direction of the manual opening of the sliding roof linking with the power window if pressing on the transmitter unlock button for 2.5 seconds or more when the ignition switch is OFF.	SLIDE / TILT

*: If the setting of the same operation of the power window is OFF, the sliding roof does not operate even if the setting of the sliding roof is ON.