


## Power source circuit

## CIRCUIT DESCRIPTION

This circuit supplies power to operate the power window master switch.

## WIRING DIAGRAM

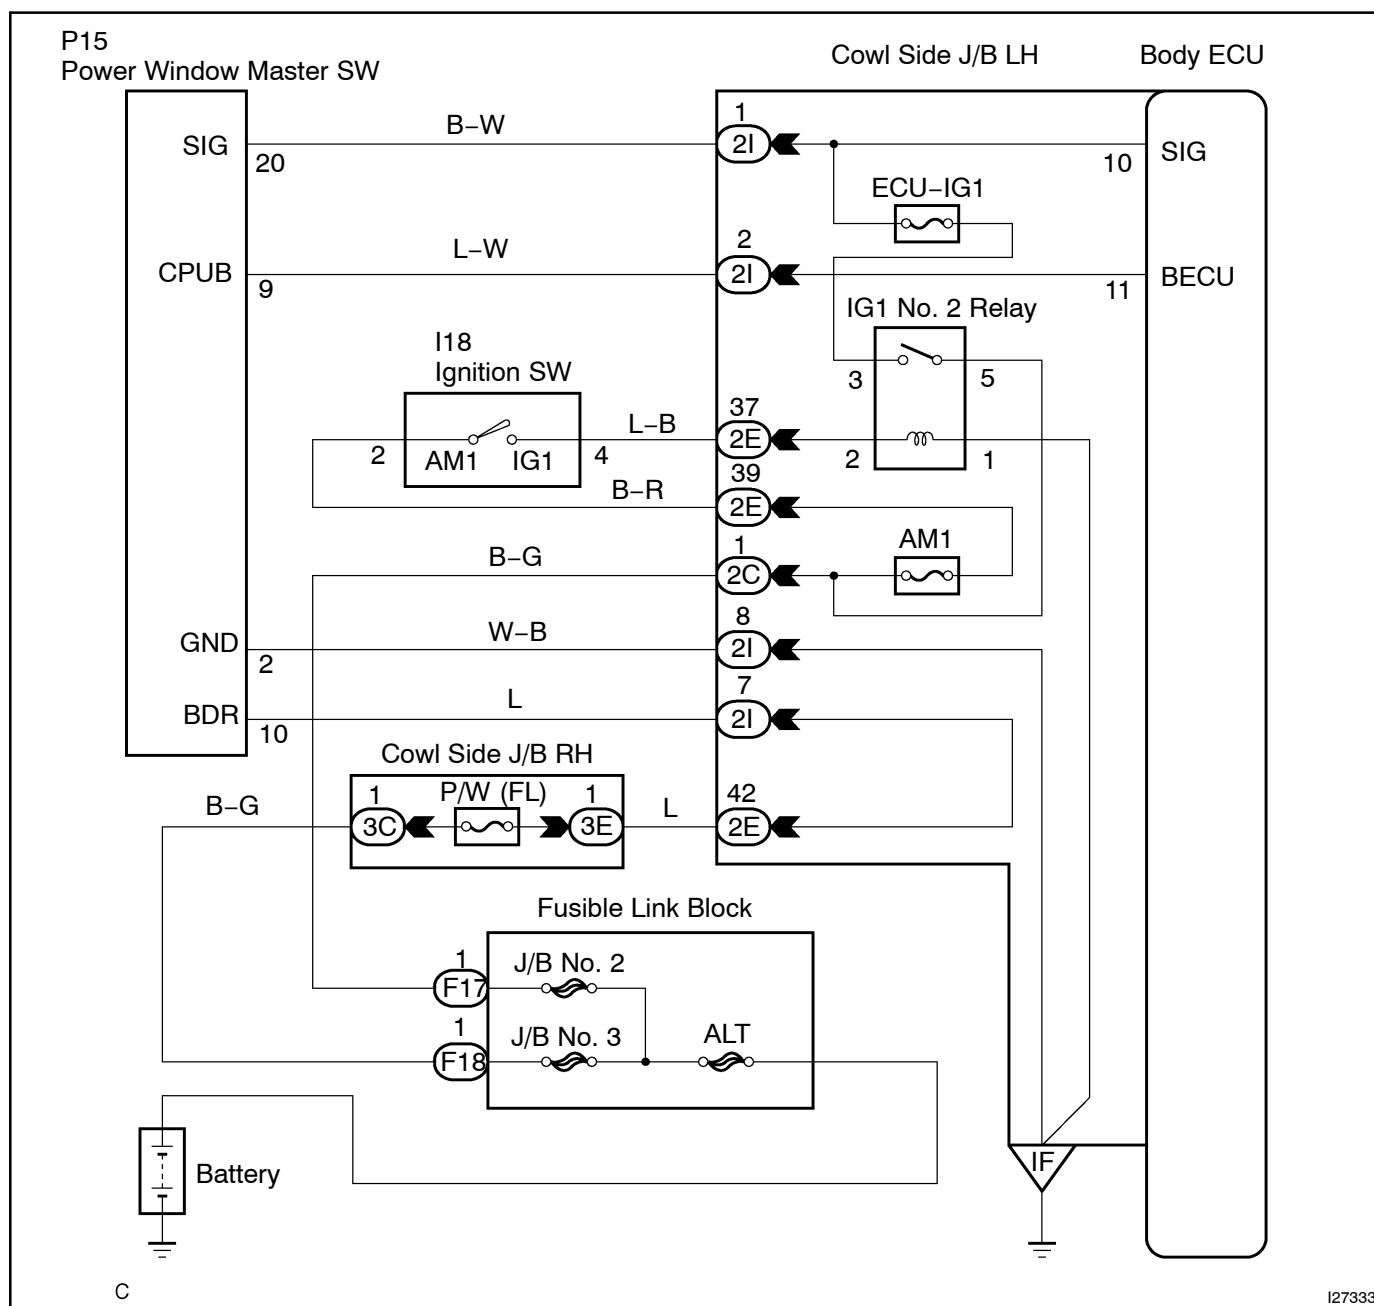

**INSPECTION PROCEDURE****1 Check ECU-IG1 and AM1 fuse.****CHECK:**

Check continuity of ECU-IG1 and AM1 fuse.

**OK:**

Continuity

**NG****Replace faulty fuse.****OK****2 Check voltage between terminals BECU, SIG, BDR and GND of power window master switch connector.****PREPARATION:**

Turn the ignition switch OFF.

**CHECK:**

Measure the voltage between terminals BECU, SIG, BDR and GND.

**OK:**

Voltage: 10 - 14V

**OK****Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1484](#)).****NG****3 Check wire harness and connector between power window master switch and body ground (See page [IN-36](#)).****NG****Repair or replace wire harness or connector.****OK**

**Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1484](#)).**