


Diagnosis Circuit

CIRCUIT DESCRIPTION


This circuit sends an signal to the ECU that outputs DTC.

WIRING DIAGRAM

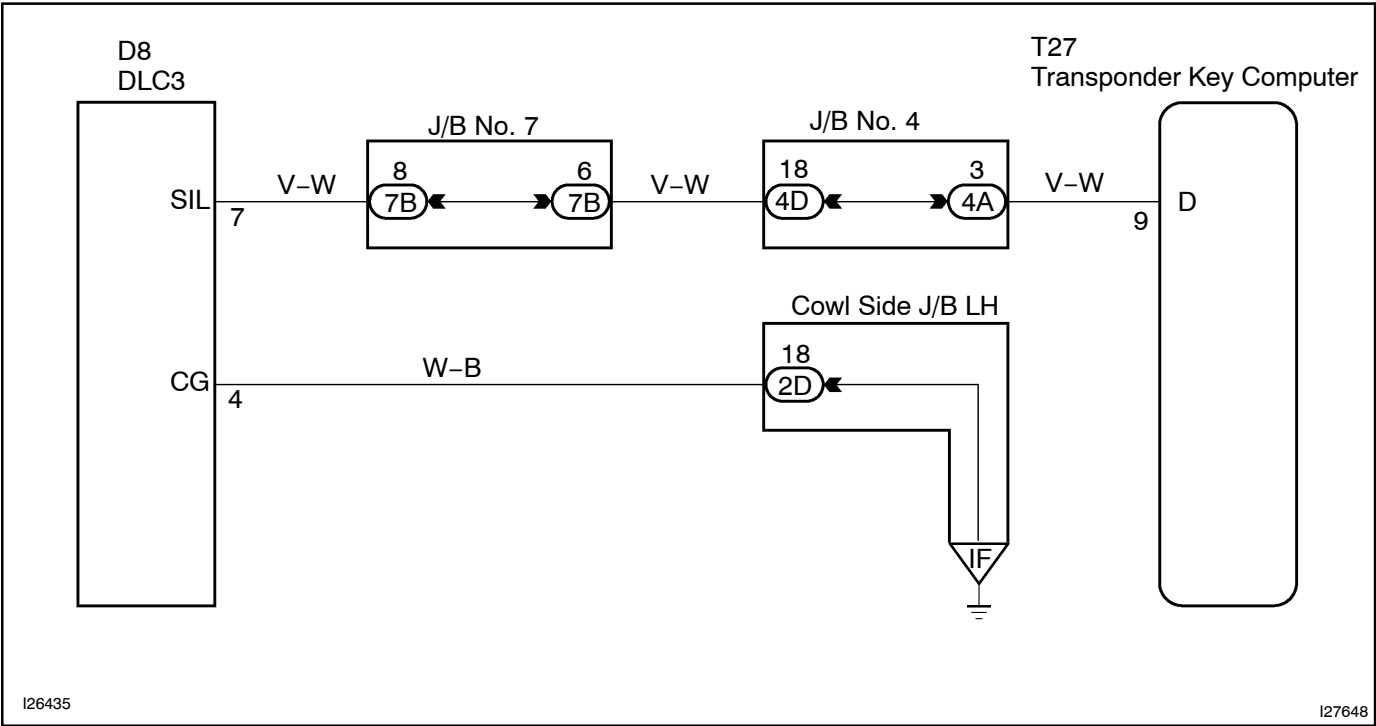

INSPECTION PROCEDURE

1	Check voltage between terminals SIL and CG of DLC3.
---	---

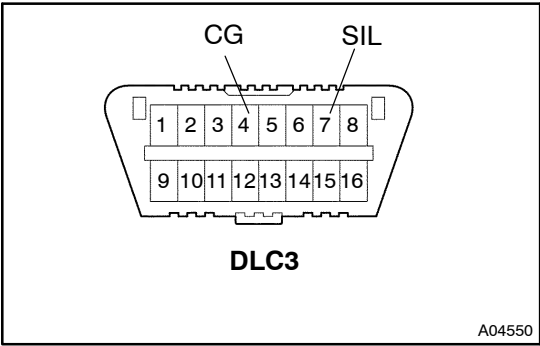

PREPARATION:
Turn ignition switch ON.

CHECK:
Measure voltage between terminals SIL and CG of DLC3.

OK:
Voltage: 10 - 14 V

OK

 
Proceed to next circuit inspection shown in problem symptom table (See page [IN-36](#)).

NG

2	Check harness and connector between transponder key ECU and DLC3, DLC3 and body ground (See page IN-36).
---	---

NG

Repair or replace harness or connector.

OK

Check and replace transponder key ECU
(See page [IN-36](#)).