


TERMINALS OF ECU

1. TRANSPONDER KEY ECU

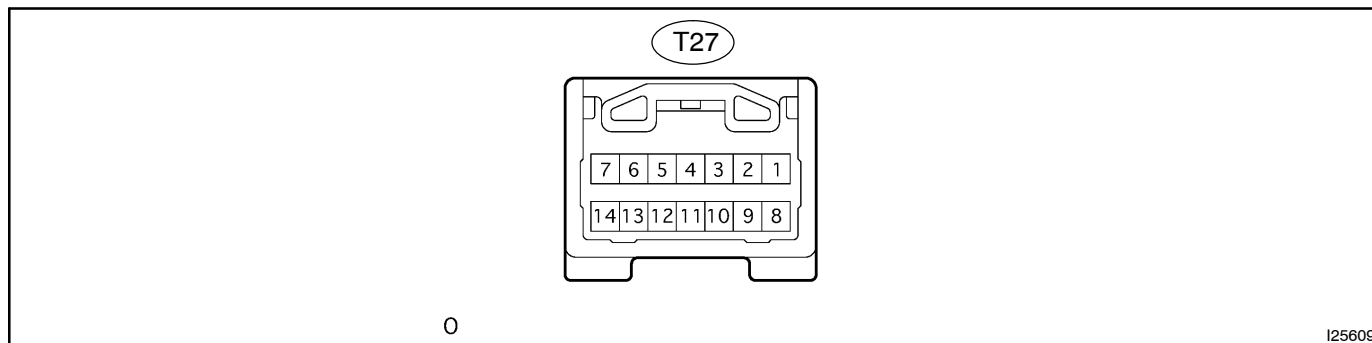

(a) Disconnect the connector.


Standard:

Symbols (Terminal No.)	Wiring Color	Condition	Standard
T27-14 (GND) – Body ground	W-B	Always	Continuity
T27-1 (IG) – T27-14 (GND)	L-W – W-B	Always	10 – 14 V
T27-2 (IG) – T27-14 (GND)	B-R – W-B	Ignition switch OFF → ON	0 V → 10 – 14 V
T27-10 (KSW) – T27-14 (GND)	R-B – W-B	No key in the ignition key cylinder → With key	No Continuity → Continuity
T27-4 (CTY) – T27-14 (GND)	R-Y – W-B	Driver's door close → open	No Continuity → Continuity

(b) Reconnect the connector.


Standard:

Symbols (Terminal No.)	Wiring Color	Condition	Standard
T27-10 (KSW) – T27-14 (GND)	R-B – W-B	No key in the ignition key cylinder → With key	10 – 14 V → 0 V
T27-8 (VC5) – T27-14 (GND)	Y – W-B	Ignition switch OFF → ON	0 V → 5 V
T27-12 (TXCT) – T27-14 (GND)	V-G – W-B	Ignition switch OFF → ON	Waveform 1
T27-11 (CODE) – T27-14 (GND)	L-B – W-B	Ignition switch OFF → ON	Waveform 2
T27-6 (EFIO) – T27-14 (GND)	W – W-B	Ignition switch OFF → ON	Waveform 3
T27-7 (EFII) – T27-14 (GND)	Y – W-B	Ignition switch OFF → ON	Waveform 4
T27-3 (IND) – T27-14 (GND)	G-R – W-B	Immobiliser system unset → set	0 V → Switching 12 V and 0 V
T27-4 (CTY) – T27-14 (GND)	R-Y – W-B	Driver's door close → open	10 – 14 V → 0 V

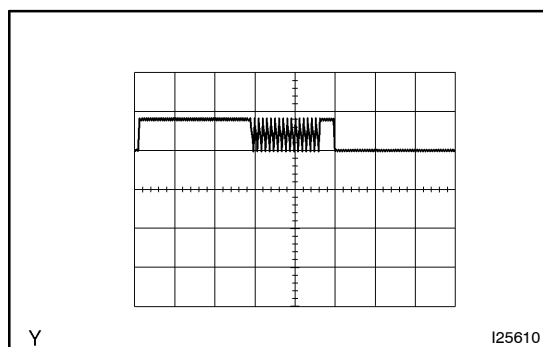


Waveform 1

Terminal	TXCT – GND
Tool setting	5 V/DIV, 20 ms/DIV
Vehicle condition	Ignition switch ON

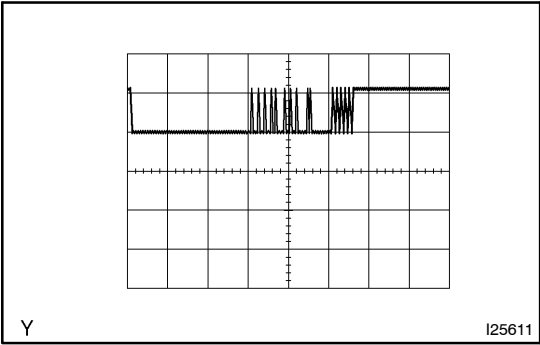


Waveform 2

Terminal	CODE – GND
Tool setting	5 V/DIV, 20 ms/DIV
Vehicle condition	Ignition switch ON

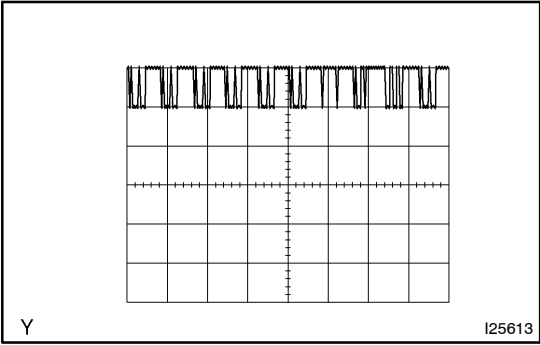

Waveform 3


Terminal	EFIO – GND
Tool setting	10 V/DIV, 50 ms/DIV
Vehicle condition	Ignition switch ON

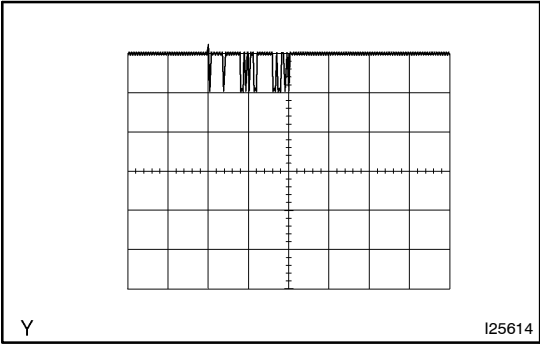


Waveform 4

Terminal	EFII – GND
Tool setting	10 V/DIV, 50 ms/DIV
Vehicle condition	Always

2. ECM

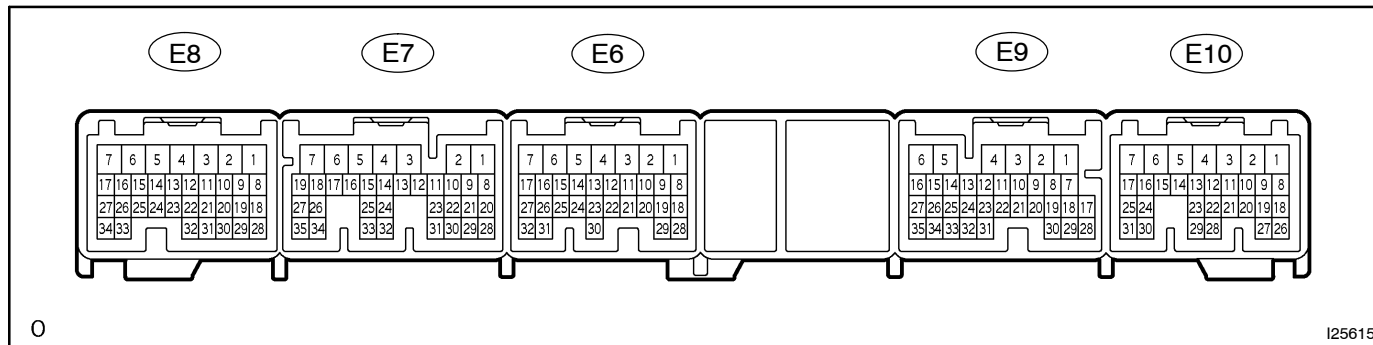


Symbols (Terminal No.)	Wiring Color	Condition	Standard
E10-3 (BATT) – E6-1 (E1)	B-R – BR	–	9 – 14 V
E10-1 (+B) – E6-1 (E1)	B-Y – BR	Ignition switch OFF → ON	9 – 14 V
E10-2 (+B2) – E6-1 (E1)	B-Y – BR	Ignition switch OFF → ON	9 – 14 V
E10-9 (IGSW) – E6-1 (E1)	B-R – BR	Ignition switch OFF → ON	9 – 14 V
E9-27 (IMI) – E6-1 (E1)	W – BR	Ignition switch OFF	Below 1 V
		Ignition switch ON (IG)	Waveform 1
E9-26 (IMO) – E6-1 (E1)	Y – BR	Ignition switch OFF	10 to 14 V
		Within 3 sec after starter ON and initial combustion Or within 3 sec after ignition switch ON when battery is reconnected	Waveform 2
E6-1 (E1) – Body ground	BR	–	Below 1 Ω

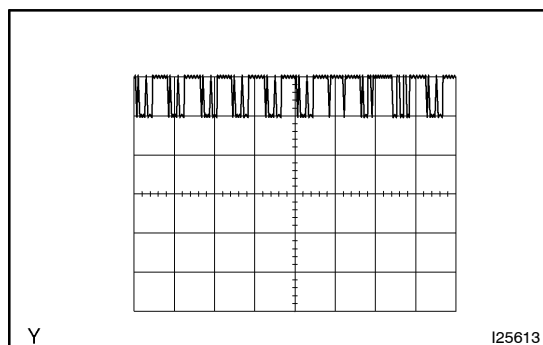

Waveform 1

Terminal	IMI – GND
Tool setting	10 V/DIV, 50 ms/DIV
Vehicle condition	Ignition switch ON

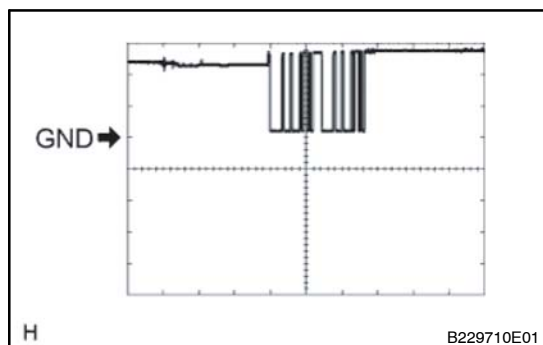

Waveform 2

Terminal	IMO – GND
Tool setting	5 V/DIV, 500 ms/DIV
Vehicle condition	Within 3 sec after starter ON and initial combustion Or within 3 sec after ignition switch ON when battery is reconnected