

## 15. Touch switch does not function. (Navigation screen only)

### INSPECTION PROCEDURE

- |   |                                                        |
|---|--------------------------------------------------------|
| 1 | Display check mode (Touch switch, Touch point screen). |
|---|--------------------------------------------------------|

NG

Replace the multi-display.

OK

- |   |                                                                            |
|---|----------------------------------------------------------------------------|
| 2 | Check "AVC-LAN communication circuit". (See page <a href="#">DI-1675</a> ) |
|---|----------------------------------------------------------------------------|

NG

Replace or repair AVC-LAN circuit.

OK

Replace the navigation ECU.