

16. Touch switch does not function. (A/C control screen only)

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Display check mode (Touch switch, Touch point screen). |
|---|--|

NG

Replace the multi-display.

OK

- | | |
|---|--|
| 2 | Check "AVC-LAN communication circuit". (See page DI-1675) |
|---|--|

NG

Replace or repair AVC-LAN circuit.

OK

- | | |
|---|--|
| 3 | Check for open and short in harness and connector between gateway ECU and multi-display. |
|---|--|

NG

Repair or replace wire harness and connector

OK

Check and replace A/C amplifier (Center ECU).