

CIRCUIT INSPECTION

1. Black screen (Nothing displayed)

INSPECTION PROCEDURE

1	Check the ECU-B1, ECU-IG1 and ACC fuse.
---	---

NG

Replace the fuse.

OK

2	Check multi-display power source circuit (see page DI-1659).
---	---

NG

Replace or repair wire harness or connector.

OK

Replace the multi-display.