

3. No navigation screen displayed when "MAP", "Menu", or "DEST" switch pressed. (Screen cannot be switched.)

INSPECTION PROCEDURE

1 Service check mode. (Check the navigation ECU)

NG

Troubleshoot for each diagnosis.

OK

Replace multi-display.

Ncon

2 Check the navigation ECU power source circuit (see page [DI-1656](#)).

NG

Replace or repair wire harness or connector.

OK

3 Check wire harness and connector between multi display and navigation ECU (See page [IN-36](#)).

NG

Repair or replace wire harness or connector.

OK

Check and replace multi display.