


Power Source Circuit (Multi-Display Assembly)

CIRCUIT DESCRIPTION

This circuit is the power source circuit to operate the multi-display assembly.


WIRING DIAGRAM

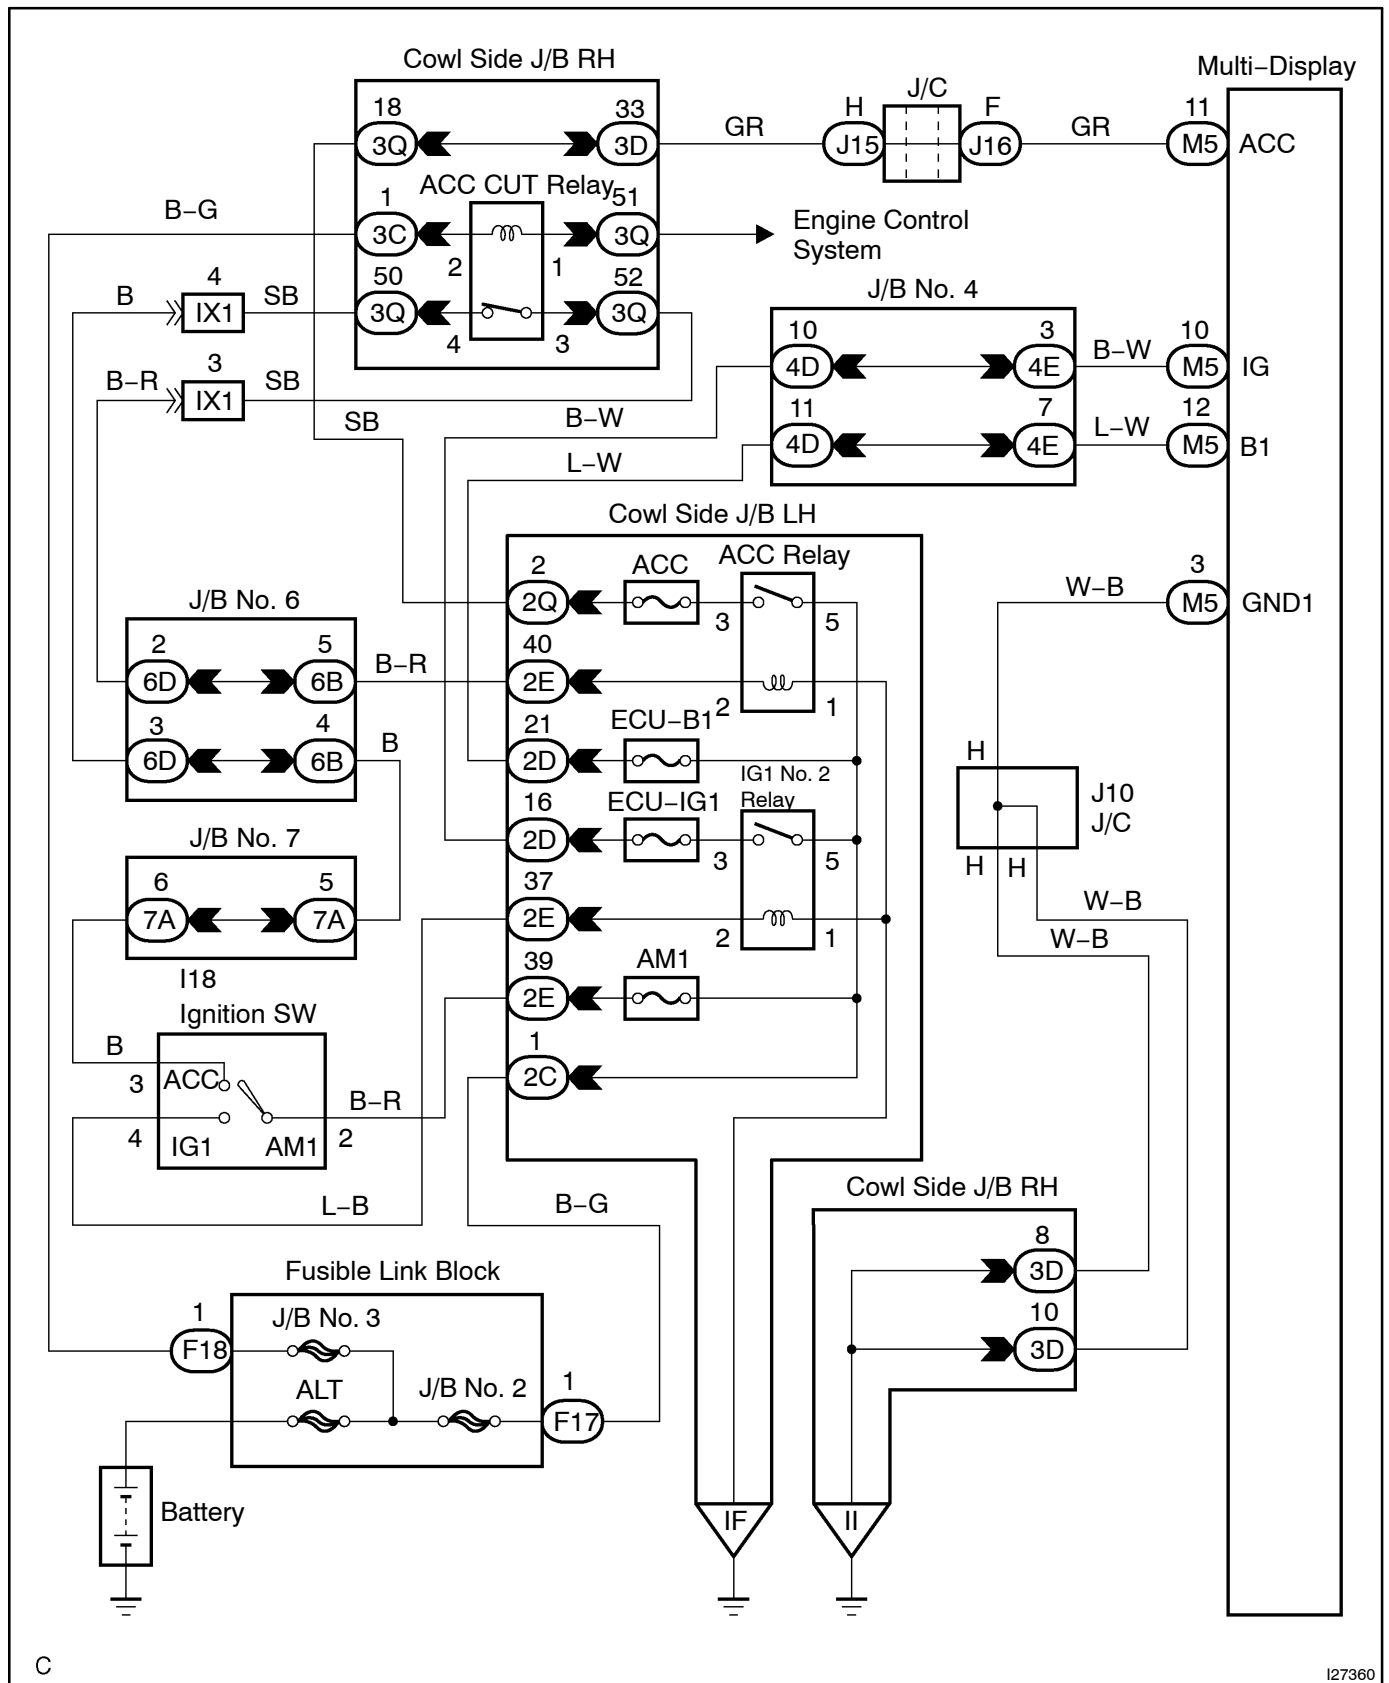

I27360

INSPECTION PROCEDURE

1	Check voltage between terminals B1, ACC, IG and GND of multi-display assembly.
---	---

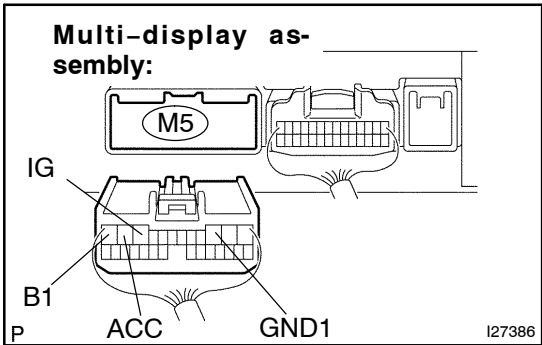

- Disconnect the connector from the multi-display assembly.
- Measure the voltage according to the value(s) in the table below.

Standard:


Tester connection	Condition	Specified condition
B1 - GND1	Always	10 to 14 V
ACC - GND1	Ignition SW ACC	10 to 14 V
IG - GND1	Ignition SW ON	10 to 14 V

OK

Proceed to next circuit inspection shown in problem symptoms table. (See page [DI-1581](#))

NG

2	Check continuity between terminal GND1 of multi-display assembly and body ground.
---	--

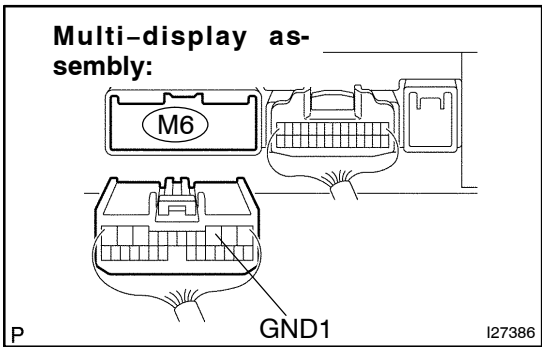

- Disconnect the connector from the multi-display assembly.
- Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified condition
GND1 - Body ground	Always	Below 1 Ω

OK

Repair or replace harness or connector between navigation ECU and fuse.

NG

Repair or replace harness or connector between navigation ECU and body ground.