

DTC	B1218	Body ECU No. 2 communication stop
------------	--------------	--

CIRCUIT DESCRIPTION

This DTC is output when communication stops between the Body ECU (Sub) and the Body ECU (Main).

DTC No.	DTC Detecting Condition	Trouble Area
B1218	No signal from body ECU (Sub) for more than 10 seconds.	• Body ECU (Sub) • Wire harness

WIRING DIAGRAM

See page [DI-1538](#).

INSPECTION PROCEDURE

1	Check body ECU (Sub).
----------	------------------------------

CHECK:

Check that the rear wiper system operates normally.

HINT:

With this inspection, whether or not the body ECU (Sub) CPU functions normally can be diagnosed.

NG

Replace body ECU (Sub) (See page [IN-36](#)).

OK

2	Check wire harness. (See page IN-36)
---	---


PREPARATION:

Pull out the ECU connectors below.

Wire harness side connector of ECU	Terminal
Body ECU (Sub) - Body ECU (Main)	MPX+ (Z71-2) - MPX2 (B7-23)

CHECK:

Check continuity of the wire harness between the connectors.

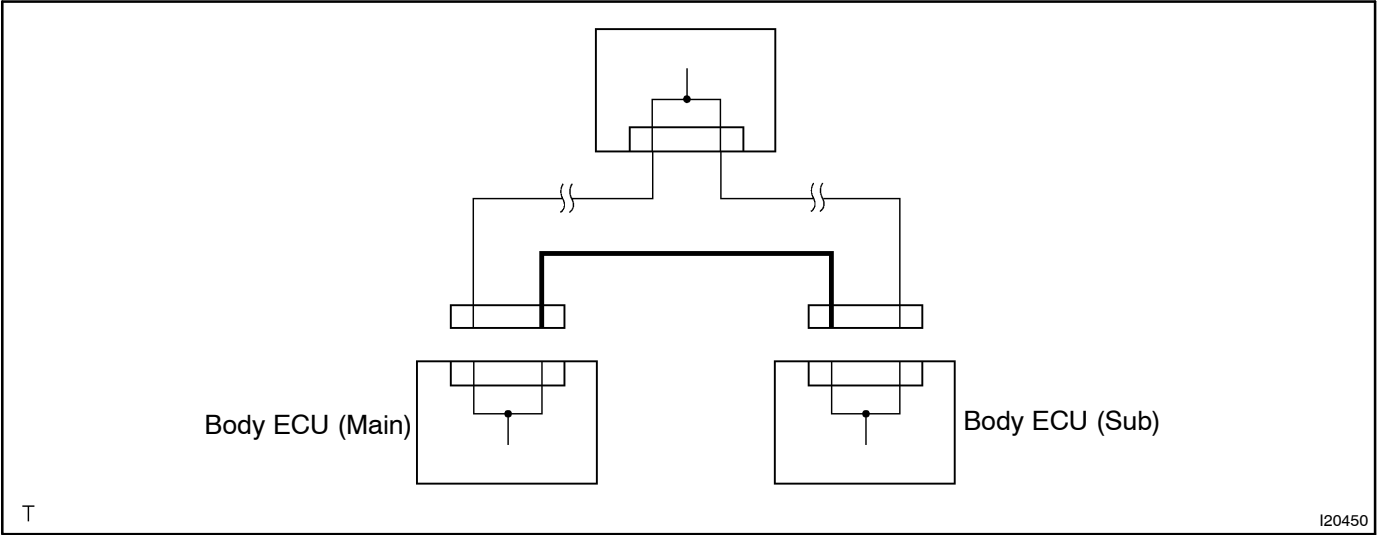

OK:

There is a continuity between the connectors.

HINT:

If there is OPEN in any wire harness, please repair it.

NG

Repair or replace wire harness.

OK

Replace body ECU (Sub) (See page [IN-36](#)).