

DIAGNOSTIC TROUBLE CODE CHART

If a malfunction code is displayed during DTC check, check the circuit corresponding to the code in the table below (Proceed to the page given for the circuit).

DTC No. (See Page)	Detection Item	Trouble Area
B1211 (DI-1534)	Driver's door ECU communication stop	• Wire harness • Power window master switch (Driver door ECU)
B1213 (DI-1536)	Tilt and telescopic ECU communication stop	• Wire harness • Tilt and telescopic ECU
B1214 B1215 (DI-1538)	Door system communication bus malfunction (+B short)	• Wire harness • Power window master switch • Power window switch (front RH, rear RH and rear LH)
	Door system communication bus malfunction (GND short)	
B1218 (DI-1542)	Body ECU No. 2 communication stop	• Wire harness • Body ECU (Sub)
B1221 (DI-1489)	Power window switch circuit on driver's door	• Power window master switch • Wire harness
B1222 (DI-1490)	Door lock switch circuit on driver's door	• Power window master switch • Front door lock assembly LH • Wire harness
B1231 (DI-1491)	Driver's side jam protection sensor limit switch malfunctions	Power window regulator motor assembly LH open in limit switch system
B1232 (DI-1494)	Driver's side jam protection sensor malfunctions	Power window regulator motor assembly LH open or short in pulse sensor system
B1242 (DI-1161)	Wireless door lock tuner circuit malfunction	• Wire harness • Wireless door lock tuner (door control receiver) • Body ECU (Main)
B1244 (DI-1421)	Light sensor circuit malfunction	• Automatic light control sensor • Wire harness
B1245 (DI-1544)	Auto wiper ECU communication stop	• Wiper control ECU • Wire harness
B1269 (DI-1546)	Theft deterrent ECU communication stop	• Theft deterrent ECU • Wire harness
B1272 (DI-1548)	Power seat ECU communication stop	• Power seat control ECU • Wire harness
B1273 (DI-1550)	Sliding roof ECU communication stop	• Sliding roof ECU • Wire harness
B1275 (DI-1552)	Accessory bus communication stop	• Bus buffer ECU • Wire harness
B1276 (DI-1554)	Mirror ECU communication stop	• Mirror control ECU • Wire harness
B1279 (DI-1556)	Rain sensor communication stop	• Rain sensor • Wire harness
B1281 (DI-1558)	Airbag ECU communication stop	• Airbag sensor assembly • Wire harness

HINT:

- *: Optional setting
- When DTC of "+B or GND short malfunction of communication bus (such as B1214, B1215 etc.)" and "communication stop (such as B1211, B1212 etc.)" is detected simultaneously, please repair DTC of "+B or GND short malfunction of communication bus first.