

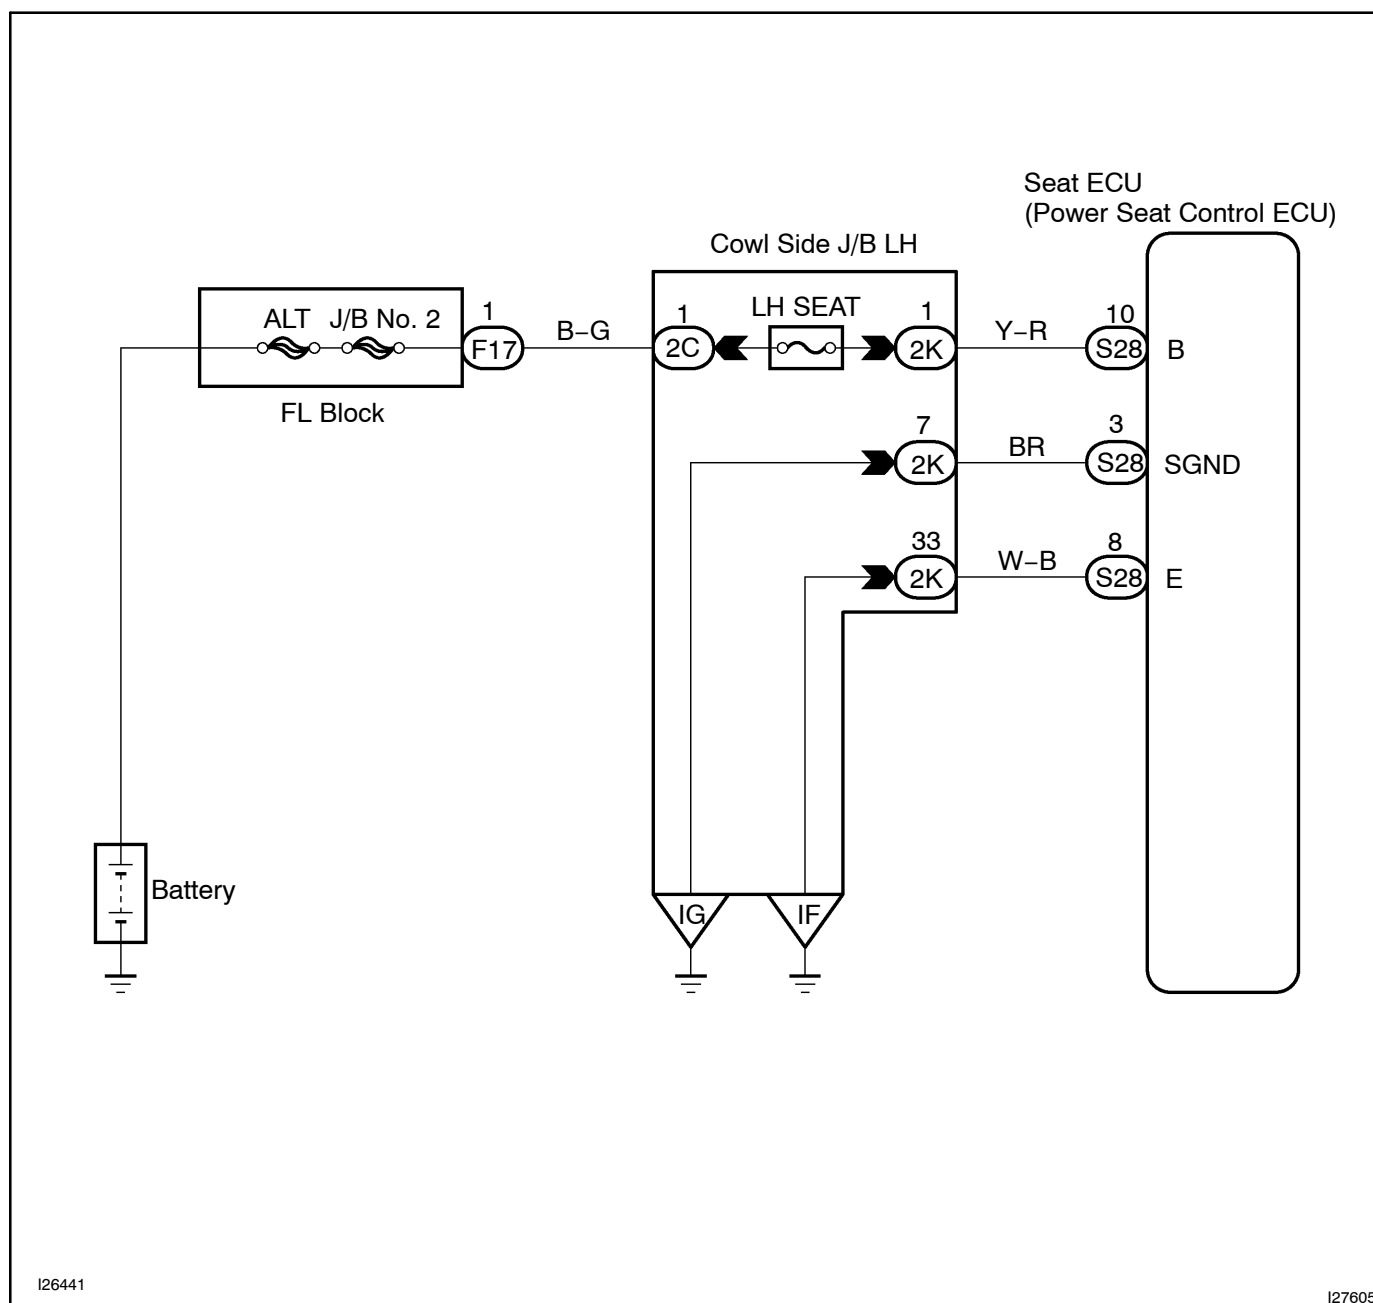
CIRCUIT INSPECTION

+B Power Source Circuit

CIRCUIT DESCRIPTION

This is the power source for motors such as the slide motor, reclining motor, front vertical motor and lifter motor.

WIRING DIAGRAM



INSPECTION PROCEDURE

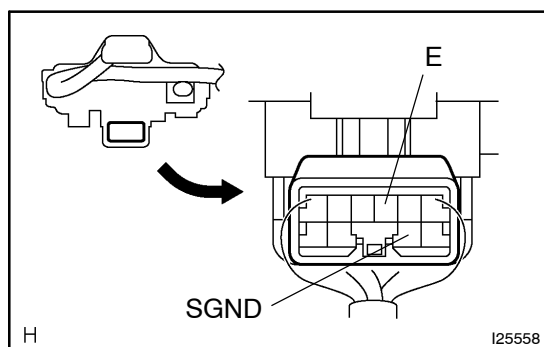
1 Check LH SEAT fuse.

NG

Check for short in all the harness and components connected to the LH SEAT fuse, and repair them .

OK

2 Check continuity between terminal E, SGND of Power Seat Control ECU connector and body ground.

**CHECK:**

Measure resistance between terminal E, SGND of Power Seat Control ECU connector and body ground with connector being connected.

OK:

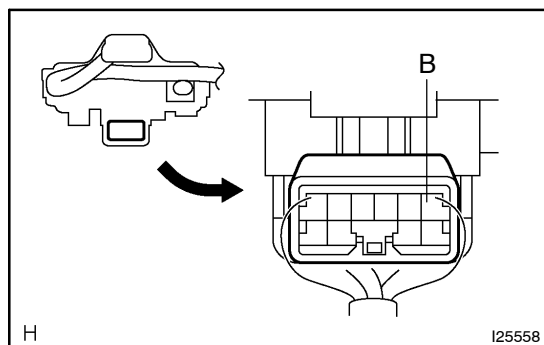
Resistance: Continuity (below 1 Ω)

NG

Repair or replace harness or connector.

OK

3 Check voltage between terminal B of Power Seat Control ECU connector and body ground.

**CHECK:**

Measure voltage between terminal B of Power Seat Control ECU connector and body ground with connector being connected.

OK:

Voltage: 10 – 14 V

OK

Proceed to next circuit inspection shown on problem symptom table (See page [DI-1130](#)).

NG

Repair or replace harness or connector.