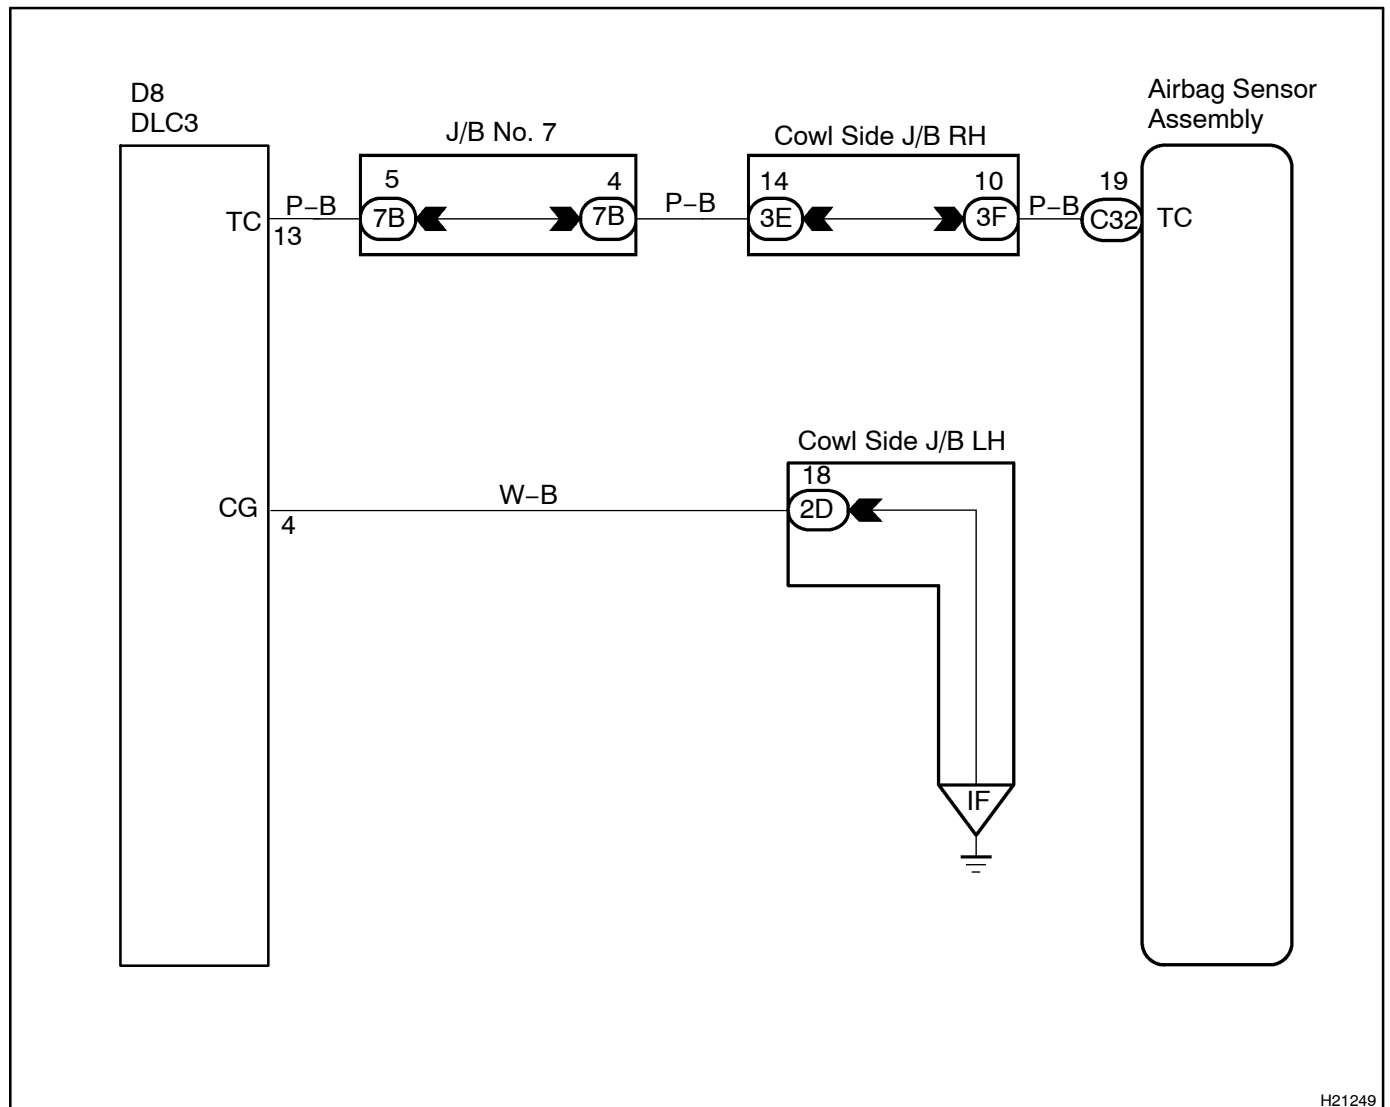


TC Terminal Circuit

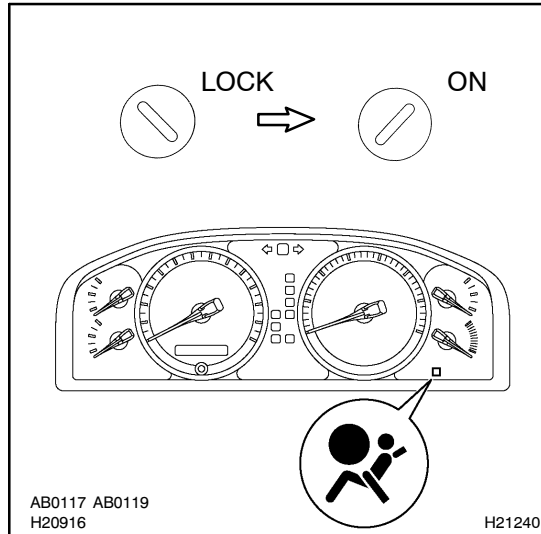
CIRCUIT DESCRIPTION

DTC output mode is set by connecting terminal TC and CG of the DLC3 the airbag sensor assembly. The DTCs are displayed by blinking the SRS warning light.

WIRING DIAGRAM



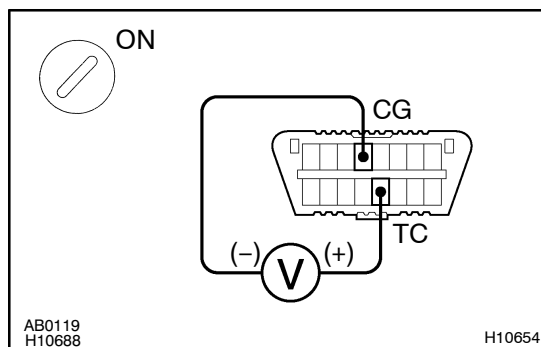
H21249

INSPECTION PROCEDURE**If the DTC is not displayed, do the following troubleshooting.****1 Does SRS warning light light up for approx. 6 seconds?****CHECK:**

Check operation of the SRS warning light after ignition switch is turned from LOCK position to ON position.

NO

Check SRS warning light system.
(See page [DI-1114](#))

YES**2 Check voltage between terminal TC and CG of DLC3.****PREPARATION:**

Turn the ignition switch to ON.

CHECK:

Measure the voltage between terminal TC and CG of DLC3.

OK:

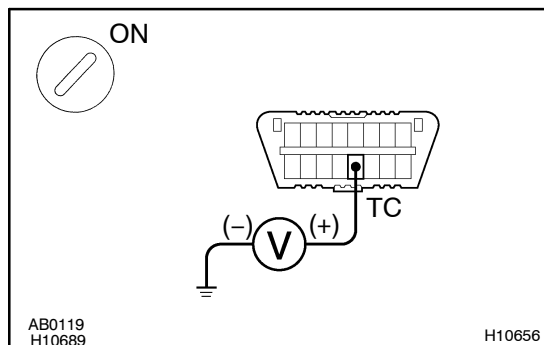
Voltage: 4 - 14 V

OK

Go to step 4.

NG

3 Check voltage between terminal TC of DLC3 and body ground.

**CHECK:**

Measure the voltage between the body ground and terminal TC of DLC3.

OK:

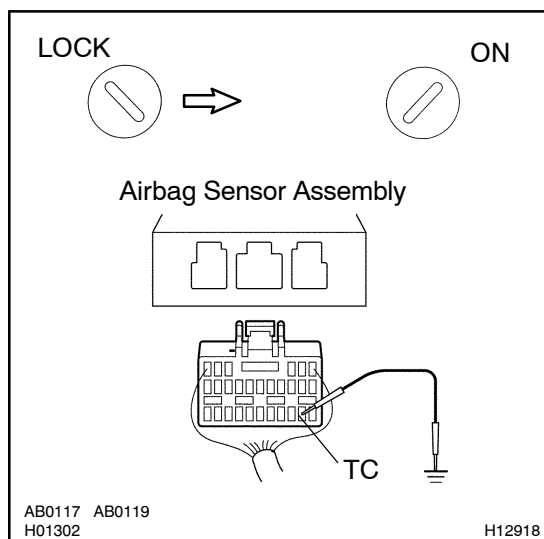
Voltage: 4 - 14 V

OK

Check harness between terminal CG of DLC3 and body ground.

NG

4 Check airbag sensor assembly.

**PREPARATION:**

- Turn the ignition switch to LOCK.
- Disconnect the negative (-) terminal cable from the battery, and wait at least for 90 seconds.
- Disconnect the airbag sensor assembly connector.
- Insert the service wire into terminal TC from back side as shown in the illustration.
- Connect the airbag sensor assembly connector with service wire.
- Connect the negative (-) terminal cable to the battery.
- Turn the ignition switch to ON and wait at least for 20 seconds.
- Connect the service wire of terminal TC to body ground.

CHECK:

Check operation of SRS warning light.

OK:

SRS warning light comes on.

NOTICE:

Pay due attention to the terminal connecting position to avoid a malfunction.

OK

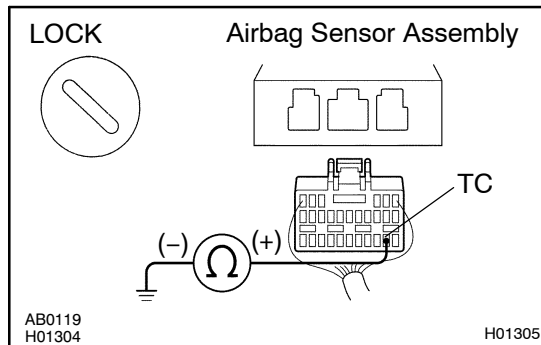
Check harness between the airbag sensor assembly and DLC3.

NG

Replace airbag sensor assembly.

If the DTC is displayed without a DTC check procedure, perform the following troubleshooting.

- | | |
|----------|--|
| 1 | Check resistance between terminal TC of airbag sensor assembly and body ground. |
|----------|--|



PREPARATION:

- (a) Turn the ignition switch to LOCK.
- (b) Disconnect negative (-) terminal cable from the battery, and wait at least for 90 seconds.
- (c) Disconnect the airbag sensor assembly connector.

CHECK:

Check resistance between terminal TC of the airbag sensor assembly connector and body ground.

OK:

Resistance: 1 MΩ or Higher

NG

Replace harness and connector.

OK

Replace airbag sensor assembly.