

PROBLEM SYMPTOMS TABLE

Proceed with troubleshooting of each circuit in the table below.

Symptom	Suspected Area	See page
• With the ignition switch in ON position, the SRS warning light sometimes lights up after approx. 6 seconds have elapsed.	• SRS warning light circuit	DI-1114
• SRS warning light is always lit up even when ignition switch is in the LOCK position.		
• With the ignition switch in ON position, the SRS warning light does not light up.		
• DTC is not displayed.	• TC terminal circuit	DI-1119
• SRS warning light is always lit up at the time of DTC check procedure.		
• DTC is displayed without TC and CG terminal connection.		