


# TERMINALS OF ECU

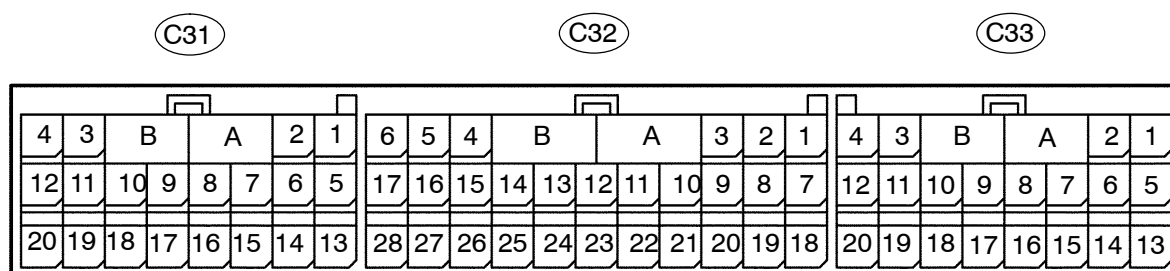

P

H16828

| No.      | Symbol | Terminal Name                            |
|----------|--------|------------------------------------------|
| A        | –      | Electrical Connector Check Mechanism     |
| B        | –      | Electrical Connector Check Mechanism     |
| C32 – 3  | LA     | SRS Warning Light                        |
| C32 – 5  | IG2    | Power Source                             |
| C32 – 7  | P2–    | Squib (Passenger, 2nd step)              |
| C32 – 8  | P2+    | Squib (Passenger, 2nd step)              |
| C32 – 9  | +SR    | Front Airbag Sensor RH                   |
| C32 – 10 | P+     | Squib (Passenger)                        |
| C32 – 11 | P–     | Squib (Passenger)                        |
| C32 – 12 | SIL    | Diagnosis                                |
| C32 – 13 | D–     | Squib (Driver)                           |
| C32 – 14 | D+     | Squib (Driver)                           |
| C32 – 15 | +SL    | Front Airbag Sensor LH                   |
| C32 – 16 | D2+    | Squib (Driver, 2nd step)                 |
| C32 – 17 | D2–    | Squib (Driver, 2nd step)                 |
| C32 – 19 | TC     | Diagnosis                                |
| C32 – 20 | –SR    | Front Airbag Sensor RH                   |
| C32 – 21 | RMSW   | RSCA Off Switch                          |
| C32 – 22 | MPX2   | Instrument Panel Integration ECU         |
| C32 – 23 | GSW2   | Diagnosis                                |
| C32 – 25 | RMIL   | RSCA Off Switch Indicator                |
| C32 – 26 | –SL    | Front Airbag Sensor LH                   |
| C32 – 27 | E1     | Ground                                   |
| C32 – 28 | E2     | Ground                                   |
| C31 – 1  | CSL–   | Curtain Shield Airbag Sensor Assembly LH |

| No.      | Symbol | Terminal Name                                     |
|----------|--------|---------------------------------------------------|
| C31 – 3  | LSP–   | Seat Position Sensor Assembly                     |
| C31 – 4  | LSP+   | Seat Position Sensor Assembly                     |
| C31 – 7  | PL–    | Squib (Seat Belt Pretensioner, LH)                |
| C31 – 8  | PL+    | Squib (Seat Belt Pretensioner, LH)                |
| C31 – 9  | ICL+   | Squib (Curtain Shield, LH)                        |
| C31 – 10 | ICL–   | Squib (Curtain Shield, LH)                        |
| C31 – 11 | SFL–   | Squib (Side, LH)                                  |
| C31 – 12 | SFL+   | Squib (Side, LH)                                  |
| C31 – 13 | ESCL   | Curtain Shield Airbag Sensor Assembly LH          |
| C31 – 14 | VUCL   | Curtain Shield Airbag Sensor Assembly LH          |
| C31 – 15 | CSL+   | Curtain Shield Airbag Sensor Assembly LH          |
| C31 – 16 | VUPL   | Side and Curtain Shield Airbag Sensor Assembly LH |
| C31 – 17 | SSL+   | Side and Curtain Shield Airbag Sensor Assembly LH |
| C31 – 18 | ESL    | Side and Curtain Shield Airbag Sensor Assembly LH |
| C31 – 19 | LBE+   | Seat Belt Buckle Switch LH                        |
| C31 – 20 | SSL–   | Side and Curtain Shield Airbag Sensor Assembly LH |
| C33 – 4  | CSR–   | Curtain Shield Airbag Sensor Assembly RH          |
| C33 – 5  | SFR+   | Squib (Side, RH)                                  |
| C33 – 6  | SFR–   | Squib (Side, RH)                                  |
| C33 – 7  | ICR–   | Squib (Curtain Shield, RH)                        |
| C33 – 8  | ICR+   | Squib (Curtain Shield, RH)                        |
| C33 – 9  | PR+    | Squib (Seat Belt Pretensioner, RH)                |
| C33 – 10 | PR–    | Squib (Seat Belt Pretensioner, RH)                |
| C33 – 13 | SSR–   | Side and Curtain Shield Airbag Sensor Assembly RH |
| C33 – 15 | ESR    | Side and Curtain Shield Airbag Sensor Assembly RH |
| C33 – 16 | SSR+   | Side and Curtain Shield Airbag Sensor Assembly RH |
| C33 – 17 | VUPR   | Side and Curtain Shield Airbag Sensor Assembly RH |
| C33 – 18 | CSR+   | Curtain Shield Airbag Sensor Assembly RH          |
| C33 – 19 | VUCR   | Curtain Shield Airbag Sensor Assembly RH          |
| C33 – 20 | ESCR   | Curtain Shield Airbag Sensor Assembly RH          |