


Front Washer Switch Circuit

CIRCUIT DESCRIPTION

This circuit sends a front washer switch ON or OFF signal to ECU.

WIRING DIAGRAM

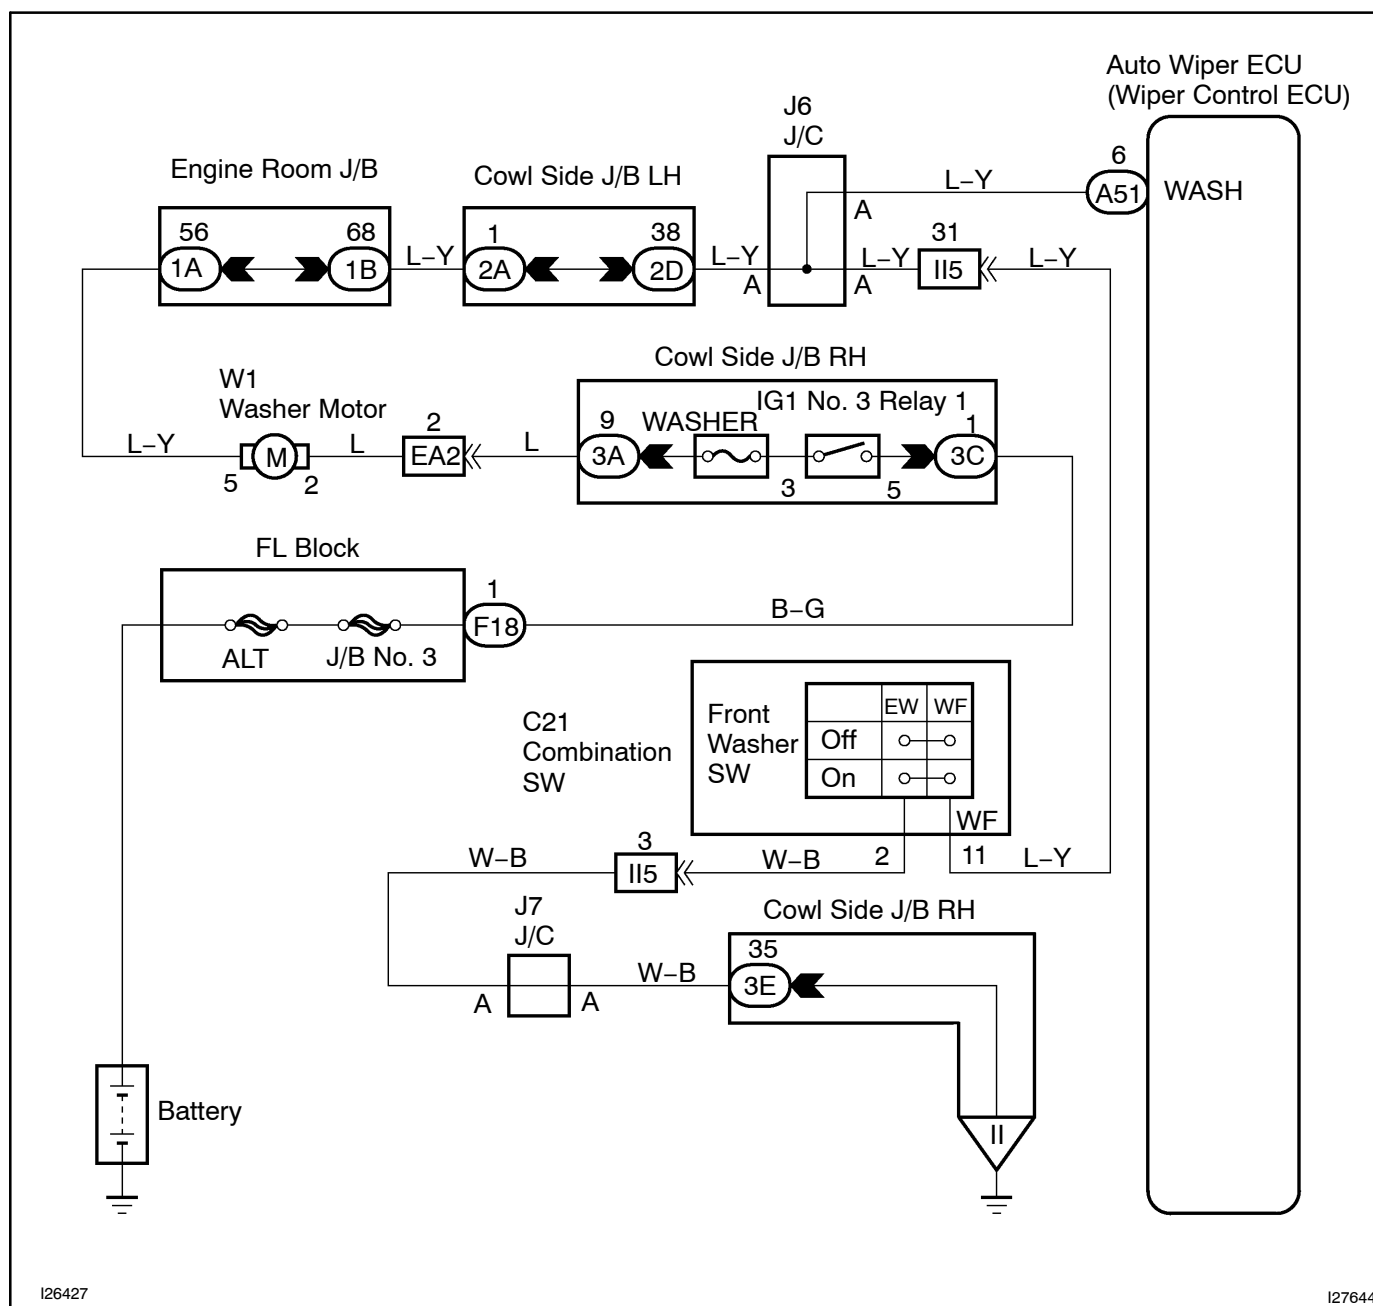

INSPECTION PROCEDURE

1	Check WASHER fuse.
---	--------------------

CHECK:

Check continuity of WASHER fuse.

OK:

Continuity

NG

Replace WASHER fuse.

OK

2	Check wire harness between combination switch and wiper control ECU (See page IN-36).
---	--

NG

Repair or Replace wire harness.

OK

Proceed to next circuit inspection shown on problem symptom table. (See page [DI-1358](#))