


Front Wiper Position Circuit

CIRCUIT DESCRIPTION

This signal is taken into Body ECU (Sub). If this signal cannot be received, Body ECU (Main), (Sub) does not perform reverse linked function control.

WIRING DIAGRAM

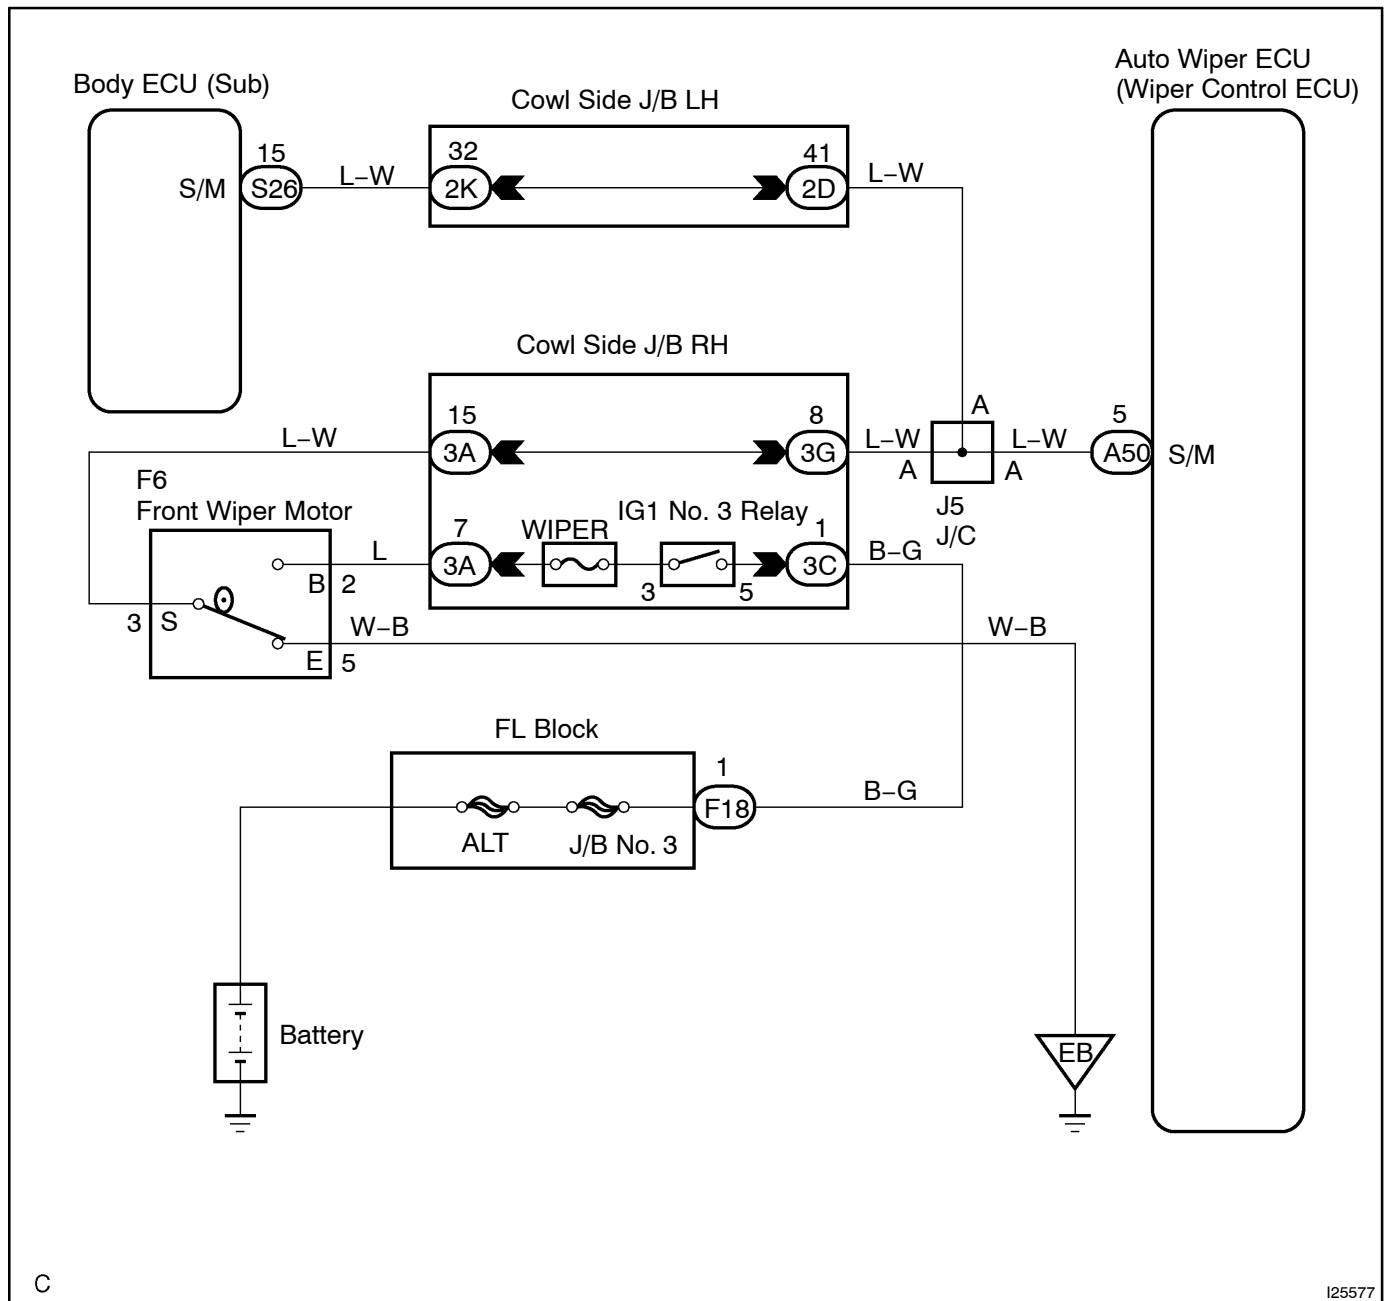

INSPECTION PROCEDURE

- | | |
|----------|---|
| 1 | Check wire harness between wiper control ECU and front wiper motor
(See page IN-36). |
|----------|---|

NG

Repair or replace wire harness.

OK

- | | |
|----------|--|
| 2 | Check wire harness between wiper control ECU and body ECU (Sub)
(See page IN-36). |
|----------|--|

NG

Repair or replace wire harness.

OK

**Proceed to next circuit inspection shown on
problem symptom table (See page [DI-1358](#)).**