

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
Auto wiper system does not operate (All functions).	1. Front wiper switch 2. Front wiper switch circuit 3. Wiper control ECU power source circuit 4. IG switch circuit 5. Front wiper motor circuit 6. Front wiper position circuit 7. Front wiper motor 8. Wiper control ECU	BE-69 DI-1376 DI-1364 DI-1366 DI-1378 DI-1368 BE-69 IN-36
Raindrop Sensing Function does not operate (When the position is in "Auto", the system becomes vehicle speed-sensing adjustable interval INT function).	1. Rain sensor circuit 2. Rain sensor 3. Wiper control ECU	DI-1362 IN-36 IN-36
Vehicle Speed Switching Function Function does not operate.	1. Neutral signal circuit 2. Stop light switch circuit 3. Stop light switch 4. Wiper control ECU	DI-1370 DI-1372 BE-63 IN-36
Washer-Linked Wiper with Drip-Preventive Function does not operate.	1. Front wiper switch (front washer switch) 2. Front washer switch circuit 3. Wiper control ECU	BE-69 DI-1374 IN-36