

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
Sliding roof control system does not operate.	1. Power Source Circuit 2. IG Switch Circuit 3. Sliding Roof Control Switch Circuit 4. Sliding Roof Control Gear Assembly with ECU	DI-1389 DI-1392 DI-1394 IN-36
Sliding roof operates abnormally or stops half way.	1. Pulse Plate (Sliding Roof Limit Switch) Circuit	DI-1396
Jam protection system does not operate.	1. Power Source Circuit 2. Sliding Roof Control Gear Assembly with ECU	DI-1389 IN-36