

PROBLEM SYMPTOMS TABLE

Proceed to the reference page shown in the matrix chart below for each malfunction symptom and trouble-shoot for each circuit.

HINT:

Troubleshooting of the theft deterrent system is based on the premise that the door lock control system is operating normally. Accordingly, before troubleshooting the theft deterrent system, first make certain that the door lock control system is operating normally.

Symptom	Suspected Area	See page
Theft deterrent system is not set.	1. Security indicator circuit 2. Key unlock warning switch circuit 3. Door courtesy switch circuit 4. Door unlock detection switch circuit 5. Engine hood courtesy switch circuit 6. Power source circuit 7. Theft deterrent ECU	DI-1183 DI-1190 DI-1431 DI-1502 DI-1188 DI-1180 IN-36
Security indicator does not come on or blink.	1. Security indicator circuit 2. Theft deterrent ECU	DI-1183 IN-36
Theft deterrent system cannot be unset even if ignition switch is ON.	1. Key unlock warning switch circuit 2. Power source circuit 3. Theft deterrent ECU	DI-1190 DI-1180 IN-36
During warning condition, horn does not operate.	1. Horn circuit 2. Theft deterrent ECU	BE-16 IN-36