


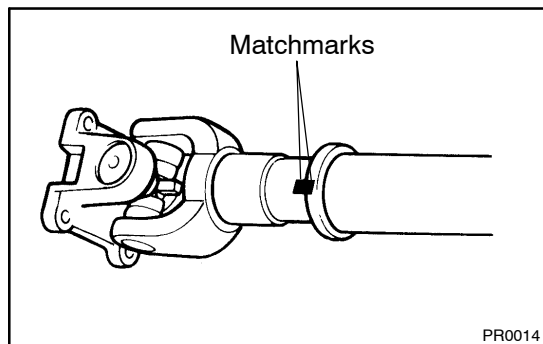


## REPLACEMENT

### NOTICE:

**Be careful not to grip the propeller shaft tube too tightly in a vise as this will cause deformation.**

### REPLACE DUST COVER


- (a) Remove the sleeve yoke from the propeller shaft.
  - (1) Place matchmarks on the sleeve yoke and shaft.
  - (2) Pull out the sleeve yoke from the shaft.

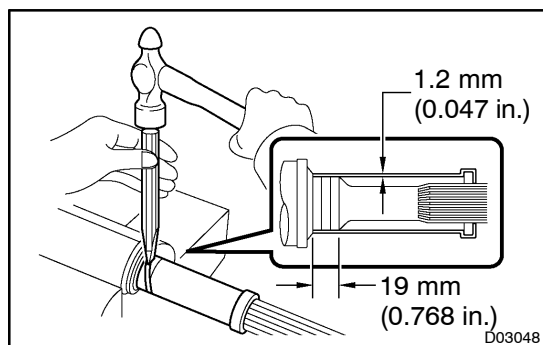

- (b) Remove the dust cover.  
Cut the dust cover spirally at the pressing-in part with a saw and pry it off with a chisel.

### NOTICE:

**Do not damage the propeller shaft. If damage, replace the shaft with a new one.**

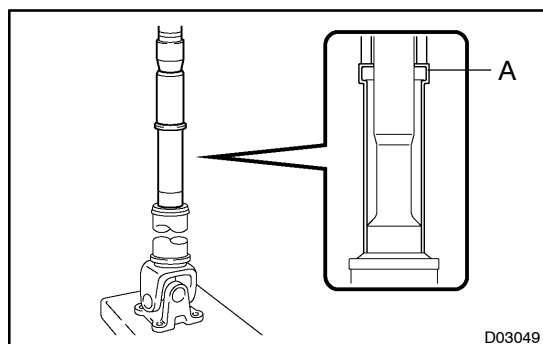

- (c) Install a new dust cover.  
Using SST and press, press in a new dust cover.  
SST 09636-20010

### NOTICE:

**Place the universal joint straight when pressing in the dust cover. Apply MP grease to the "A" part.**

- (d) Insert the sleeve yoke into the propeller shaft.
  - (1) Apply MP grease to the propeller shaft spline and sleeve yoke sliding surface.
  - (2) Align the matchmarks on the sleeve yoke propeller shaft.
  - (3) Install the propeller shaft into the sleeve yoke.