


## INSTALLATION

### NOTICE:

- **Never use SRS parts from another vehicle. When replacing parts, replace them with new ones.**
- **Never reuse the curtain shield airbag sensor assembly involved in a collision when the airbag has deployed.**
- **Never repair a sensor in order to reuse it.**

### HINT:

For step 2 to 8, refer to page [BO-131](#).

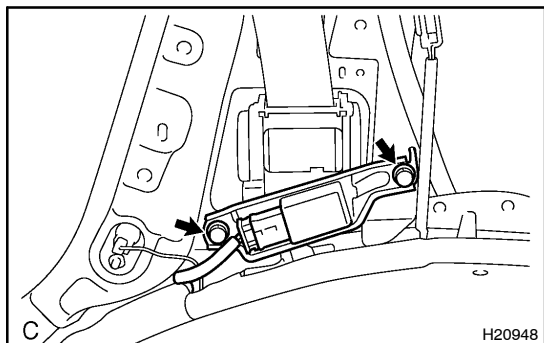

### 1. INSTALL CURTAIN SHIELD AIRBAG SENSOR ASSEMBLY

- (a) Install the curtain shield airbag sensor assembly with the 2 bolts.

**Torque: 17.5 N·m (178 kgf·cm, 13 ft·lbf)**

- (b) Connect the connector.

### NOTICE:

- **Connection of the connector is done after the sensor assembly has been installed.**
- **Make sure that the sensor assembly is installed with the specified torque.**
- **If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assembly with a new one.**
- **When installing the sensor assembly, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.**
- **After installation, shake the sensor assembly to check that there is no looseness.**

### 2. INSTALL QUARTER TRIM PANEL

### 3. INSTALL STRIKER PLATES

### 4. INSTALL REAR NO. 2 SEAT

### 5. INSTALL REAR MAT SET PLATE

### 6. INSTALL REAR SEAT BELT ANCHOR

### 7. INSTALL REAR DOOR OPENING TRIM

### 8. INSTALL REAR DOOR SCUFF PLATE

### 9. INSPECT SRS WARNING LIGHT (See page [DI-882](#))