

INSPECTION

1. **Vehicle not involved in collision:**

INSPECT SUPPLEMENTAL RESTRAINT SYSTEM

Do a diagnostic system check (See page [DI-882](#)).

2. **Vehicle involved in a collision and airbag is not deployed:**

INSPECT SUPPLEMENTAL RESTRAINT SYSTEM

Do a diagnostic system check (See page [DI-882](#)).

3. **Vehicle involved in a collision and airbag is deployed:**

INSPECT SUPPLEMENTAL RESTRAINT SYSTEM

Replace the seat position sensor assembly (See page [RS-88](#)).