

INSTALLATION

Installation is in the reverse order of removal (See page [SA-148](#)).

HINT:

After installation, fill the AHC pump & motor reservoir with suspension fluid AHC, bleed AHC system (See page [SA-130](#)) and check for leaks (See page [SA-131](#)).