


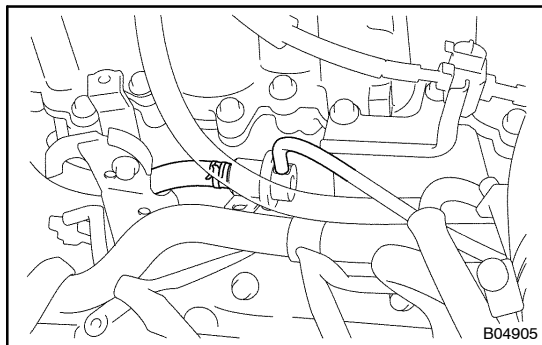

REMOVAL


1. REMOVE V-BANK COVER

2. REMOVE FUEL PRESSURE REGULATOR

- (a) Disconnect these hoses from the pressure regulator:
- Vacuum sensing hose from intake air resonator
 - Fuel return hose

CAUTION:

Put a shop rag under the pressure regulator.

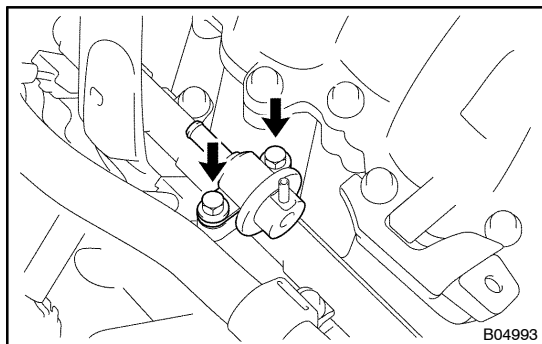

- (b) Remove the 2 bolts, and pull out the pressure regulator.
- (c) Remove the O-ring from the pressure regulator.