



STARTER COMPONENTS


ST08Y-05

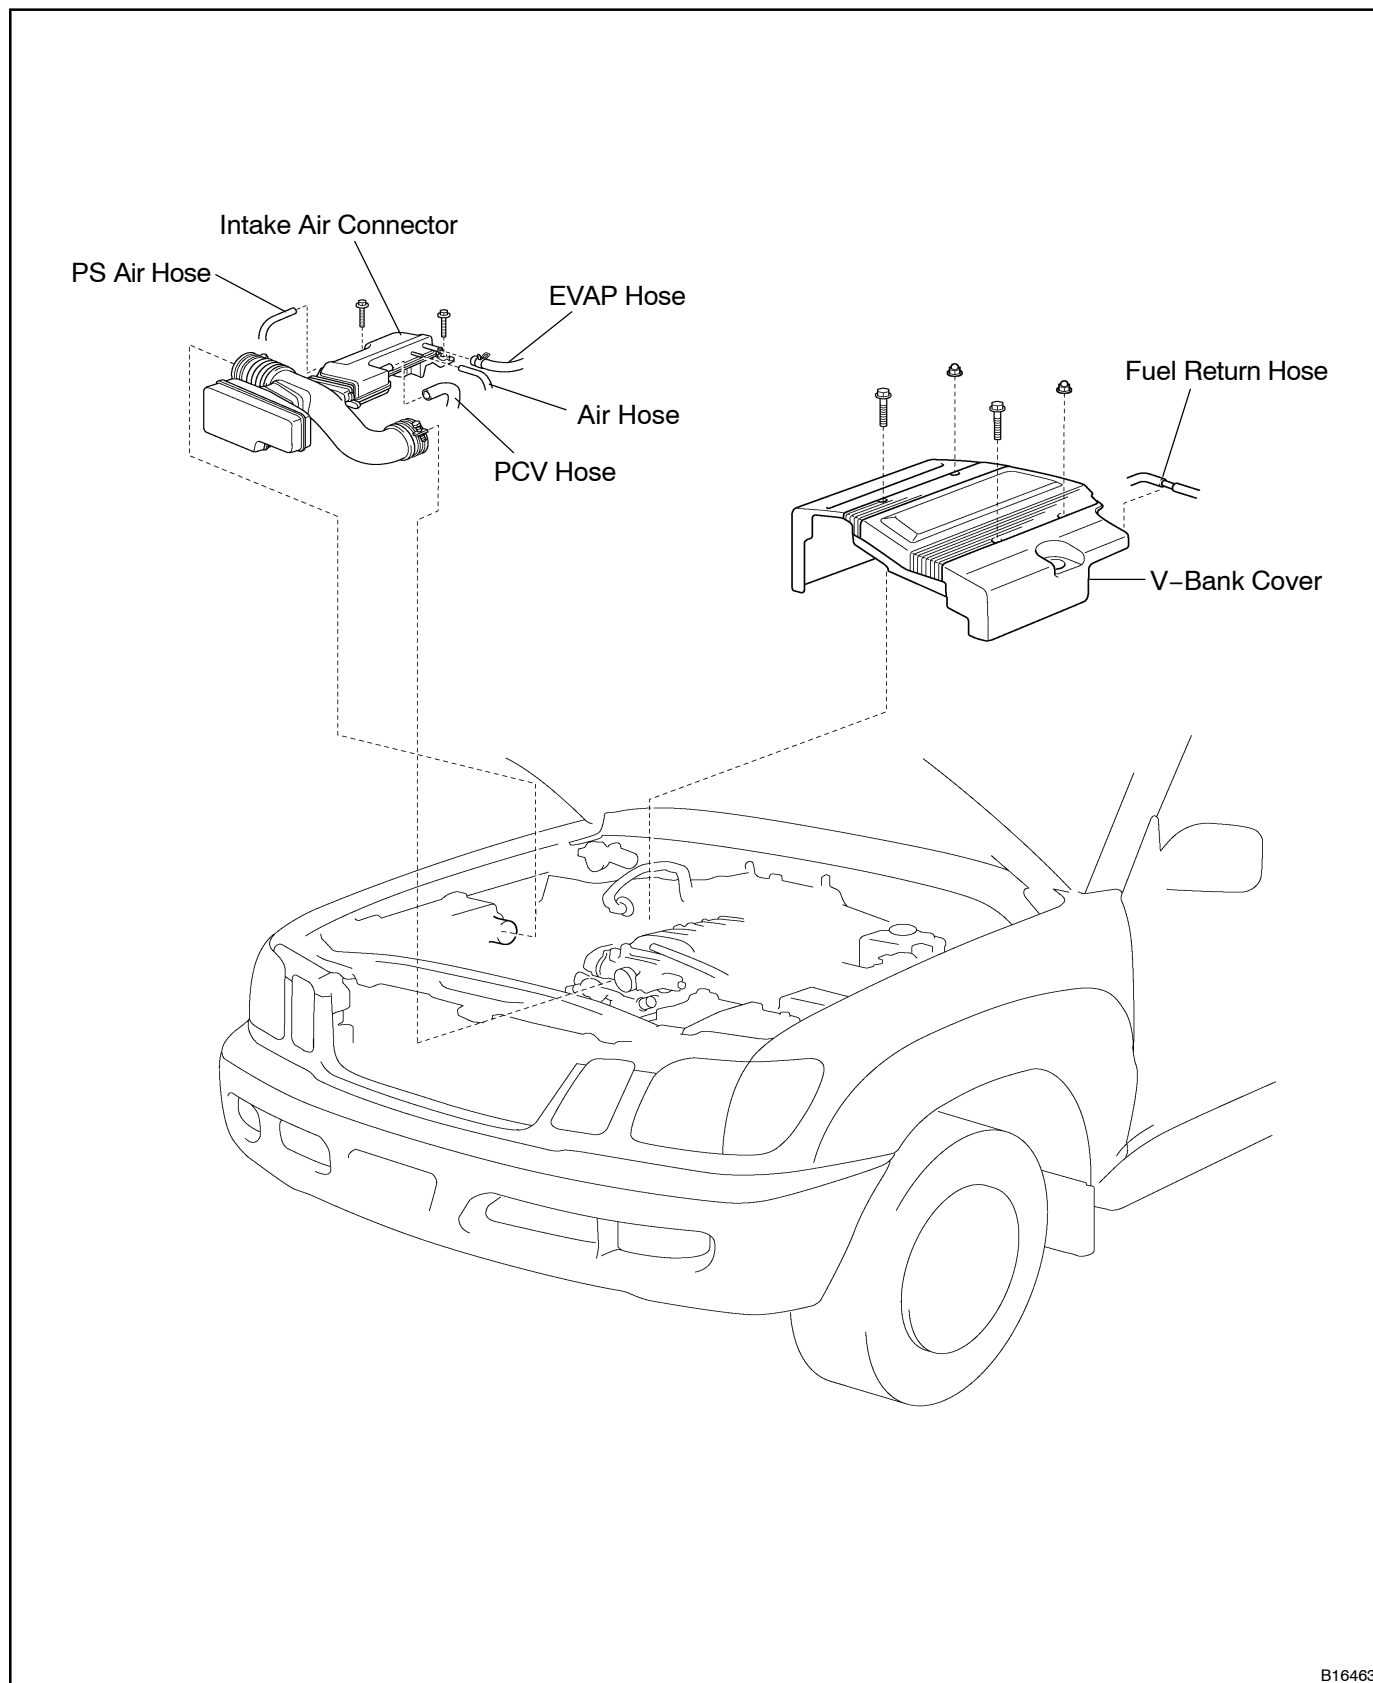


B16463

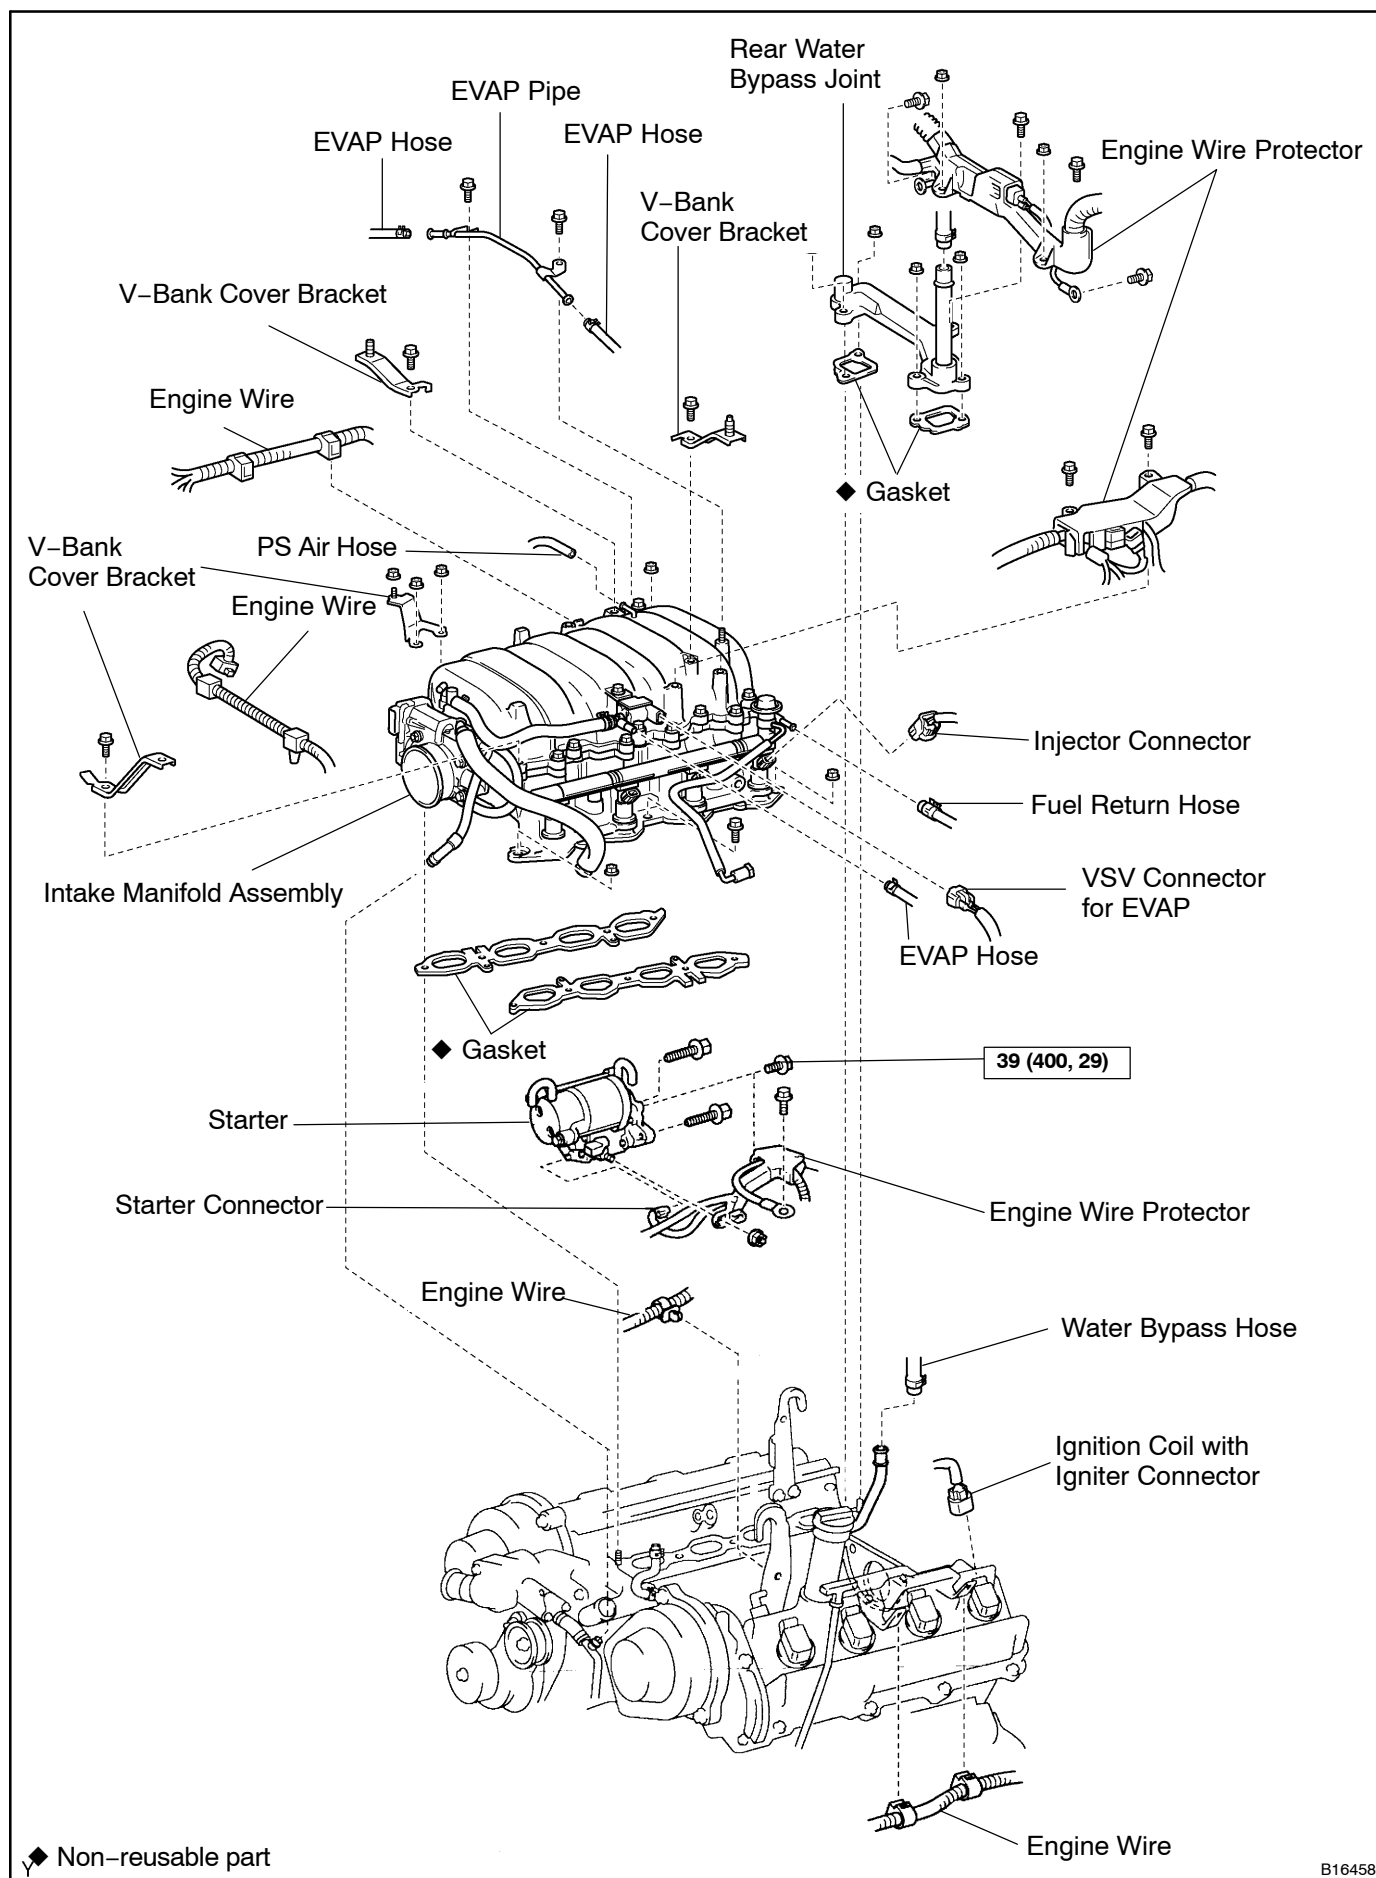

B16458

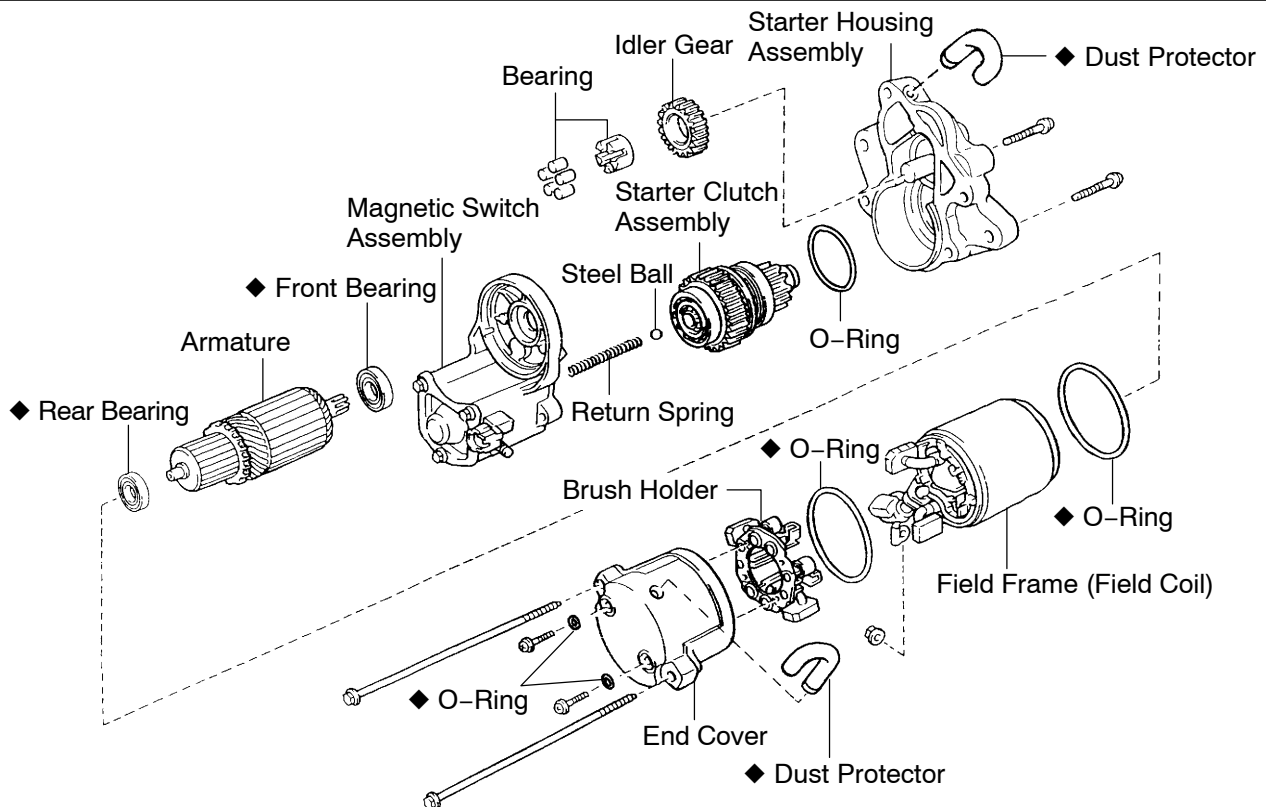

Magnetic Switch Assembly

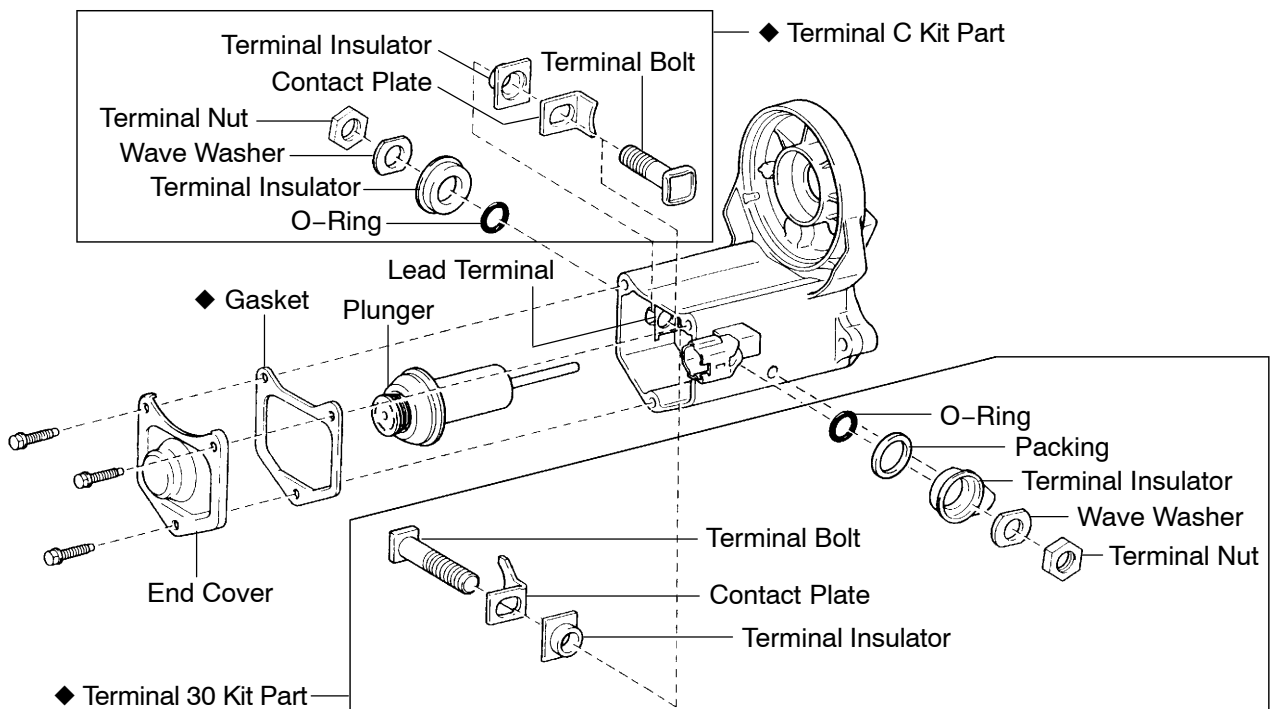

◆ Non-reusable part

B04547