



G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

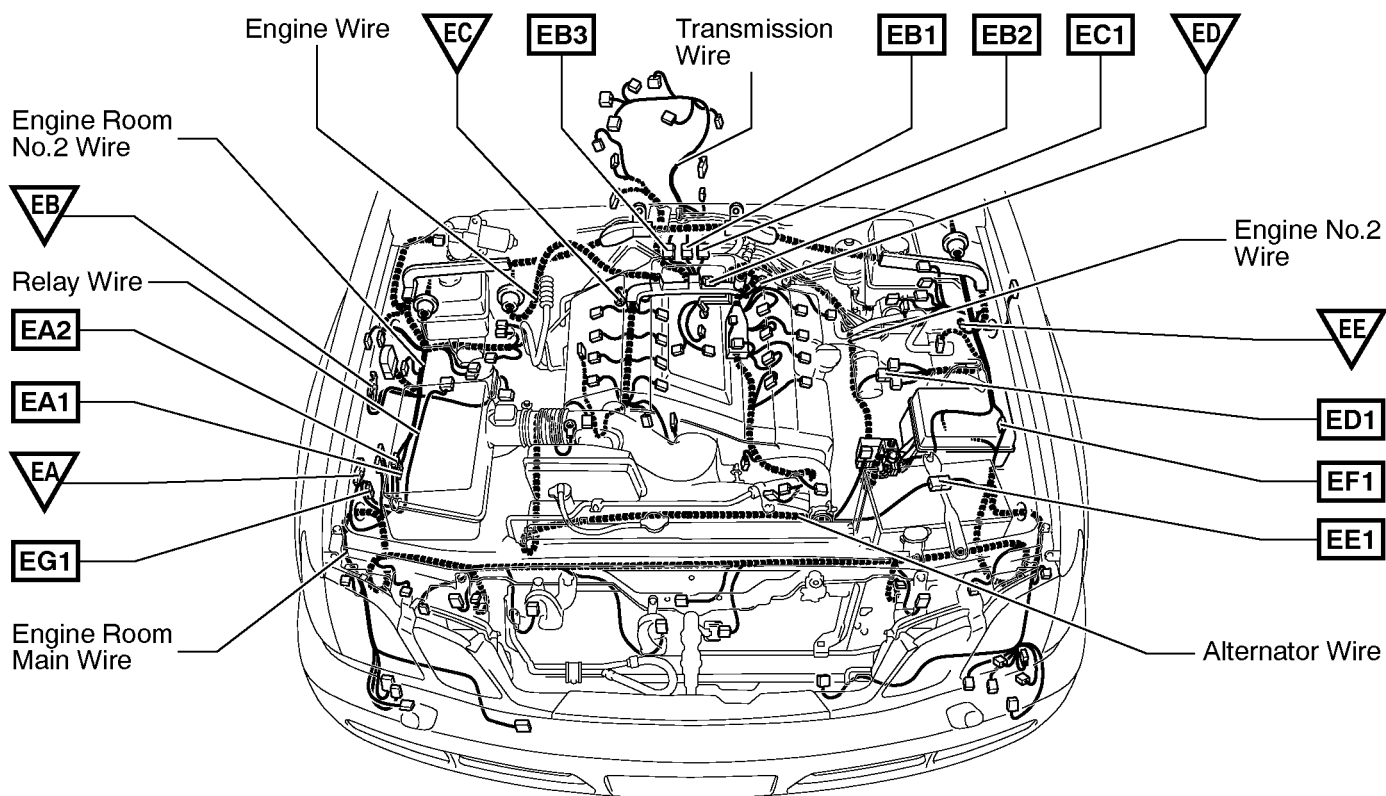

○ : Location of Splice Points

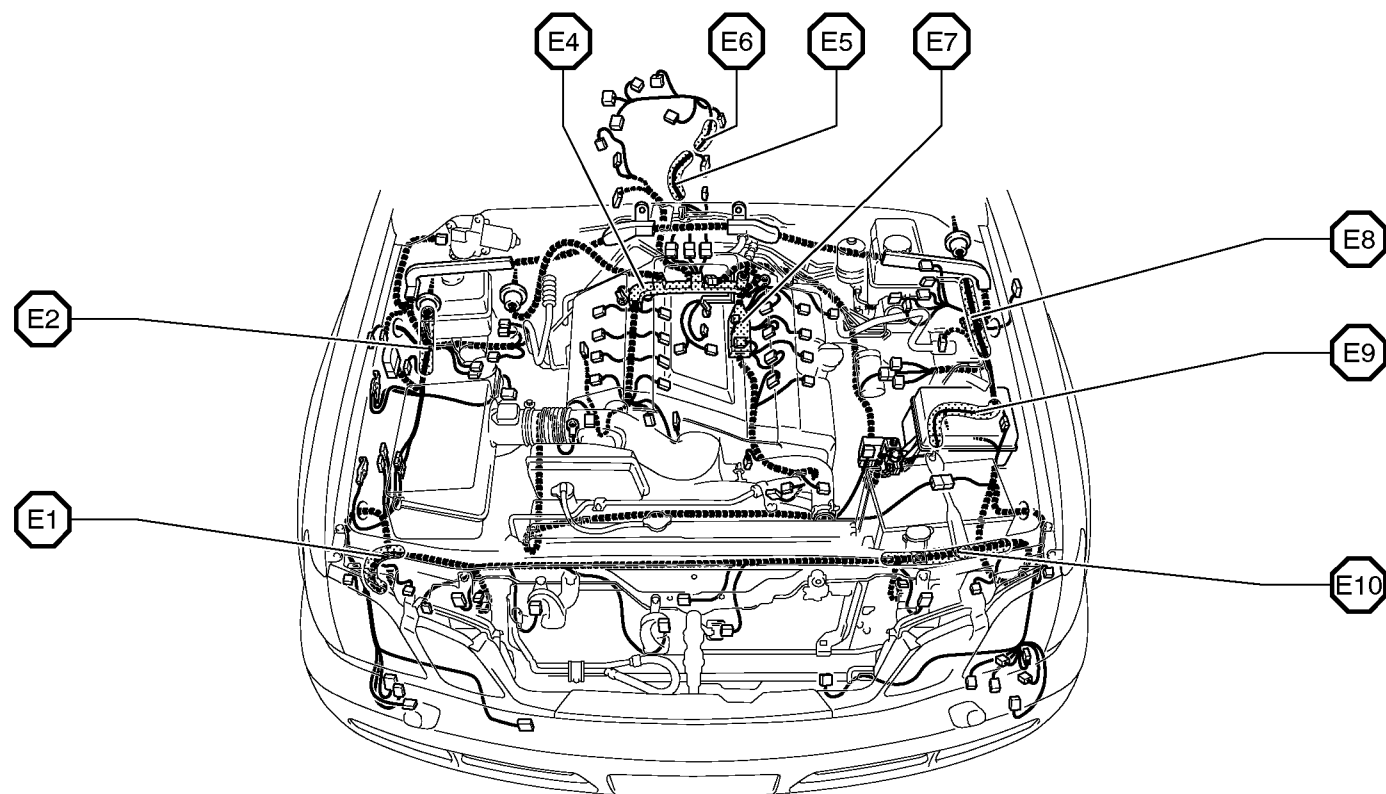


Connector Joining Wire Harness and Wire Harness

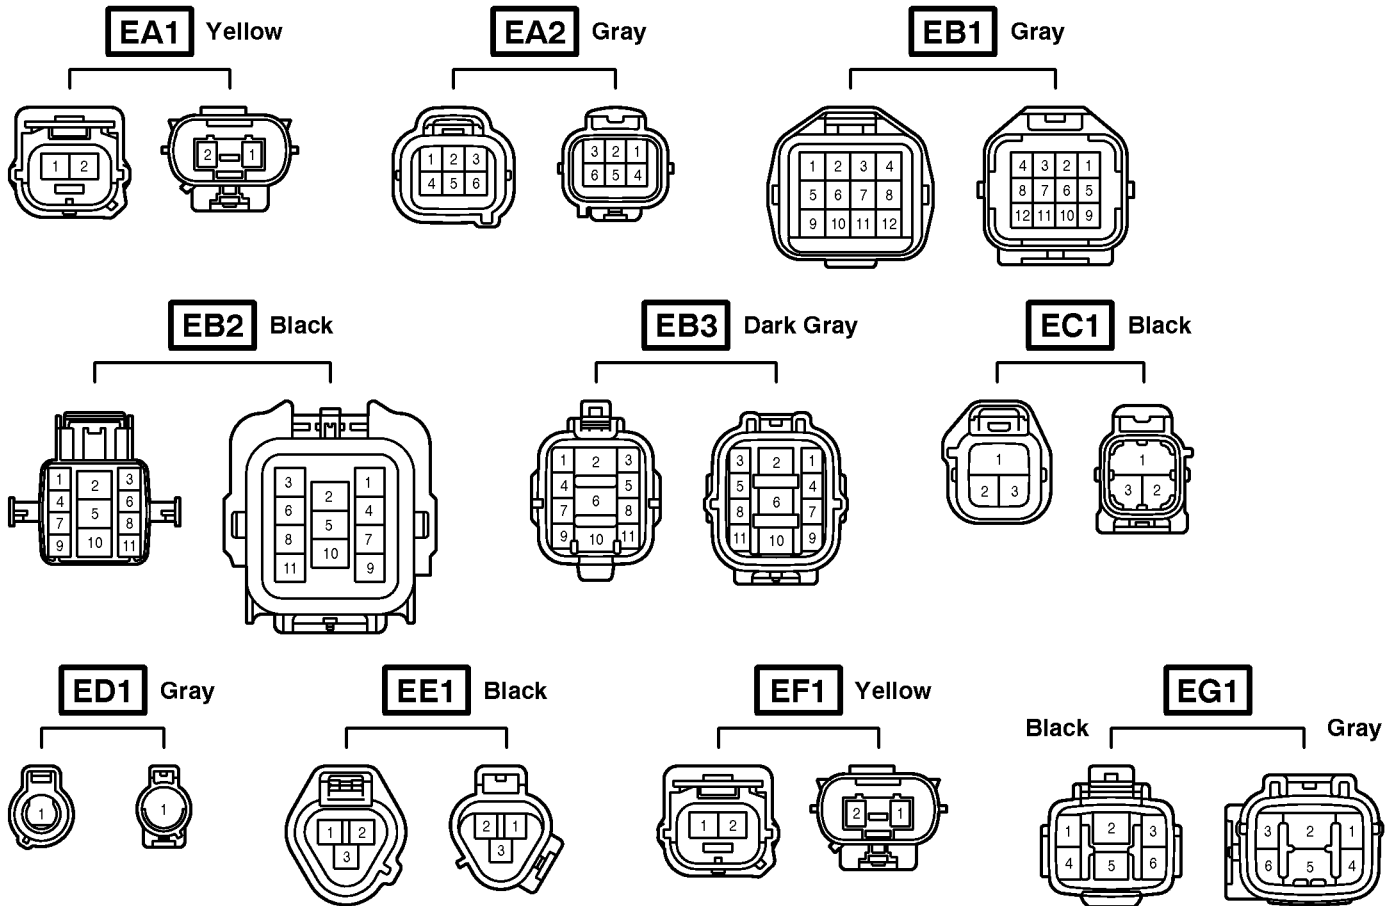


Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Room Main Wire and Engine Room No.2 Wire (Engine Compartment Right)
EA2	Engine Room Main Wire and Engine Room No.2 Wire (Engine Compartment Right)
EB1	Engine Wire and Transmission Wire (On the Transmission)
EB2	Engine Wire and Transmission Wire (On the Transmission)
EB3	Engine Wire and Transmission Wire (On the Transmission)
EC1	Engine No.2 Wire and Engine Wire (On the Transmission)
ED1	Engine No.2 Wire and Engine Room No.2 Wire (Near the Engine Room J/B)
EE1	Engine Room Main Wire and Alternator Wire (Near the Battery)
EF1	Engine Room No.2 Wire and Engine Room Main Wire (Under the Engine Room J/B)
EG1	Engine Room Main Wire and Relay Wire (Engine Compartment Right)

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

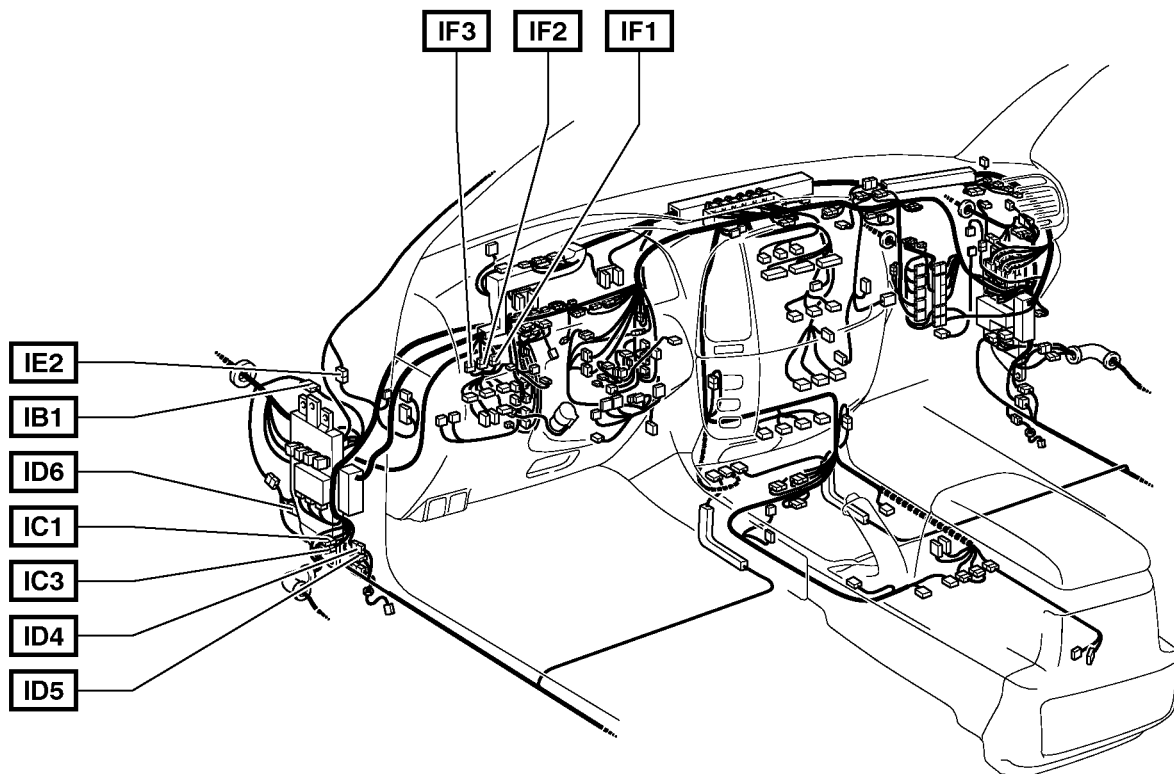

▽ : Location of Ground Points

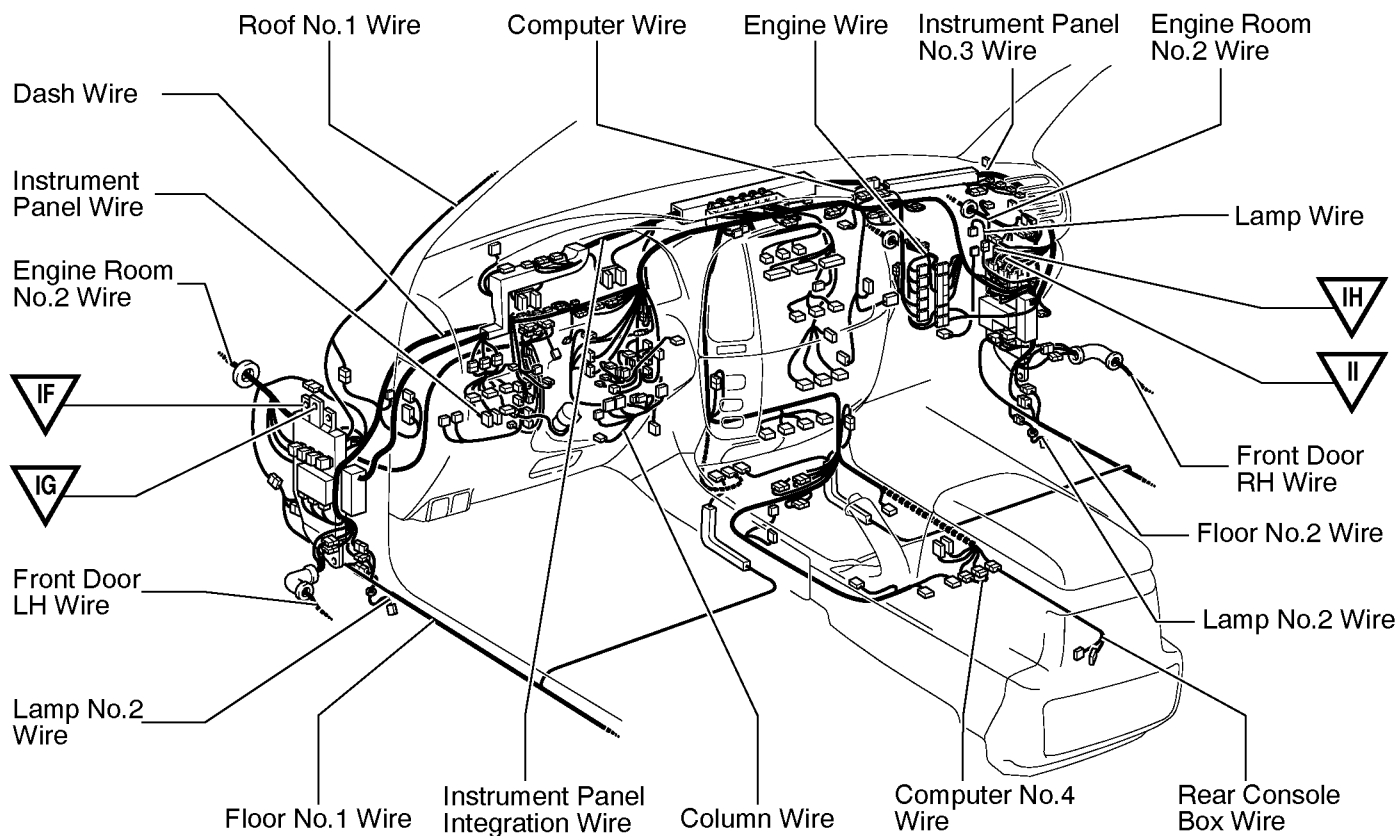


Connector Joining Wire Harness and Wire Harness

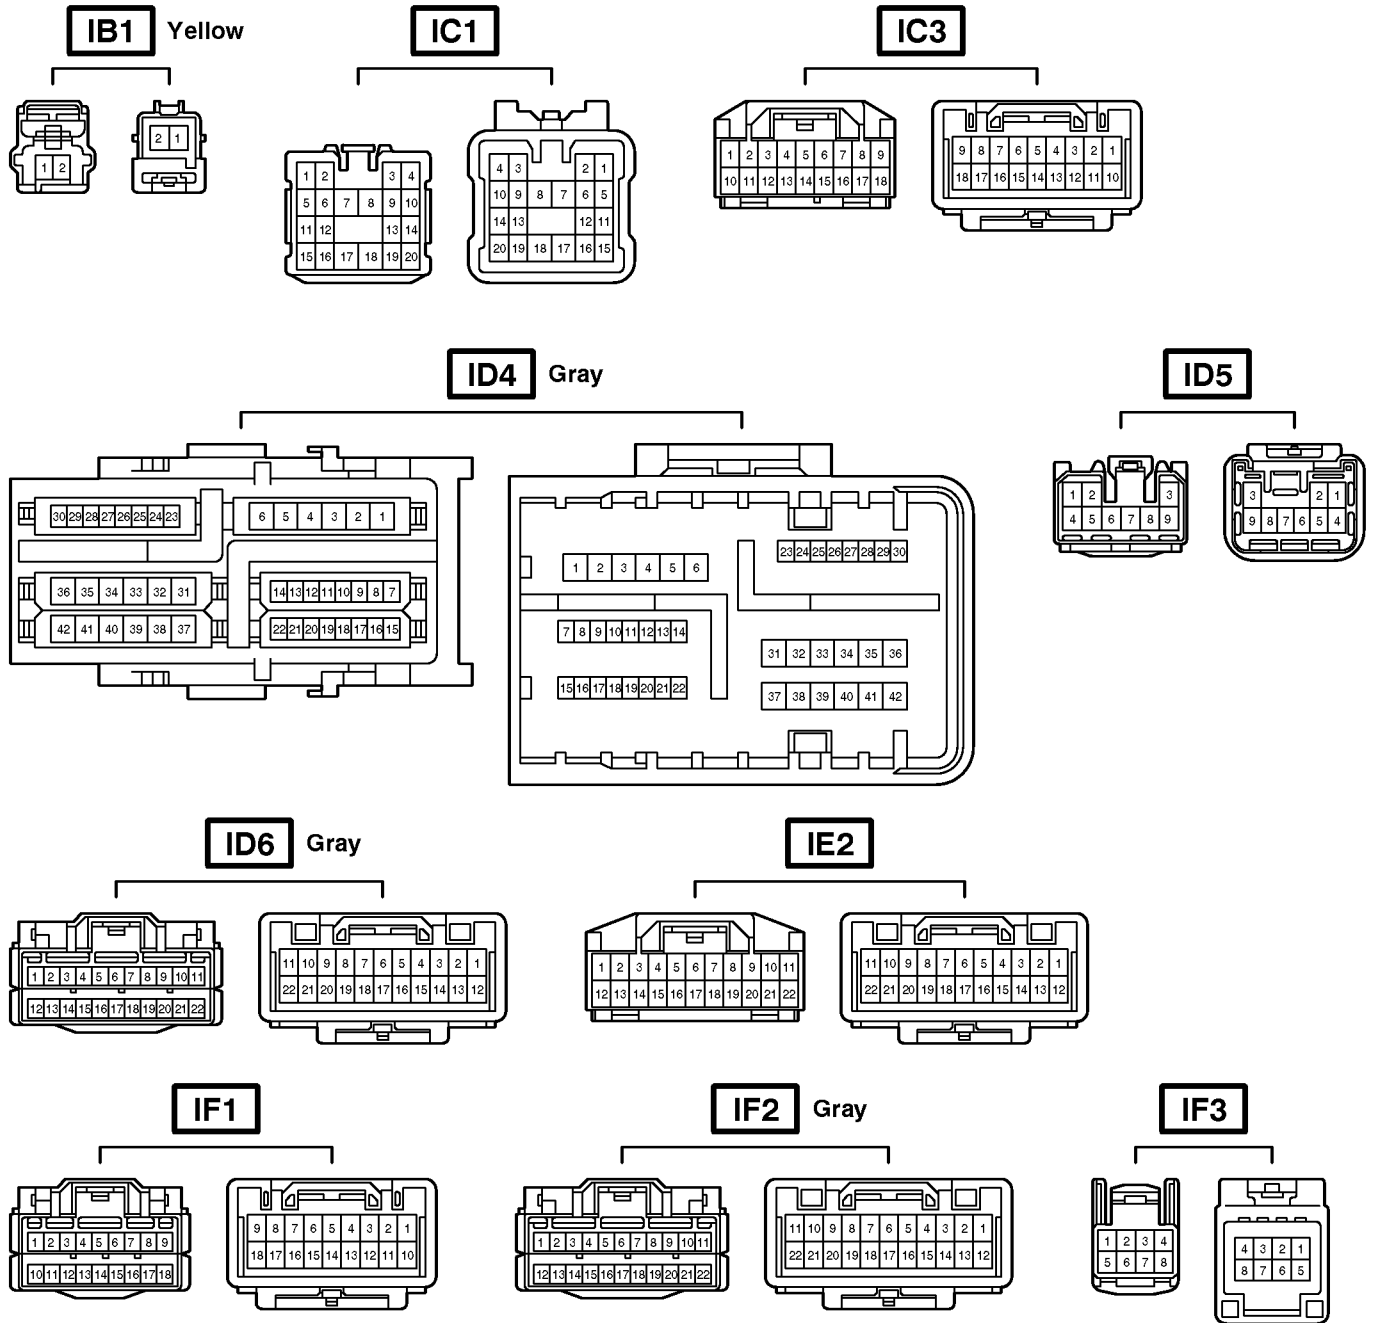


Code	Joining Wire Harness and Wire Harness (Connector Location)
IB1	Engine Room No.2 Wire and Dash Wire (Left Kick Panel)
IC1	Front Door LH Wire and Dash Wire (Left Kick Panel)
IC3	
ID4	Dash Wire and Floor No.1 Wire (Left Kick Panel)
ID5	
ID6	
IE2	Dash Wire and Roof No.1 Wire (Left Kick Panel)
IF1	Instrument Panel Integration Wire and Instrument Panel Wire (Left Side of Instrument Panel)
IF2	
IF3	

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

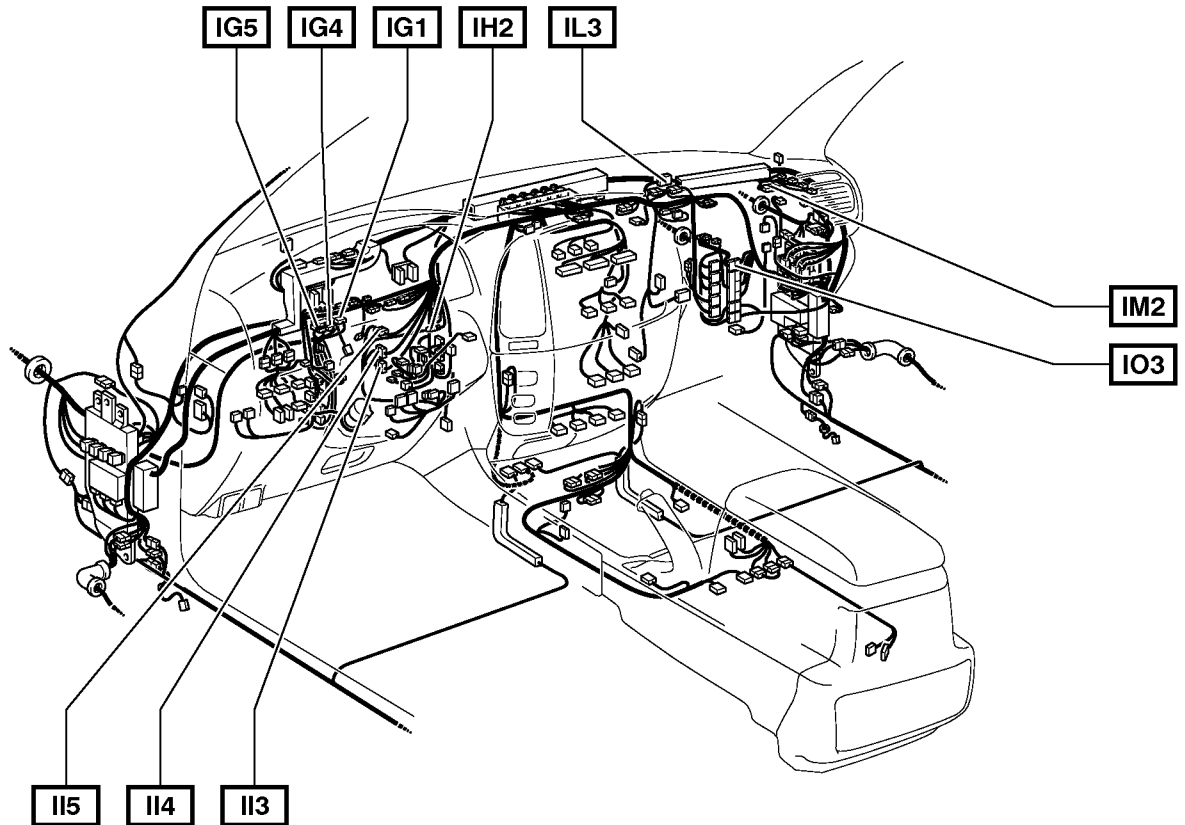

○ : Location of Splice Points

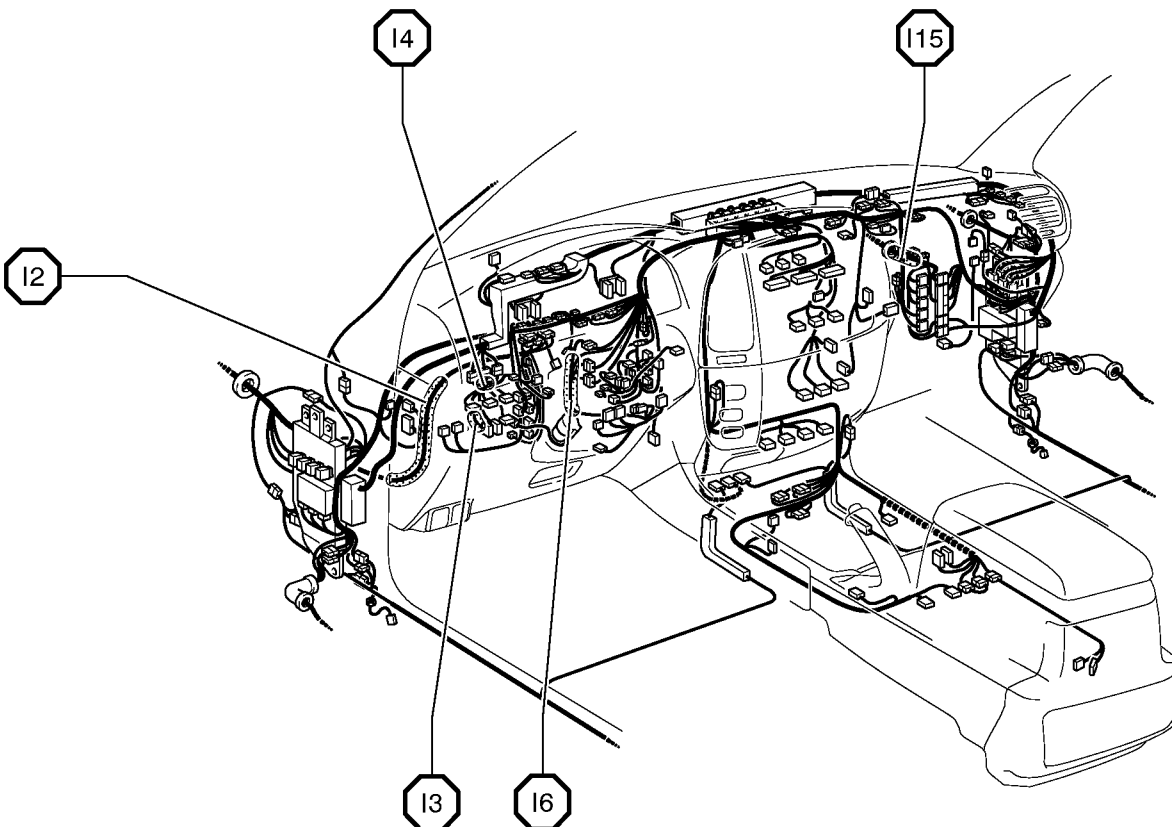


Connector Joining Wire Harness and Wire Harness

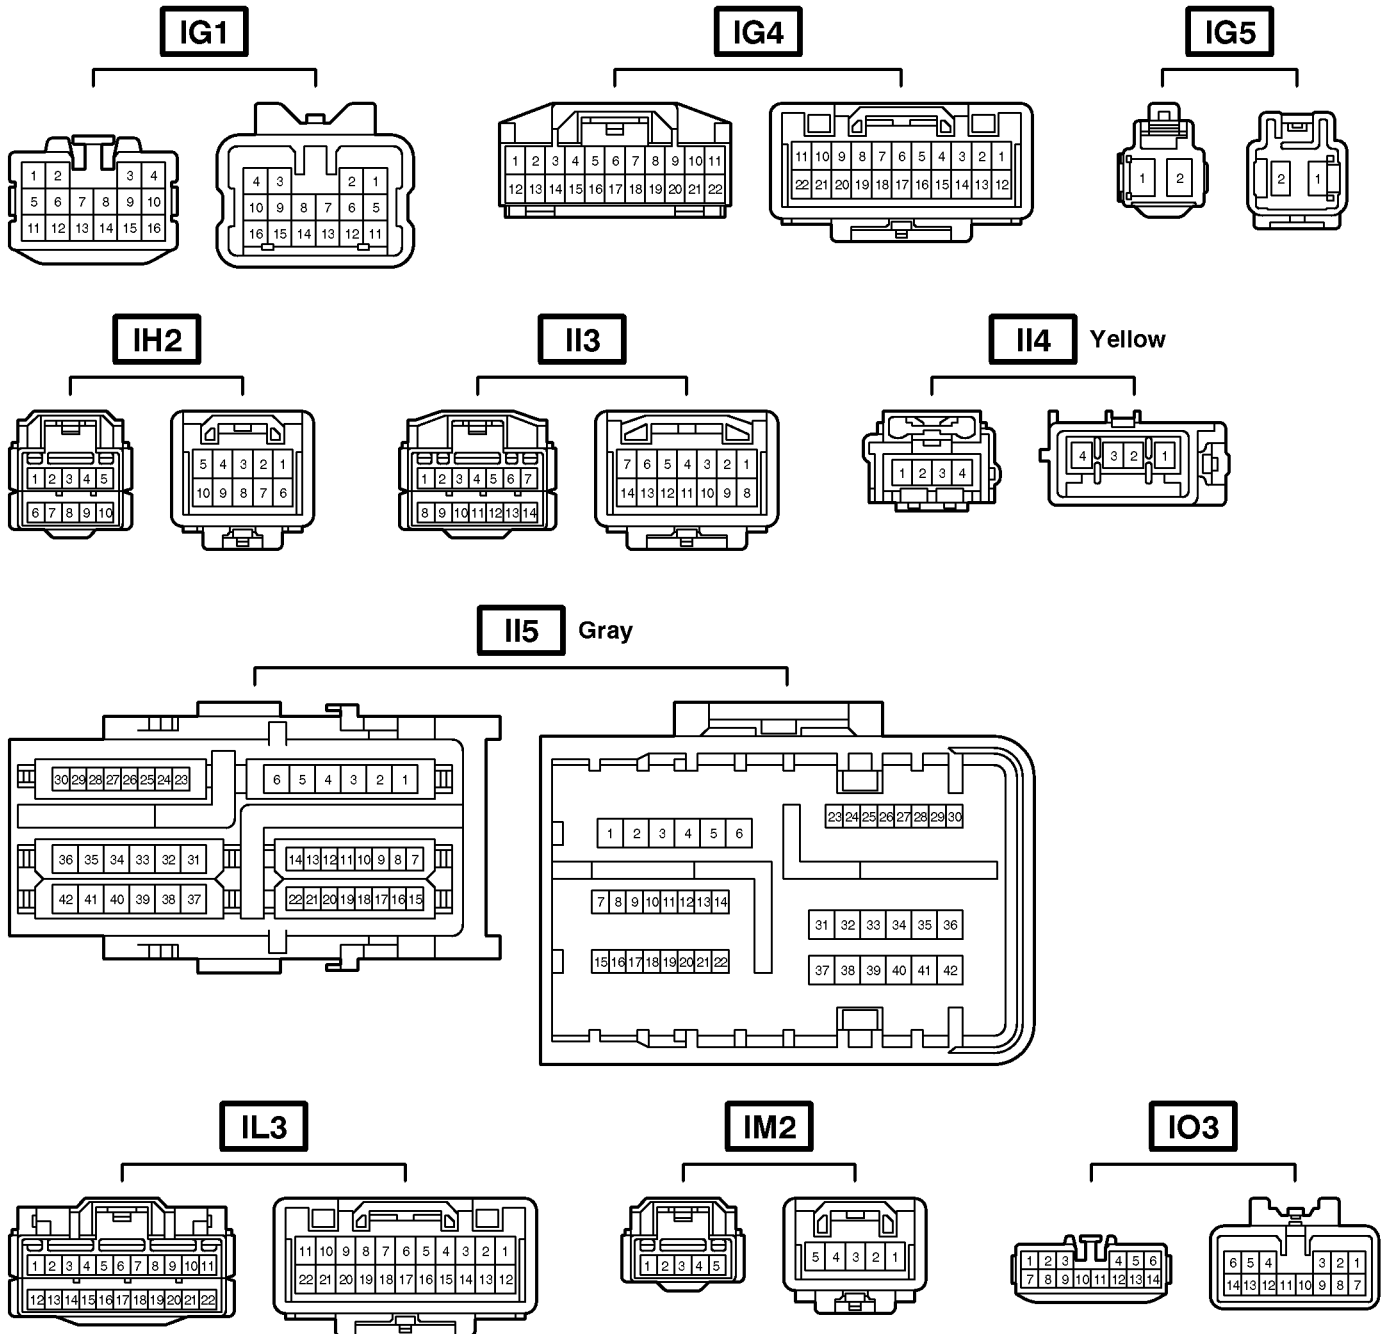

Code	Joining Wire Harness and Wire Harness (Connector Location)
IG1	
IG4	Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)
IG5	
IH2	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)
II3	
II4	Dash Wire and Column Wire (Near the Ignition SW)
II5	
IL3	Instrument Panel Integration Wire and Computer Wire (Instrument Panel Center)
IM2	Instrument Panel Integration Wire and Instrument Panel No.3 Wire (Right Side of Instrument Panel)
IO3	Engine Wire and Dash Wire (Behind the Glove Box)


G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

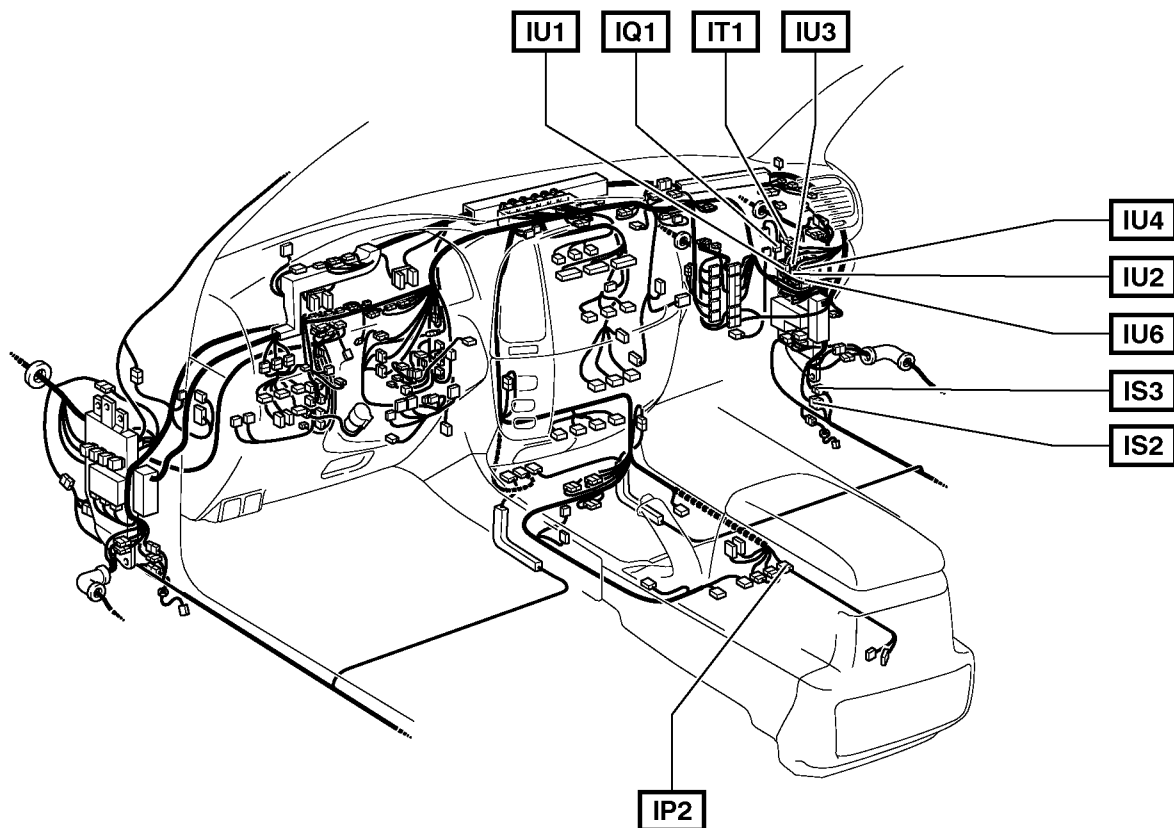


Code	Joining Wire Harness and Wire Harness (Connector Location)
IP2	Rear Console Box Wire and Dash Wire (Right Side of Rear Console)
IQ1	Instrument Panel Integration Wire and Lamp Wire (Behind the Glove Box)
IS2	Dash Wire and Floor No.2 Wire (Right Kick Panel)
IS3	
IT1	Engine Room No.2 Wire and Dash Wire (Right Kick Panel)
IU1	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IU2	
IU3	
IU4	
IU6	

Connector Joining Wire Harness and Wire Harness

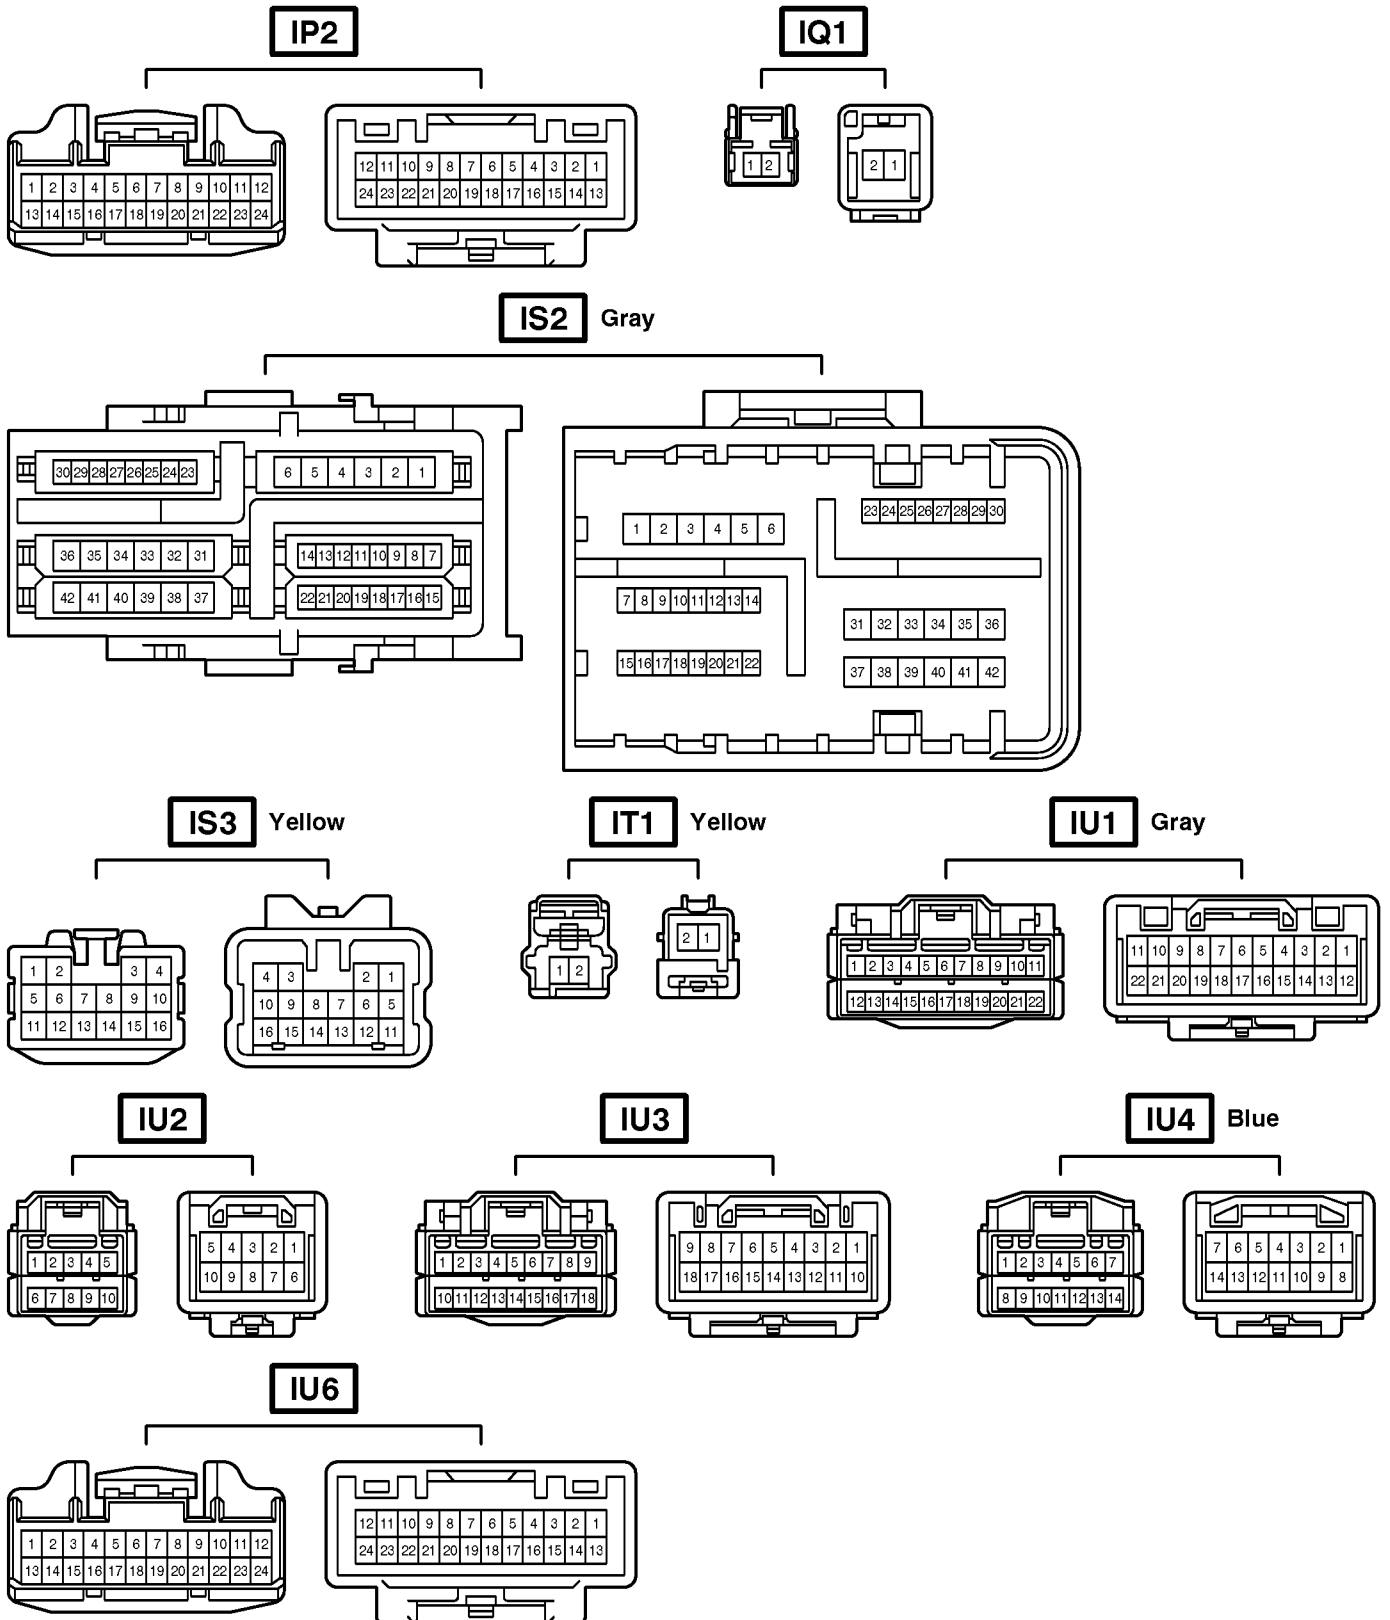


G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

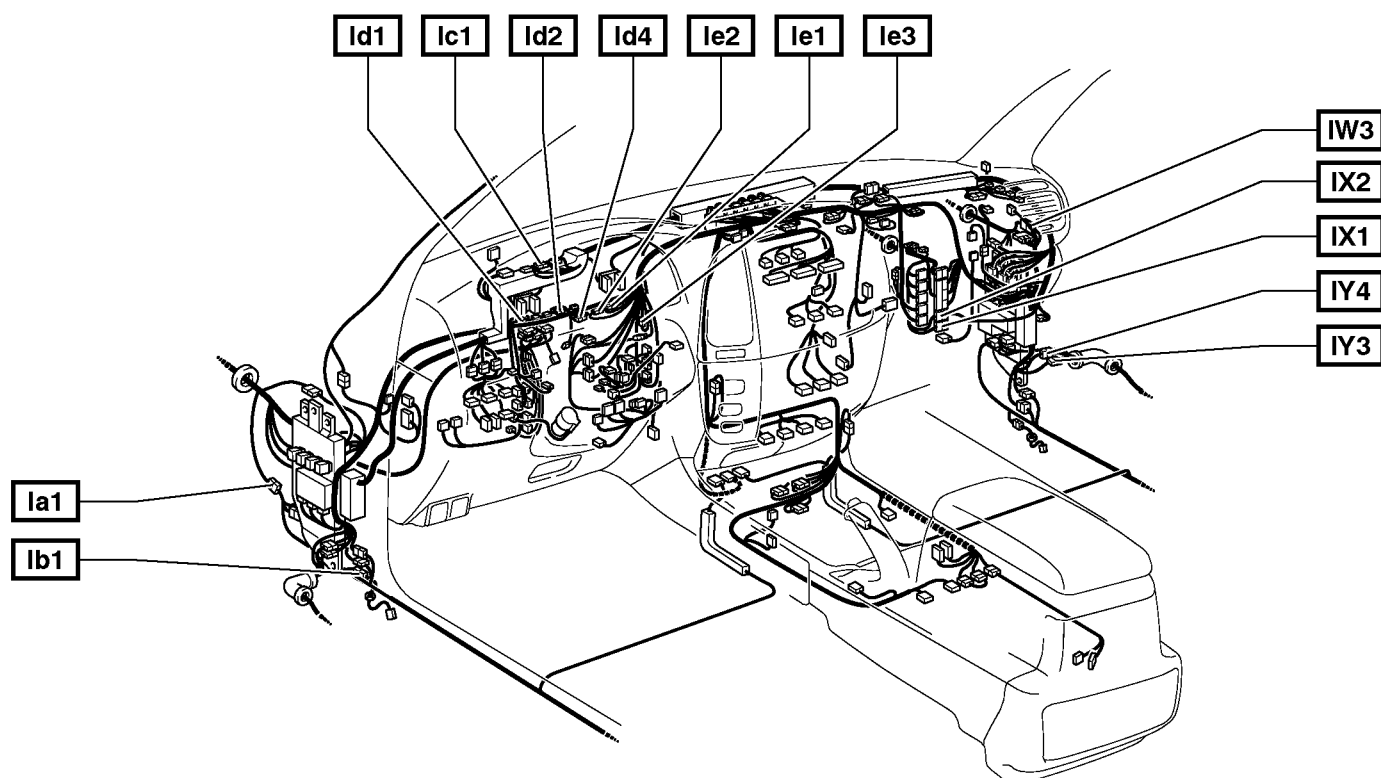


Code	Joining Wire Harness and Wire Harness (Connector Location)
IW3	Engine Room No.2 Wire and Dash Wire (Behind the Glove Box)
IX1	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)
IX2	
IY3	
IY4	Front Door RH Wire and Dash Wire (Right Kick Panel)
Ia1	Engine Room No.2 Wire and Floor No.1 Wire (Left Kick Panel)
Ib1	Lamp No.2 Wire and Floor No.1 Wire (Left Kick Panel)
Ic1	Instrument Panel Integration Wire and Instrument Panel Integration Wire (Left Side of Instrument Panel)
Id1	Dash Wire and Dash Wire (Behind the Combination Meter)
Id2	
Id4	
le1	
le2	
le3	

Connector Joining Wire Harness and Wire Harness

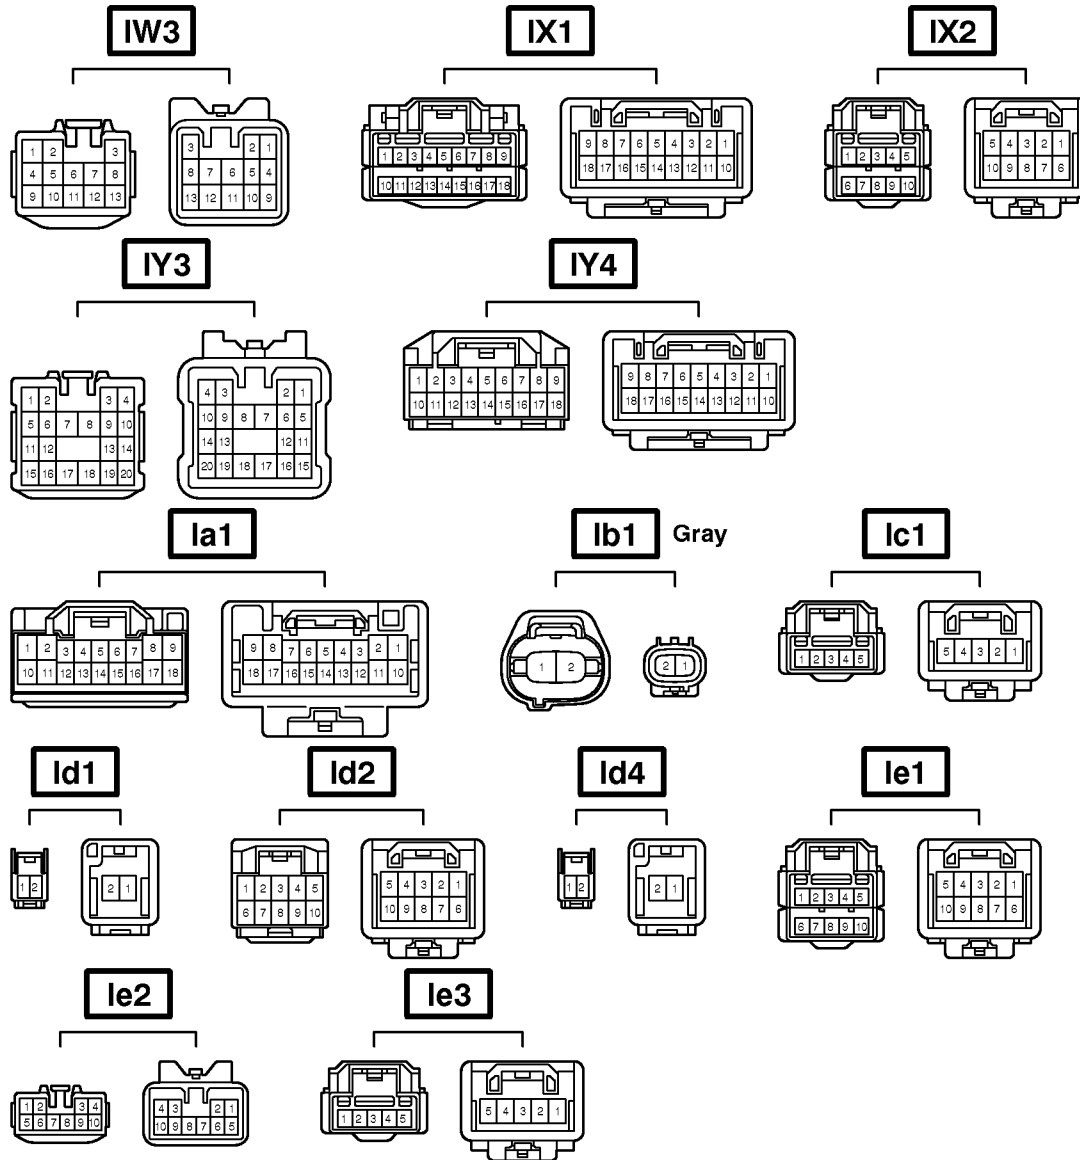


G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

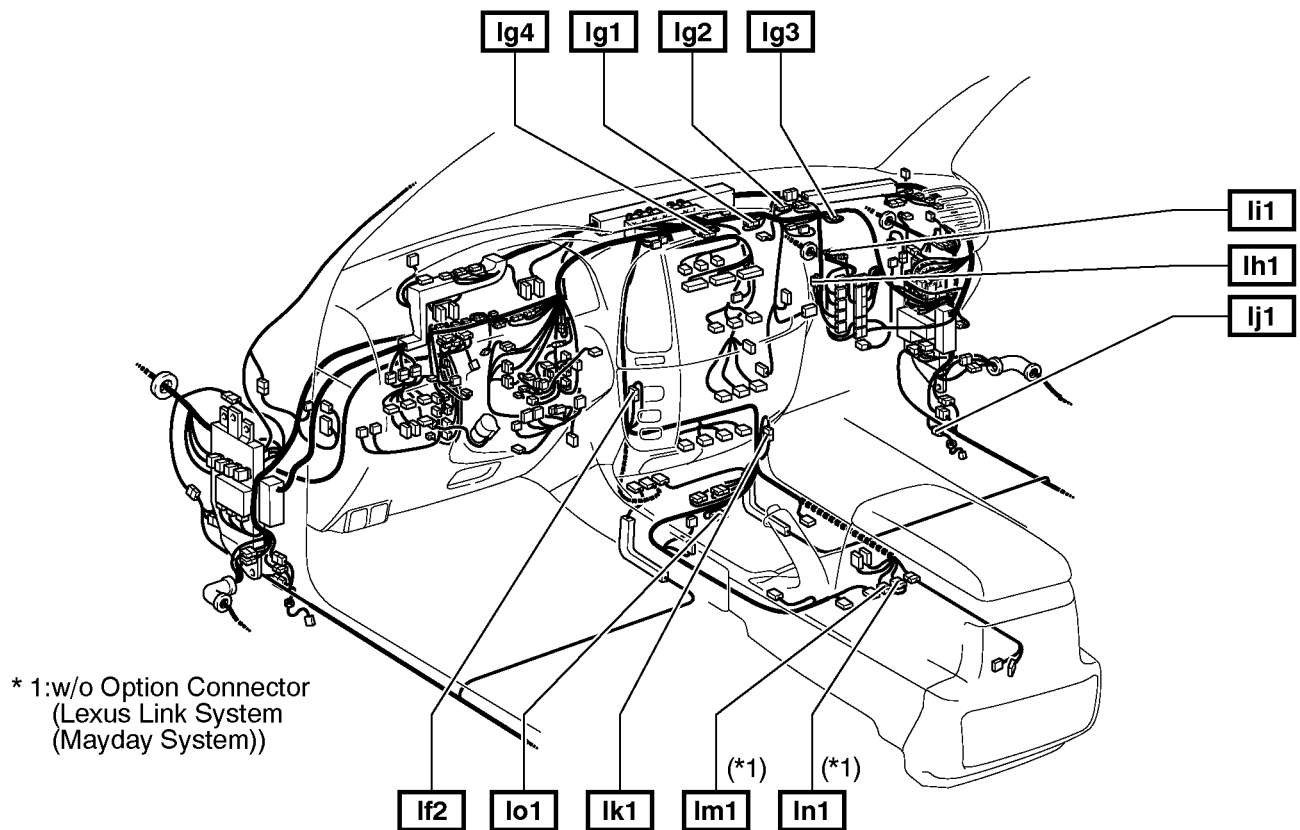


Code	Joining Wire Harness and Wire Harness (Connector Location)
If2	Dash Wire and Dash Wire (Behind the Center Panel)
Ig1	Dash Wire and Dash Wire (Instrument Panel Center)
Ig2	
Ig3	
Ig4	
lh1	Dash Wire and Dash Wire (Behind the Glove Box)
li1	Engine Wire and Engine Wire (Behind the Glove Box)
lj1	Lamp No.2 Wire and Floor No.2 Wire (Right Kick Panel)
lk1	Dash Wire and Floor No.2 Wire (Right Side of Front Console)
lm1	Dash Wire and Computer No.4 Wire (Right Side of Rear Console)
ln1	Computer No.4 Wire and Dash Wire (Right Side of Rear Console)
lo1	Dash Wire and Dash Wire (Center Side of Front Console)

Connector Joining Wire Harness and Wire Harness

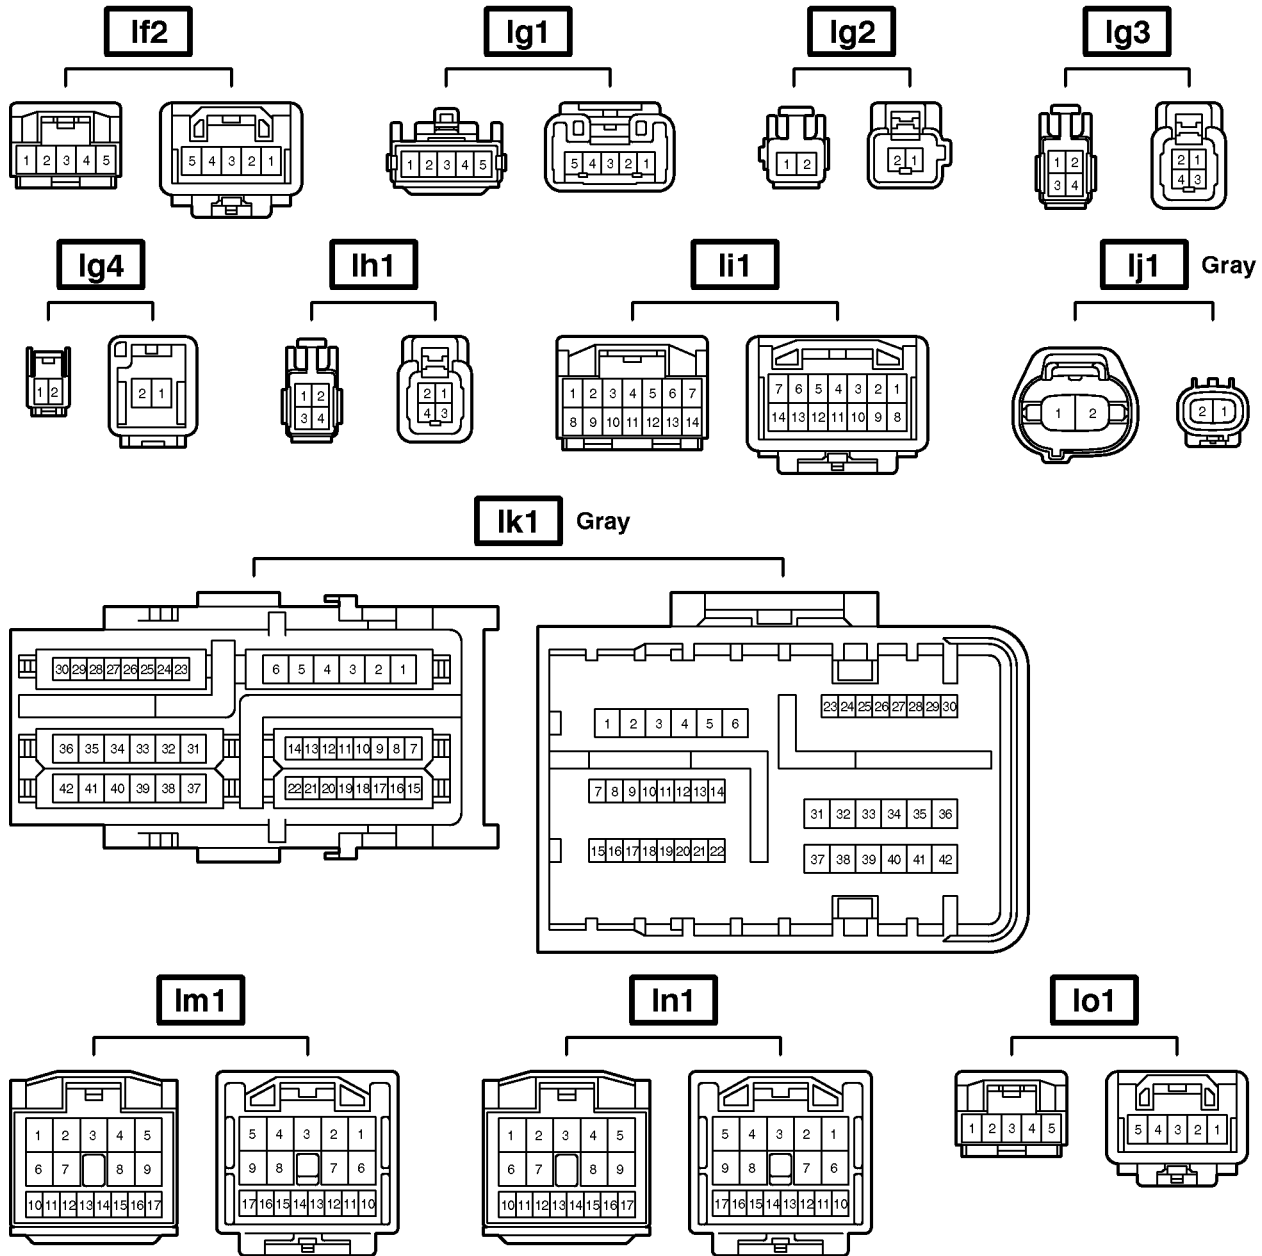


G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

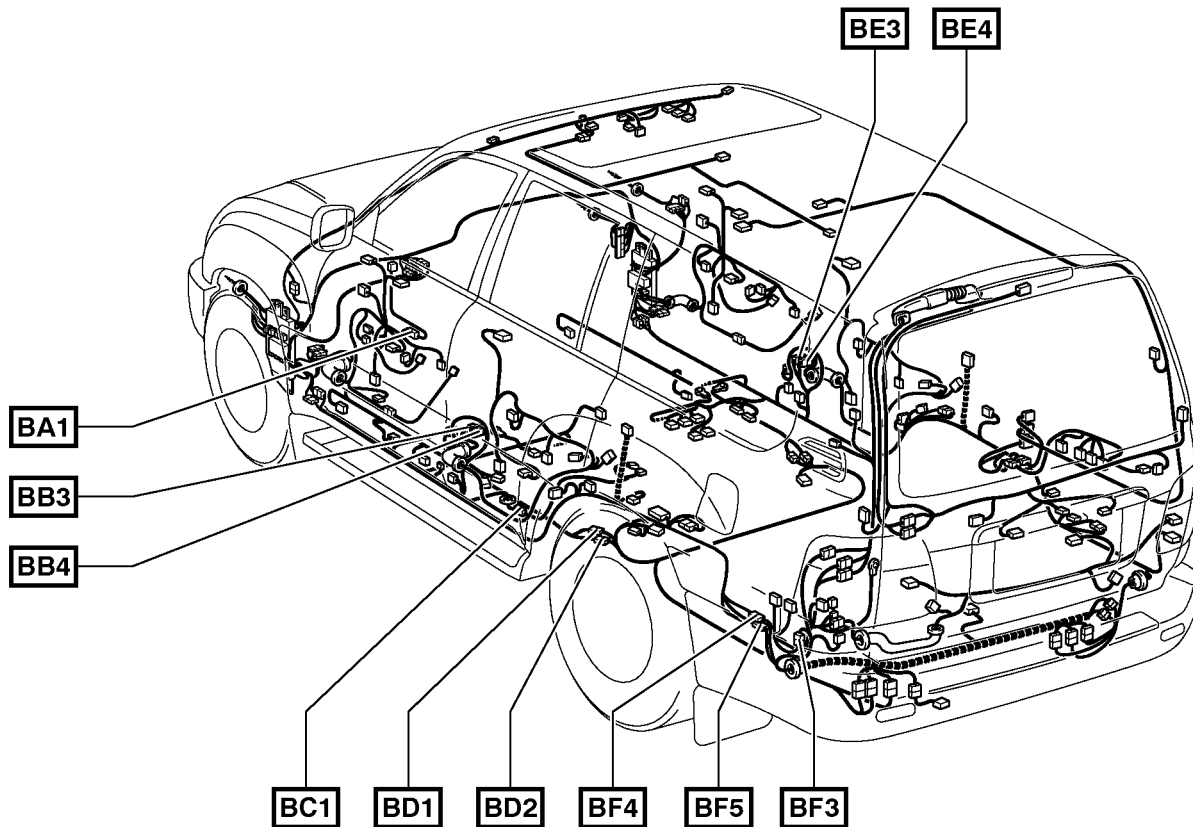

▽ : Location of Ground Points

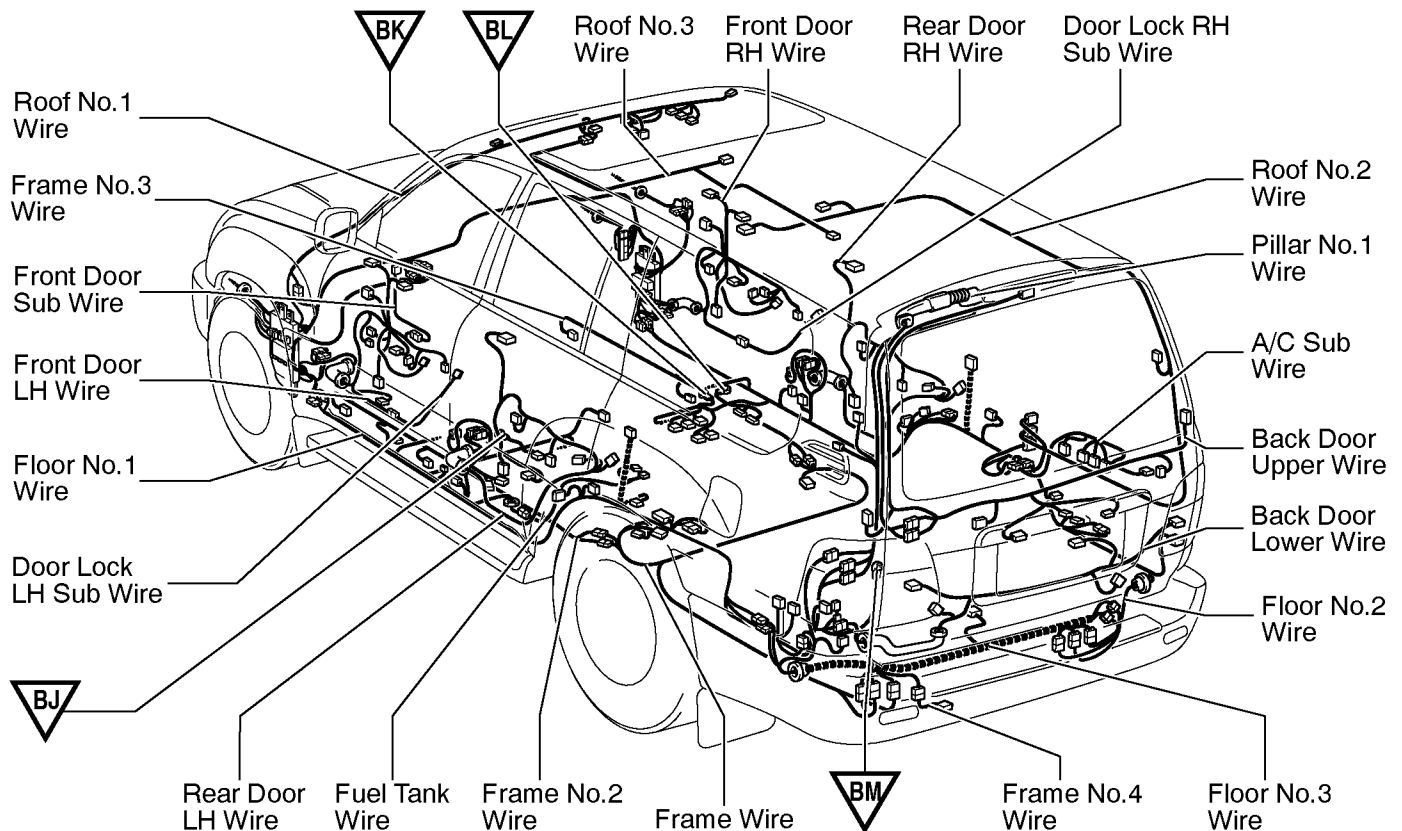


Connector Joining Wire Harness and Wire Harness

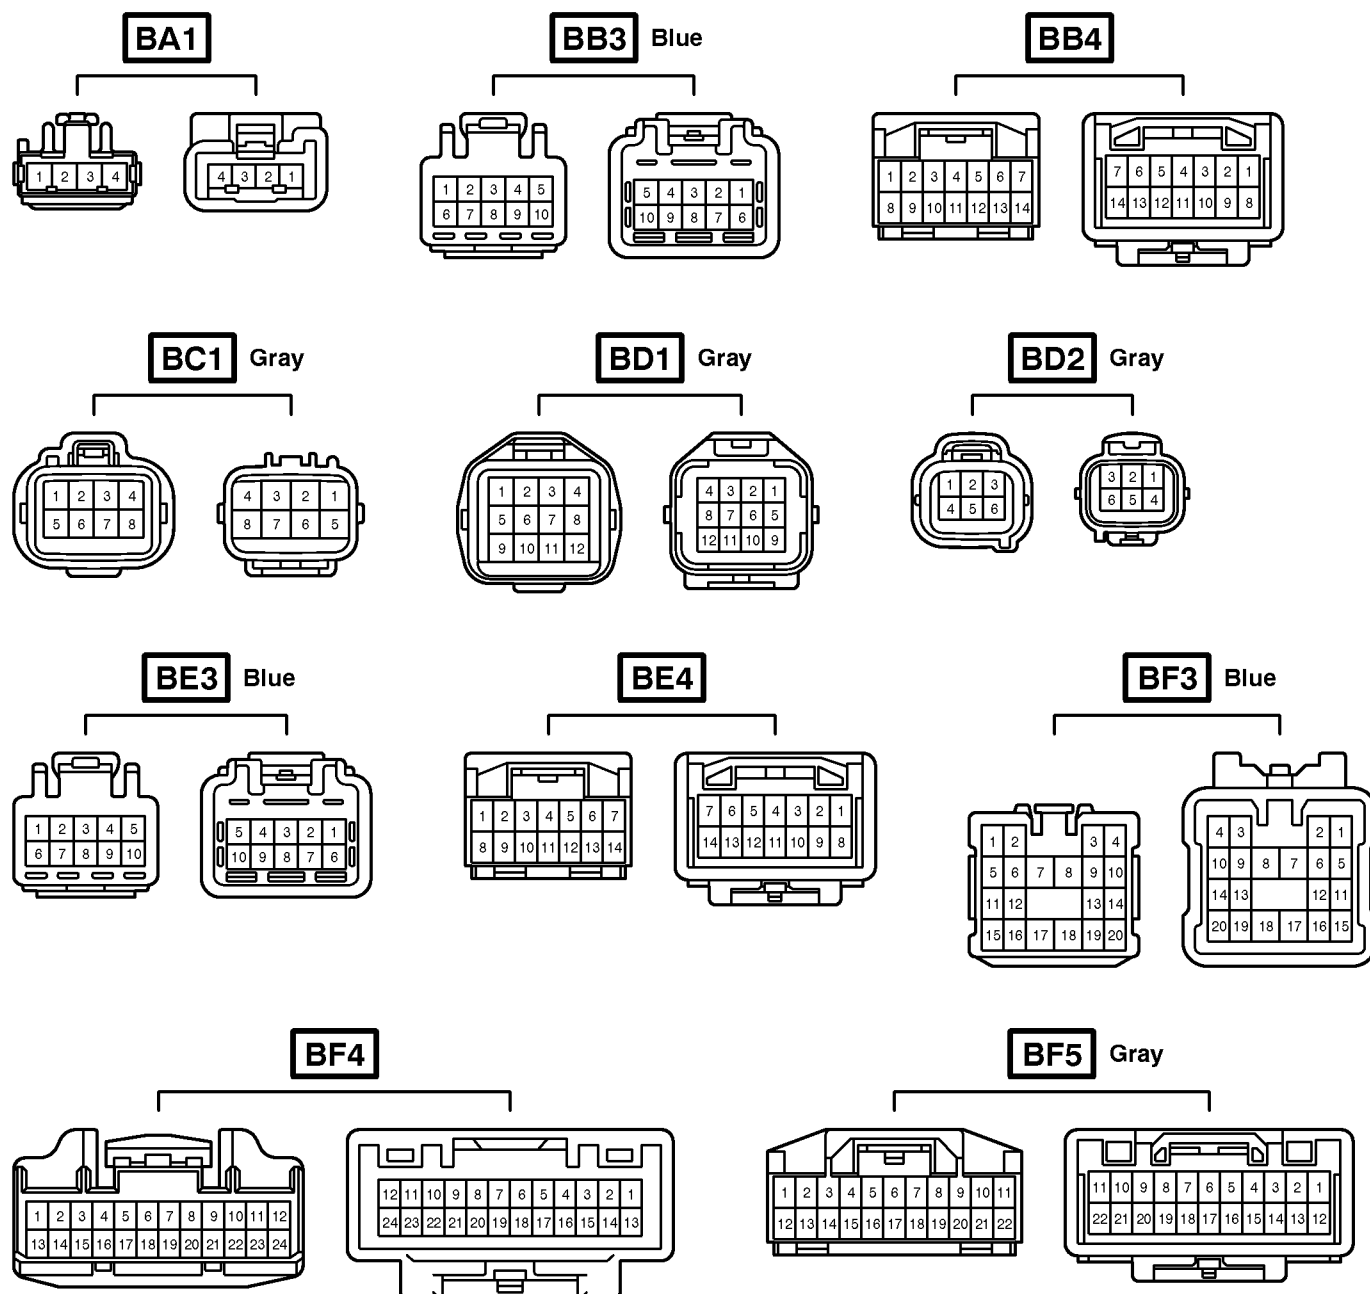


Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Front Door LH Wire and Front Door Sub Wire (Front Door LH)
BB3	Rear Door LH Wire and Floor No.1 Wire (Left Side of Center Pillar)
BB4	
BC1	Floor No.1 Wire and Fuel Tank Wire (Near the Fuel Tank)
BD1	Frame No.2 Wire and Frame Wire (Near the Left Rear Suspension Support)
BD2	
BE3	Rear Door RH Wire and Floor No.2 Wire (Right Side of Center Pillar)
BE4	
BF3	Floor No.3 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BF4	
BF5	

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

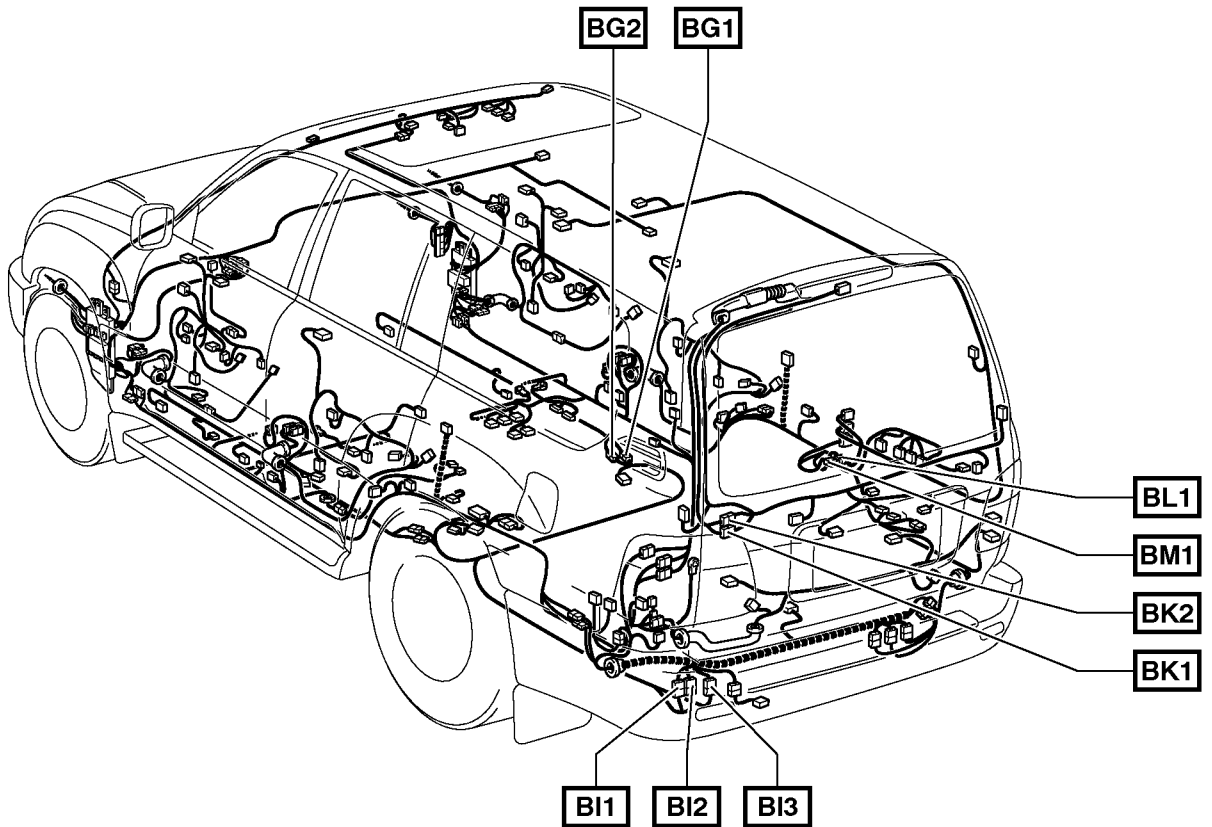

○ : Location of Splice Points

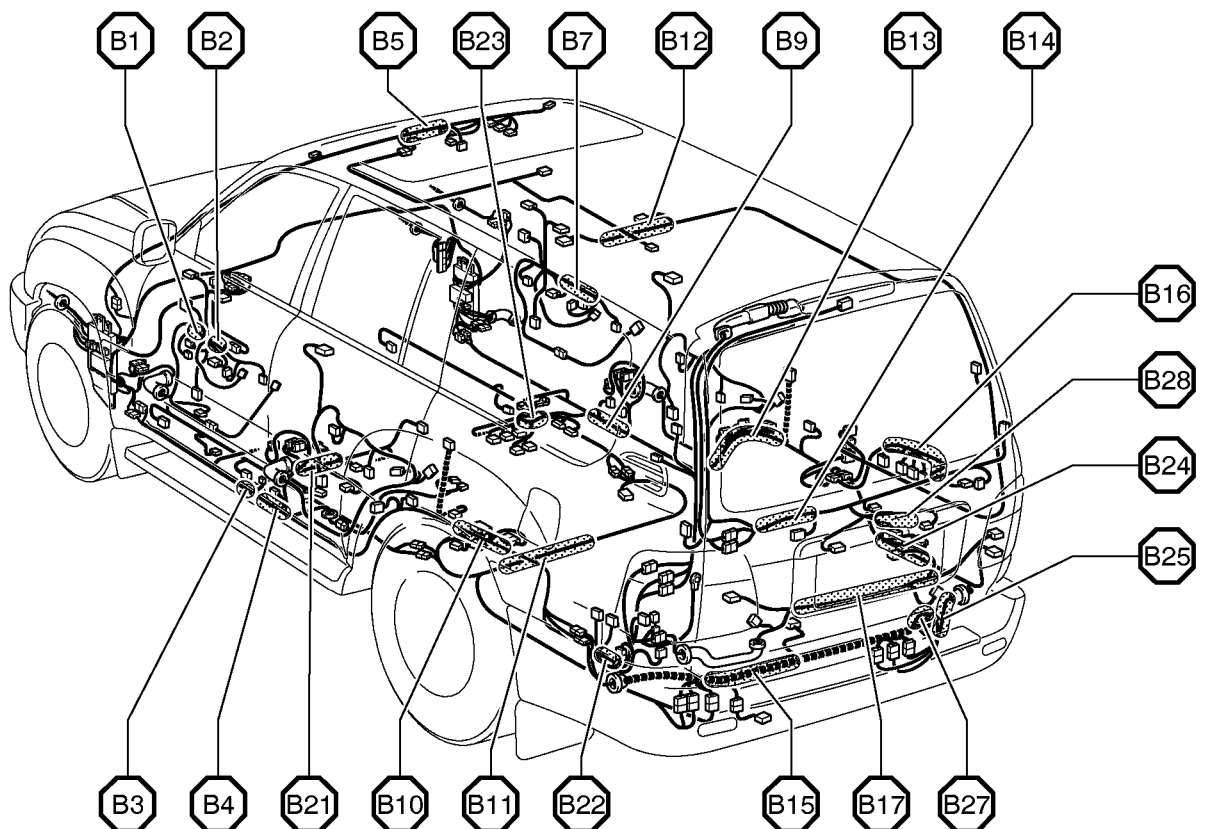


Connector Joining Wire Harness and Wire Harness

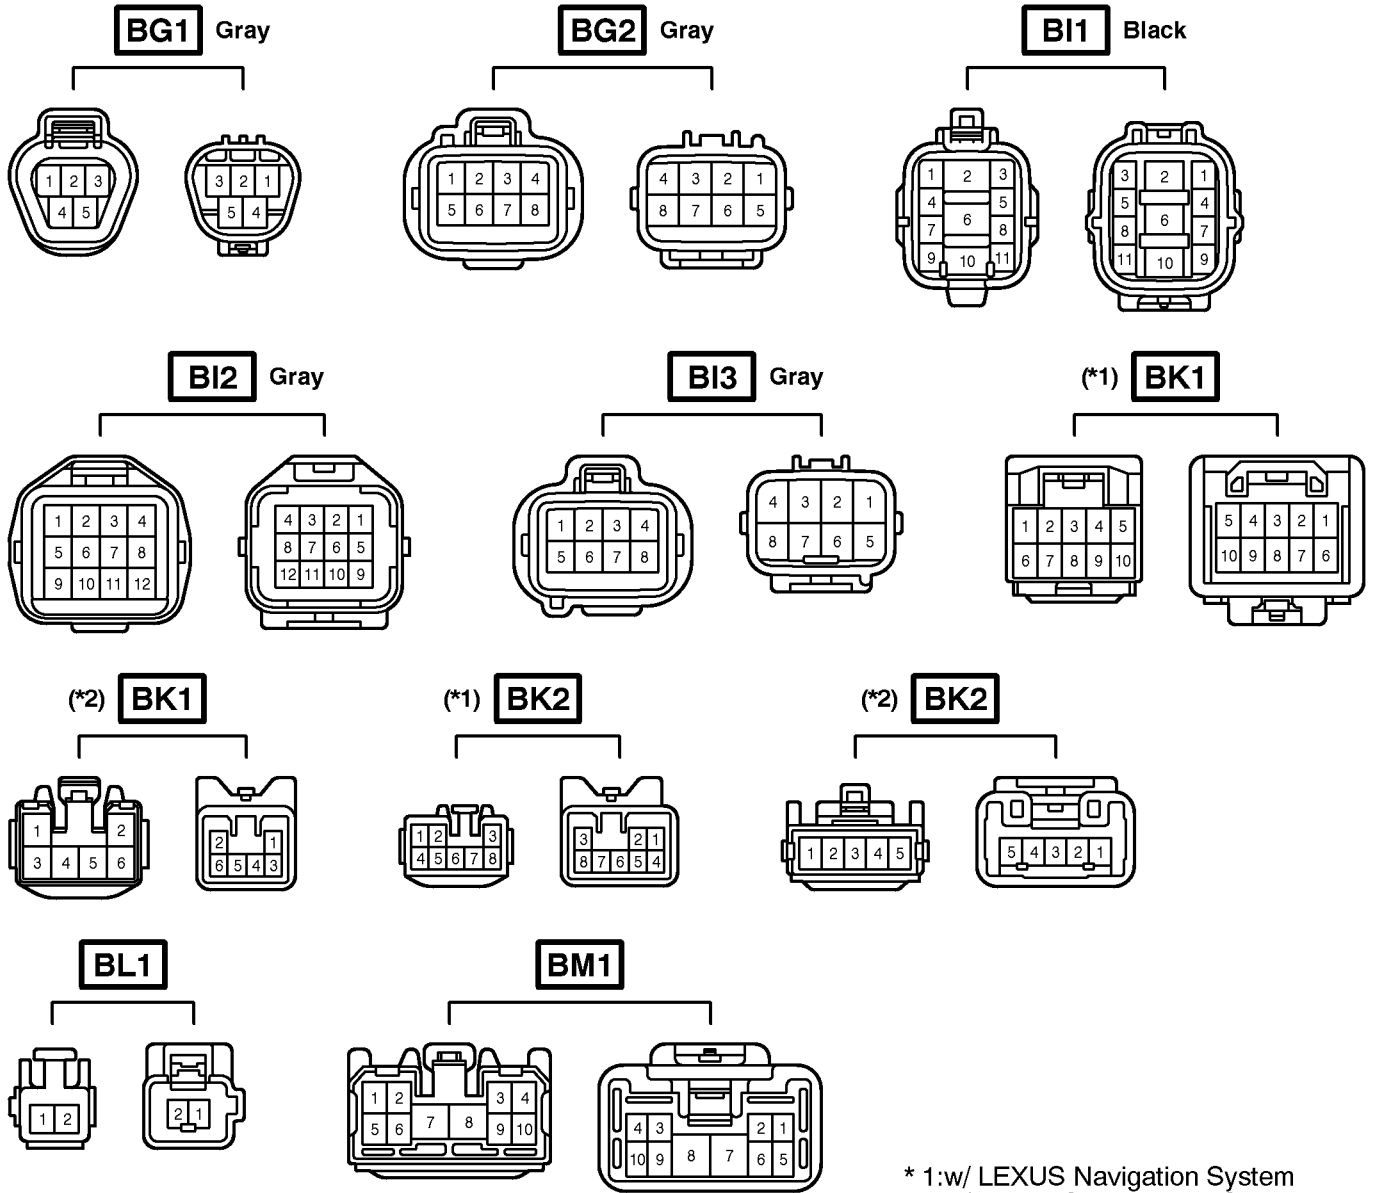


Code	Joining Wire Harness and Wire Harness (Connector Location)
BG1	Frame No.3 Wire and Frame Wire (Near the Right Rear Suspension Support)
BG2	
BI1	
BI2	Frame Wire and Floor No.3 Wire (Left Side of Rear Floor Crossmember)
BI3	
BK1	
BK2	Pillar No.1 Wire and Back Door Upper Wire (Left Side of Back Door)
BL1	
BM1	Floor No.2 Wire and A/C Sub Wire (Right Side Rear Quarter Panel)

G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

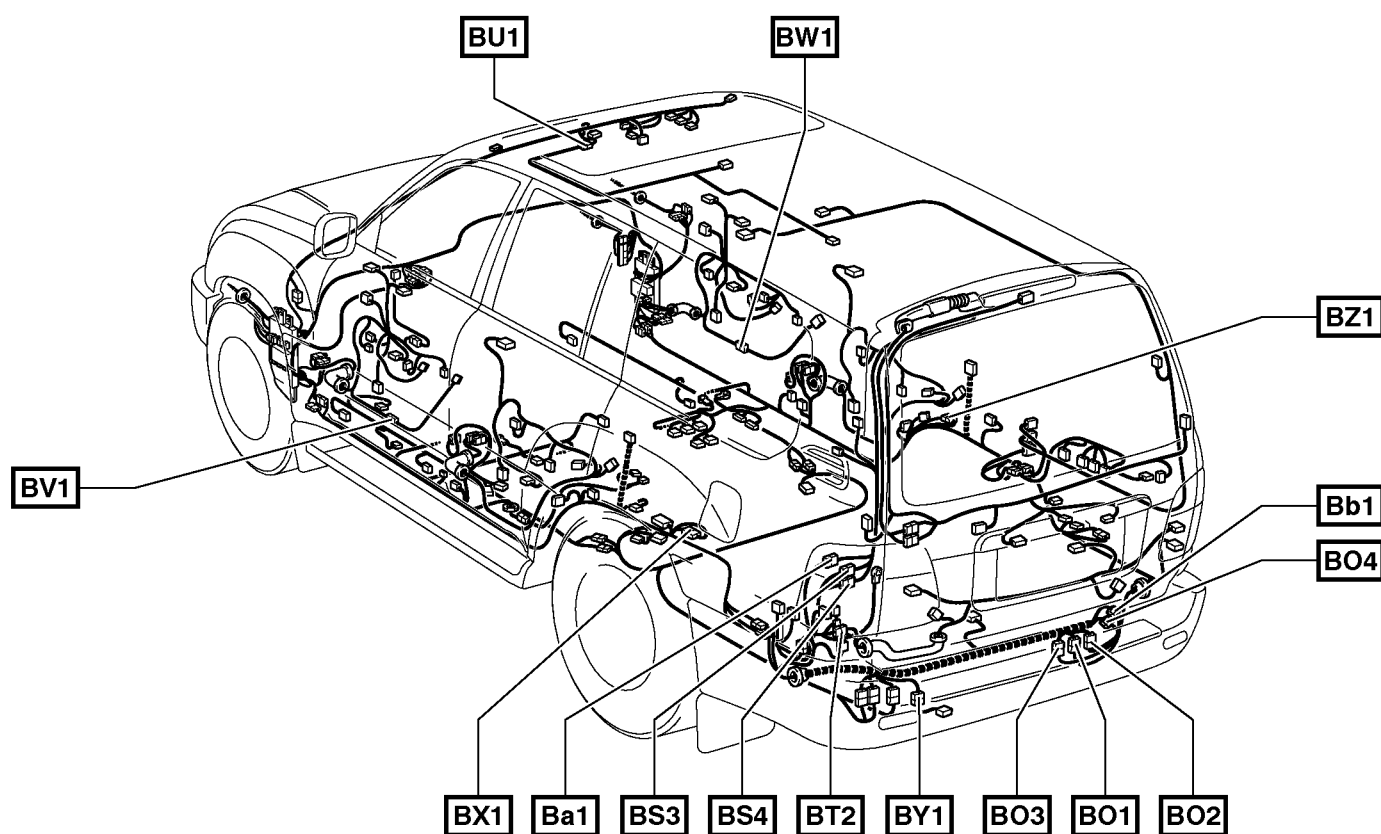


Connector Joining Wire Harness and Wire Harness

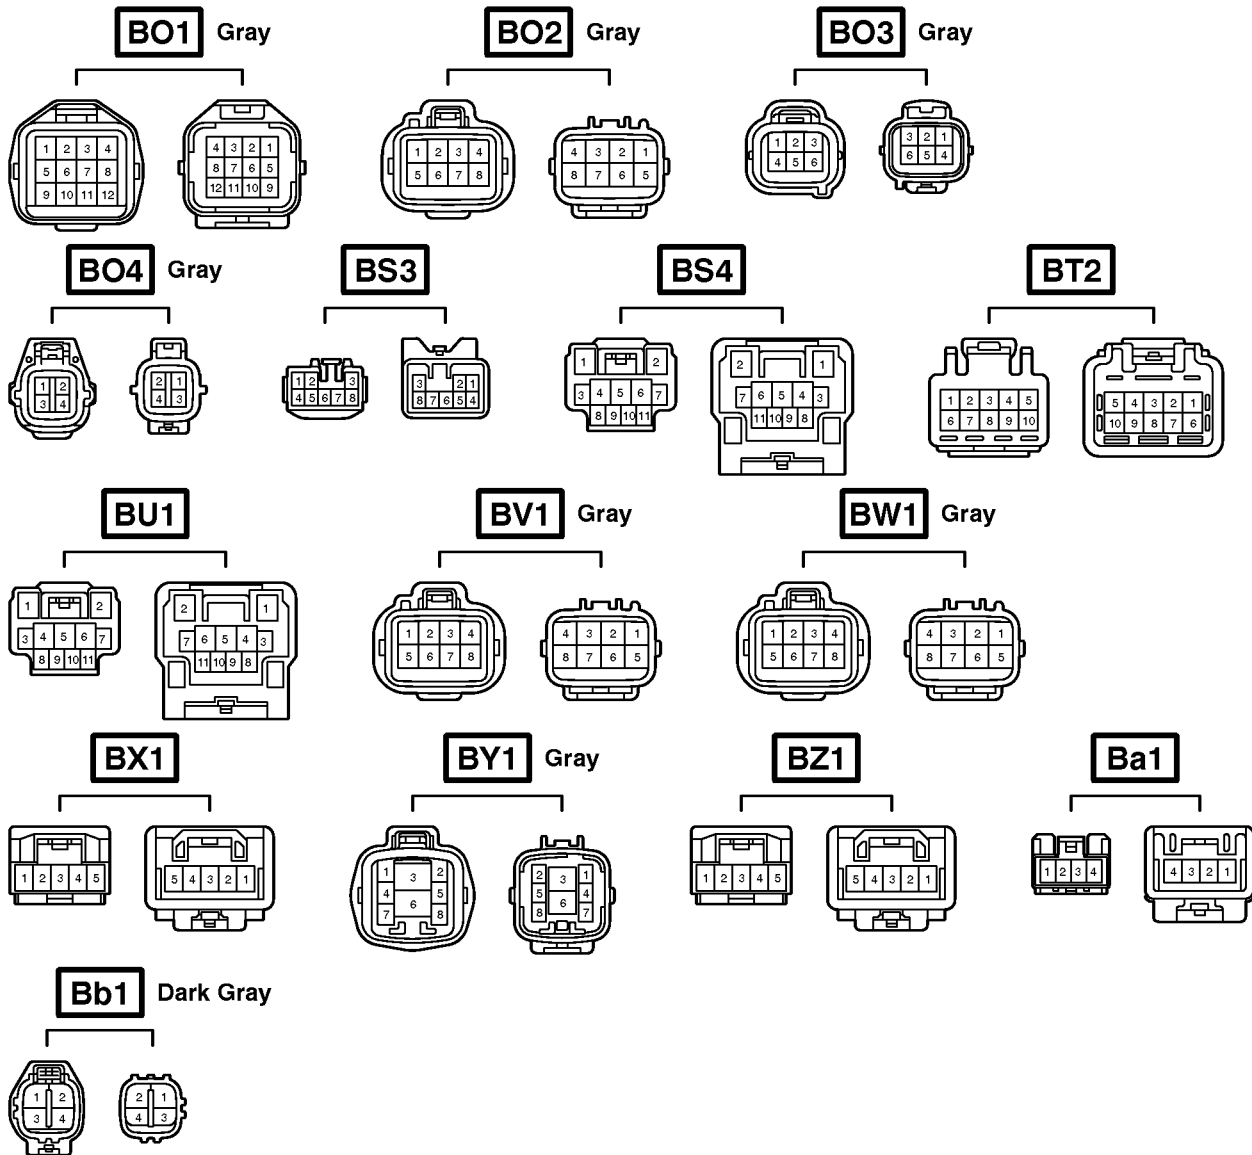


Code	Joining Wire Harness and Wire Harness (Connector Location)
BO1	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)
BO2	
BO3	
BO4	
BS3	Pillar No.1 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BS4	
BT2	Back Door Lower Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BU1	Roof No.3 Wire and Roof No.1 Wire (Front Side of Roof)
BV1	Door Lock LH Sub Wire and Front Door LH Wire (Front Door LH)
BW1	Door Lock RH Sub Wire and Front Door RH Wire (Front Door RH)
BX1	Floor No.1 Wire and Floor No.1 Wire (Near the Left Rear Suspension Support)
BY1	Frame No.4 Wire and Floor No.3 Wire (Left Side of Rear Floor Crossmember)
BZ1	Floor No.2 Wire and Floor No.2 Wire (Near the Right Rear Suspension Support)
Ba1	Pillar No.1 Wire and Floor No.3 Wire (Left Rear Side Quarter Panel)
Bb1	Floor No.3 Wire and Floor No.2 Wire (Right Side of Rear Floor Crossmember)

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

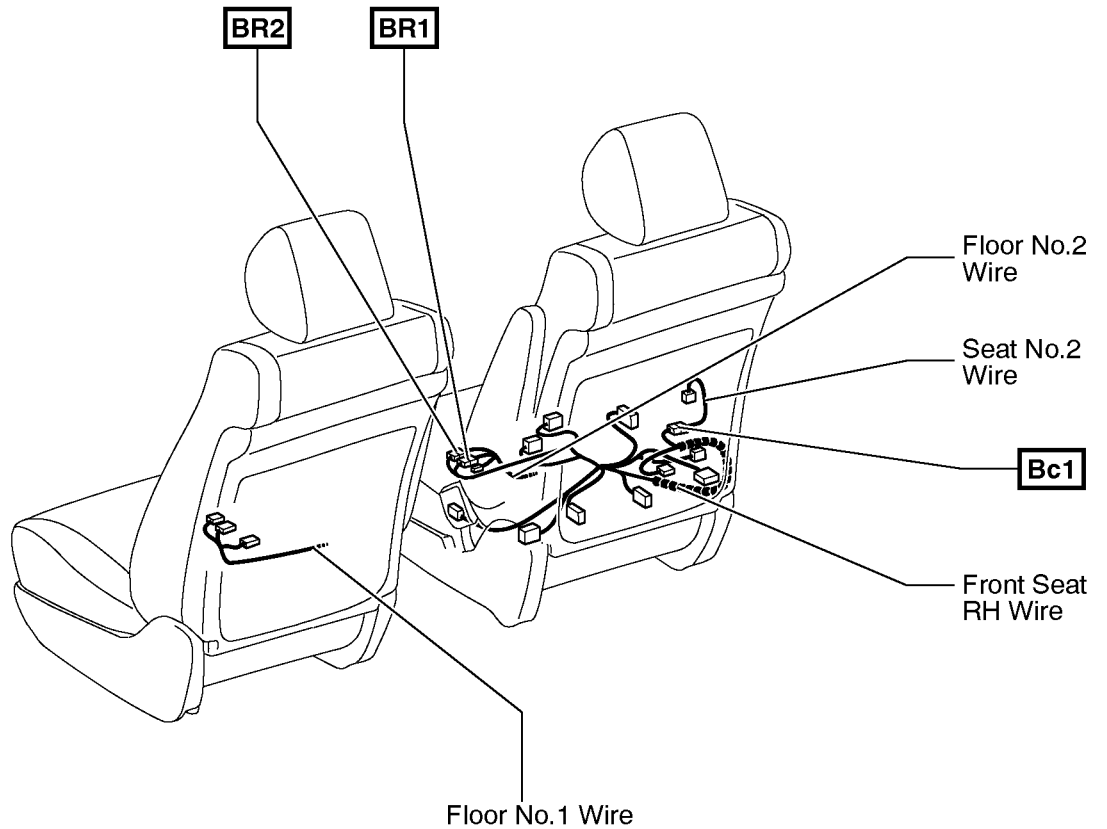

○ : Location of Splice Points

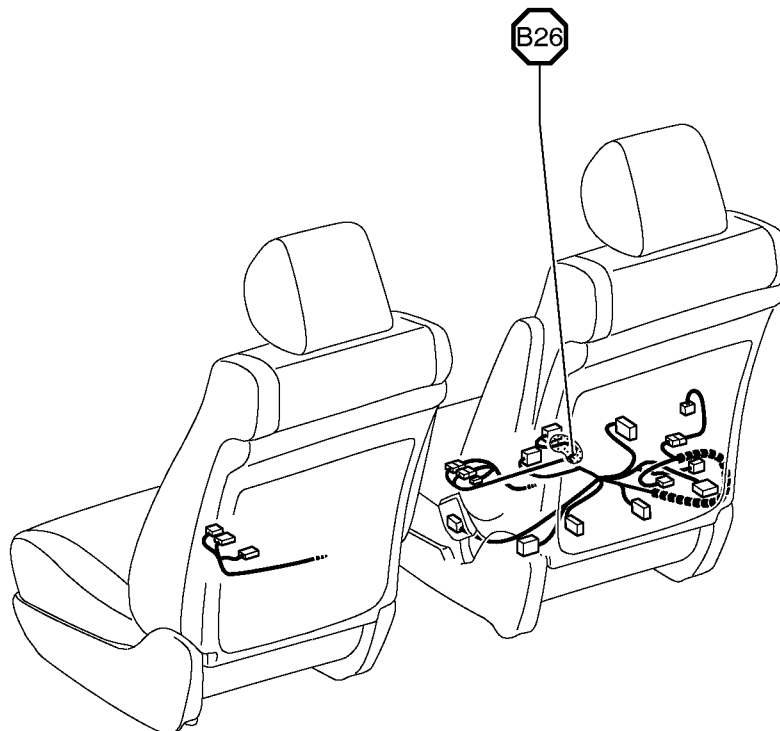

Connector Joining Wire Harness and Wire Harness

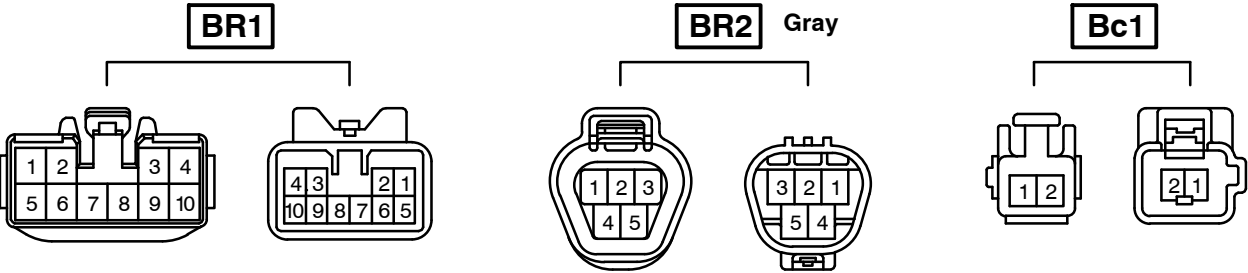

Code	Joining Wire Harness and Wire Harness (Connector Location)
BR1	Floor No.2 Wire and Front Seat RH Wire (Front Side Under the Front Passenger's Seat)
BR2	Floor No.2 Wire and Front Seat RH Wire (Front Side Under the Front Passenger's Seat)
Bc1	Seat No.2 Wire and Front Seat RH Wire (Rear Side Under the Front Passenger's Seat)