

# 2005 LX 470 ELECTRICAL WIRING DIAGRAM

|                                         | Section Code | Page |
|-----------------------------------------|--------------|------|
| INTRODUCTION .....                      | A ....       | 2    |
| HOW TO USE THIS MANUAL .....            | B ....       | 3    |
| TROUBLESHOOTING .....                   | C ....       | 12   |
| ABBREVIATIONS .....                     | D ....       | 17   |
| GLOSSARY OF TERMS AND SYMBOLS ....      | E ....       | 18   |
| RELAY LOCATIONS .....                   | F ....       | 20   |
| ELECTRICAL WIRING ROUTING .....         | G ....       | 68   |
| SYSTEM CIRCUITS .....                   | H ....       | 98   |
| GROUND POINT .....                      | I ....       | 422  |
| POWER SOURCE (Current Flow Chart) ..... | J ....       | 432  |
| CONNECTOR LIST .....                    | K ....       | 444  |
| PART NUMBER OF CONNECTORS .....         | L ....       | 458  |
| OVERALL ELECTRICAL WIRING DIAGRAM .     | M ....       | 464  |