





F RELAY LOCATIONS

[Engine Compartment]

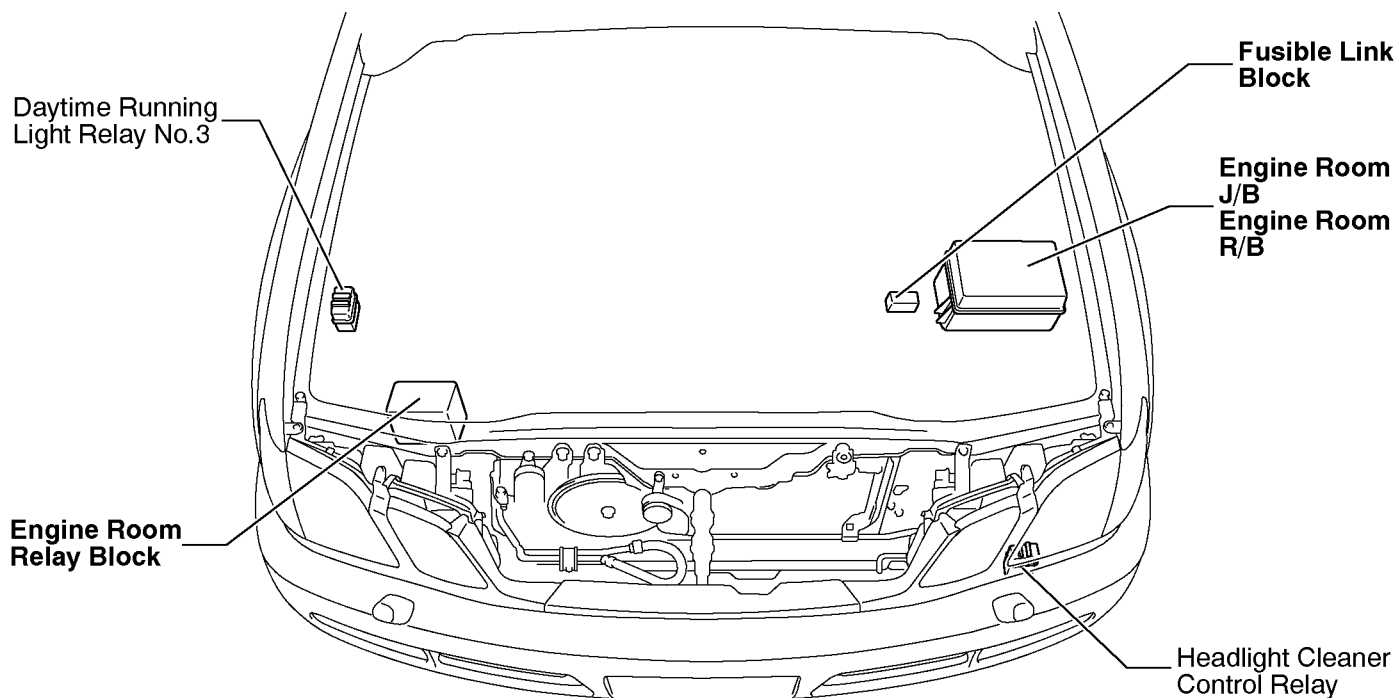

[Instrument Panel]

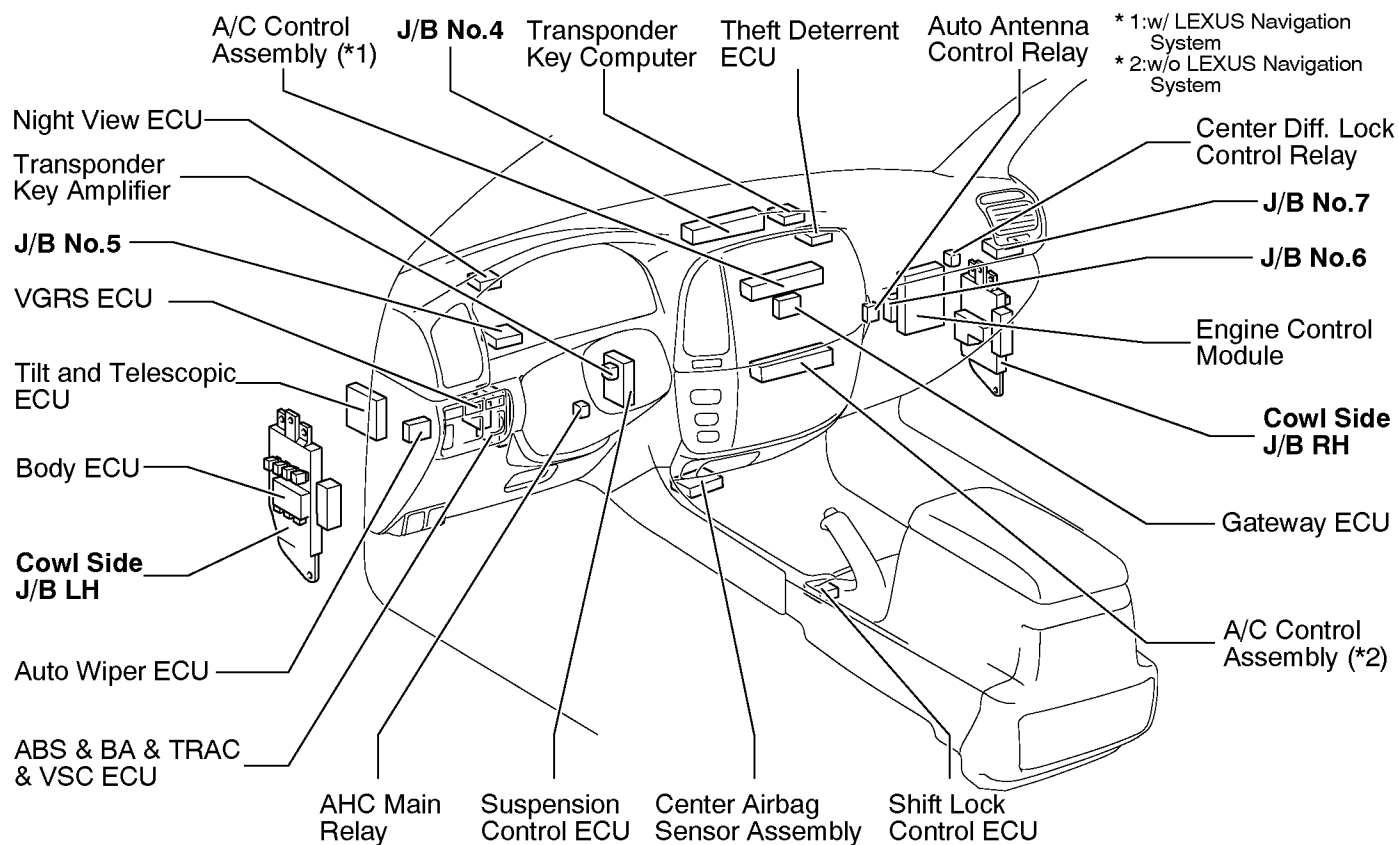


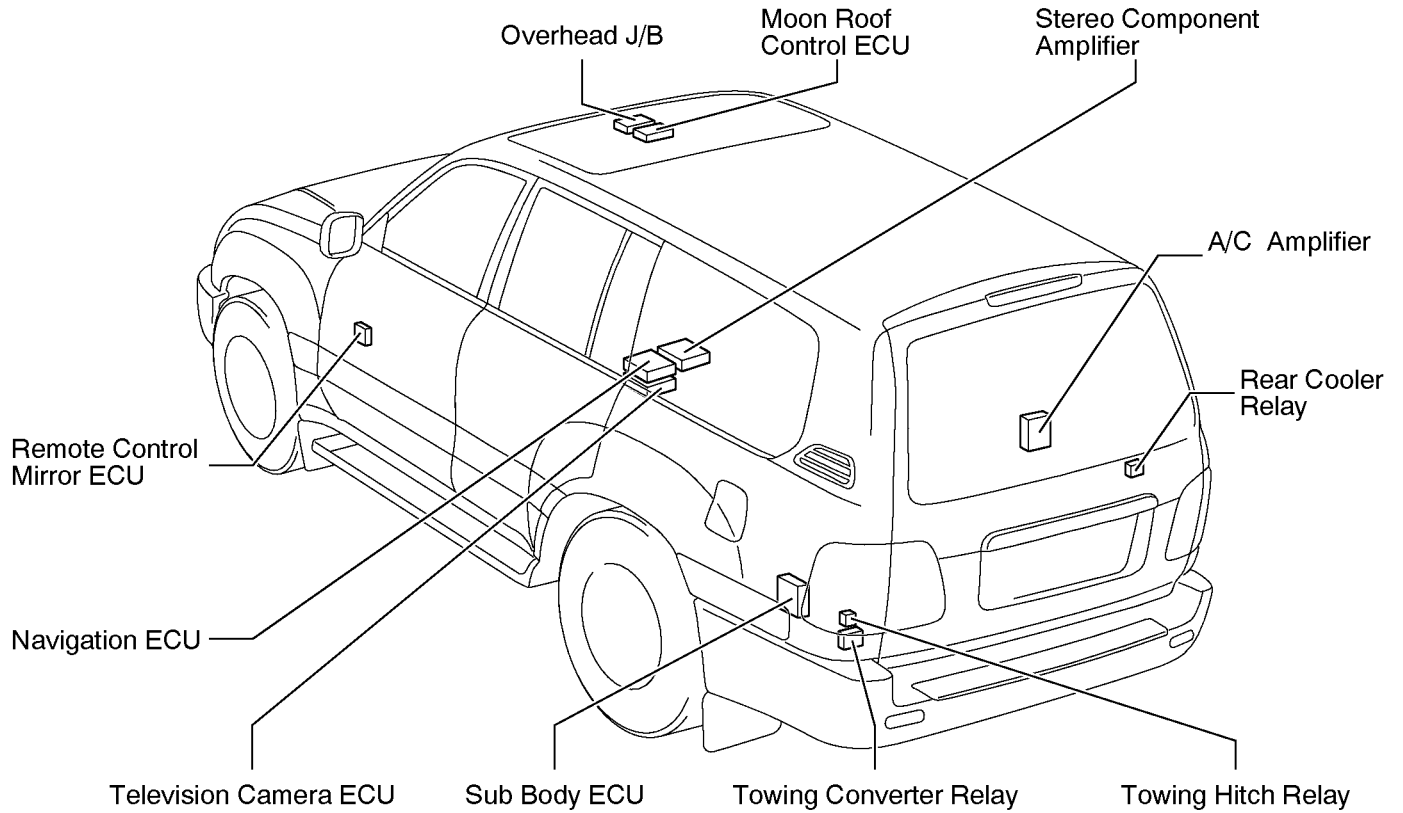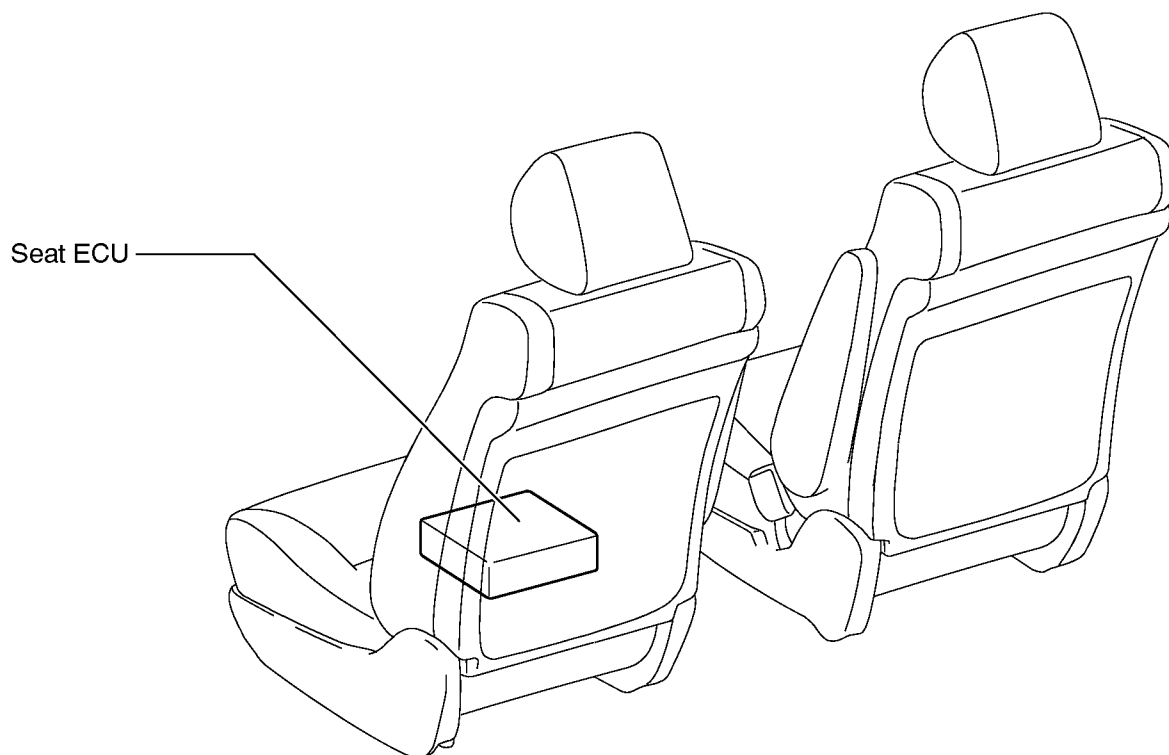
[Body]**[Seat]**

F RELAY LOCATIONS

○ : Engine Room J/B	Engine Compartment Left (See Page 20)
① : Engine Room R/B	

(Inner Circuit : See Page 26)

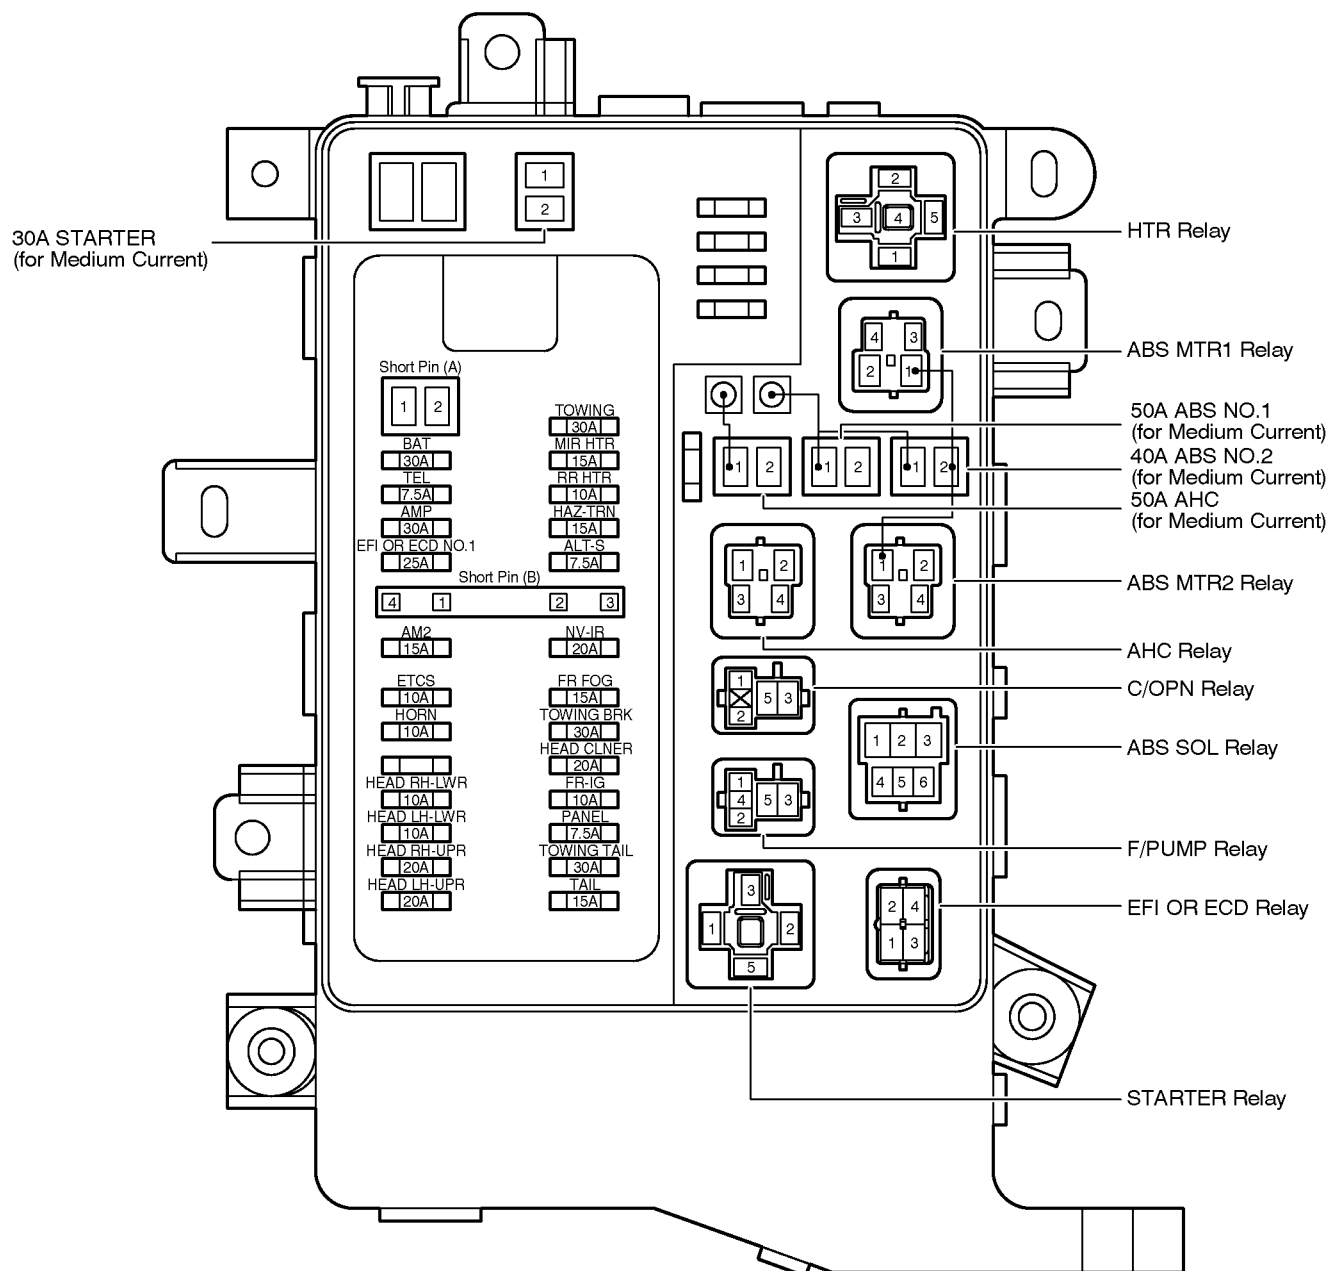

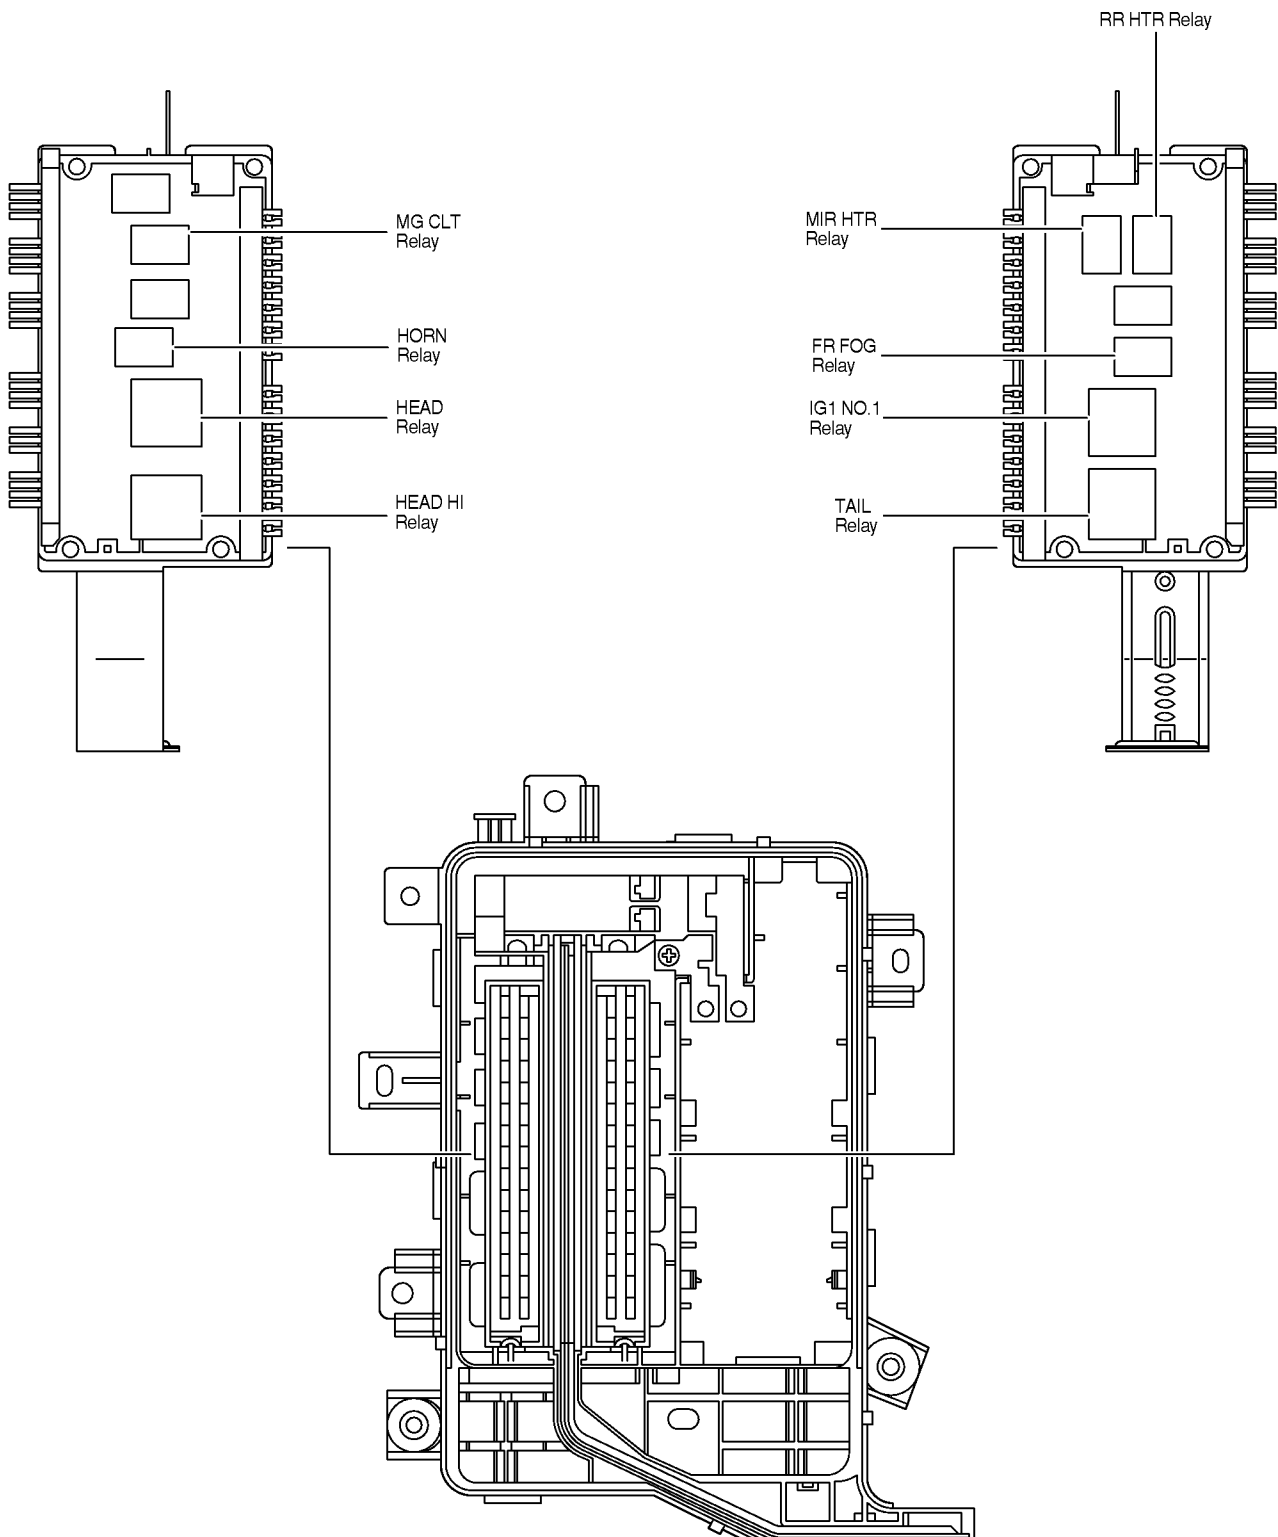






F RELAY LOCATIONS

○ : Engine Room J/B

Engine Compartment Left (See Page 20)


(Inner Circuit : See Page 26)

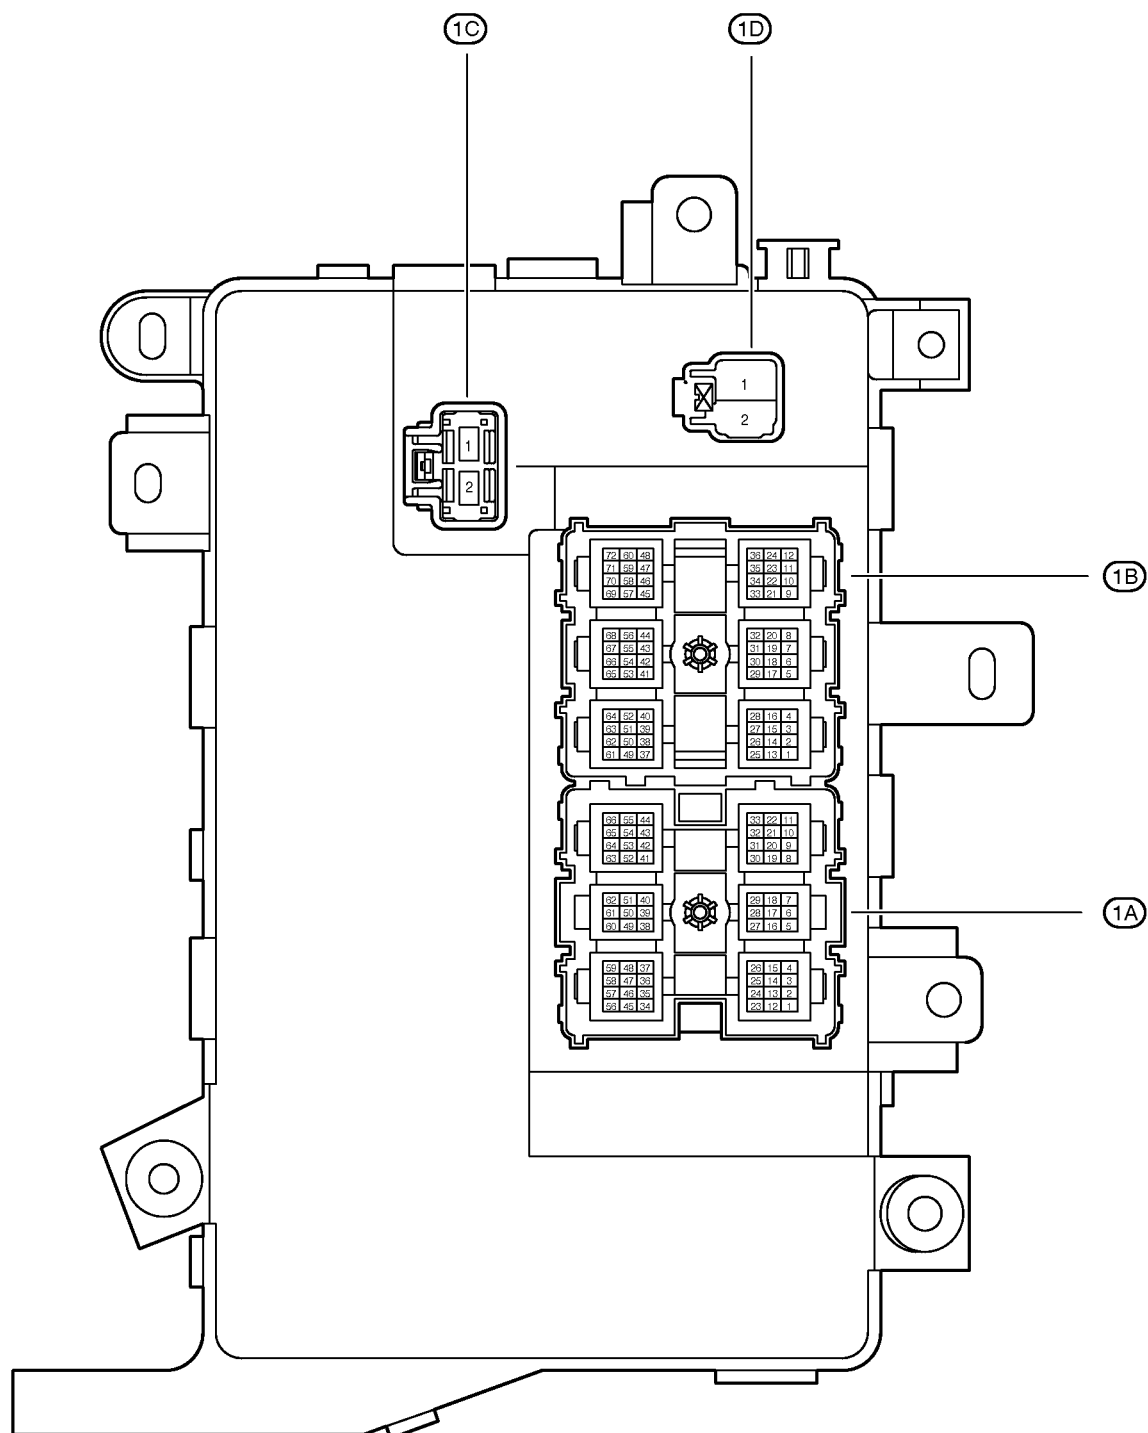

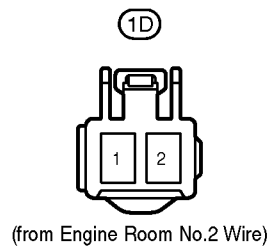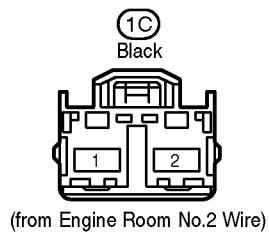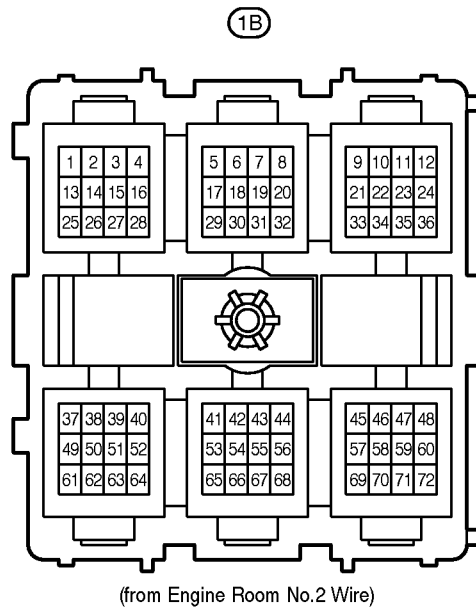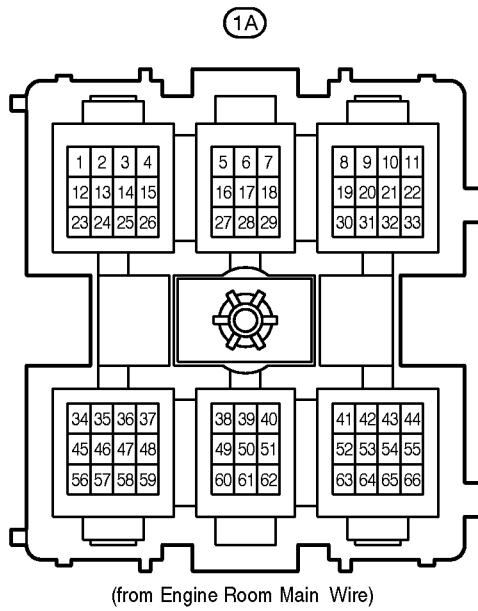


F RELAY LOCATIONS

[Engine Room J/B Inner Circuit]

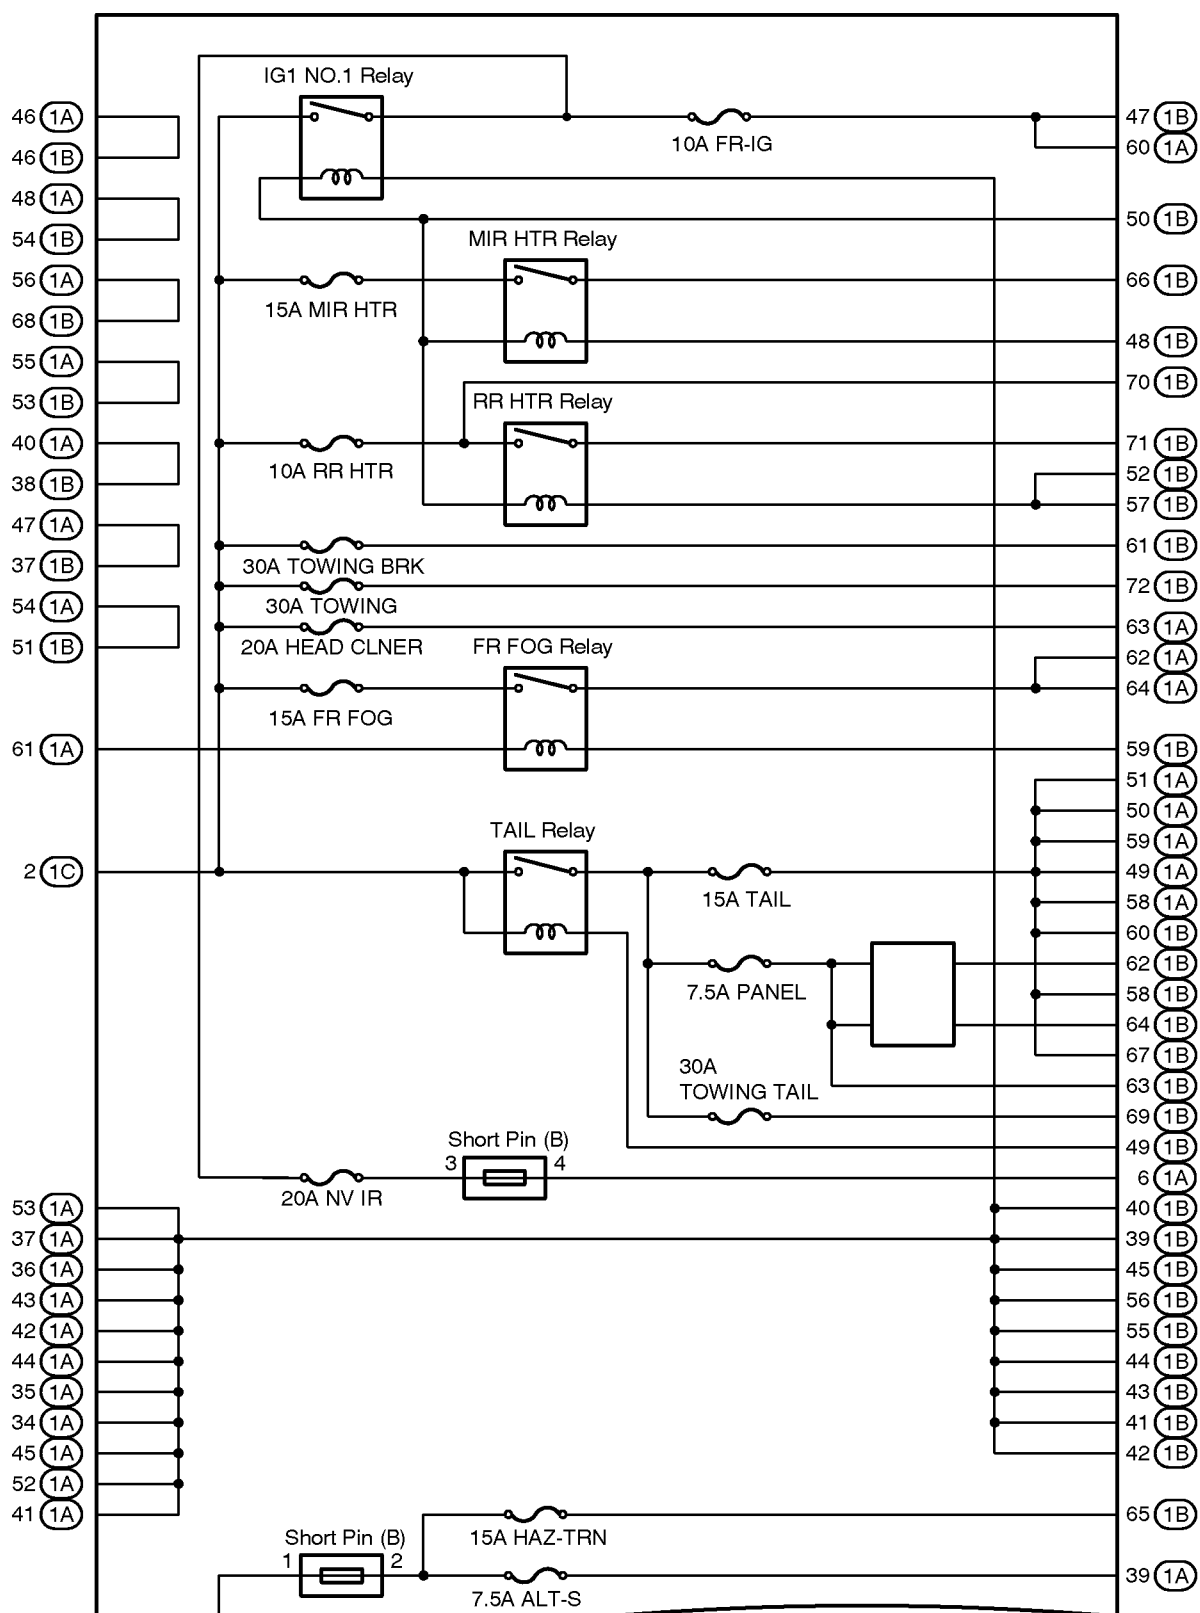

(Cont. next page)

(Cont'd)

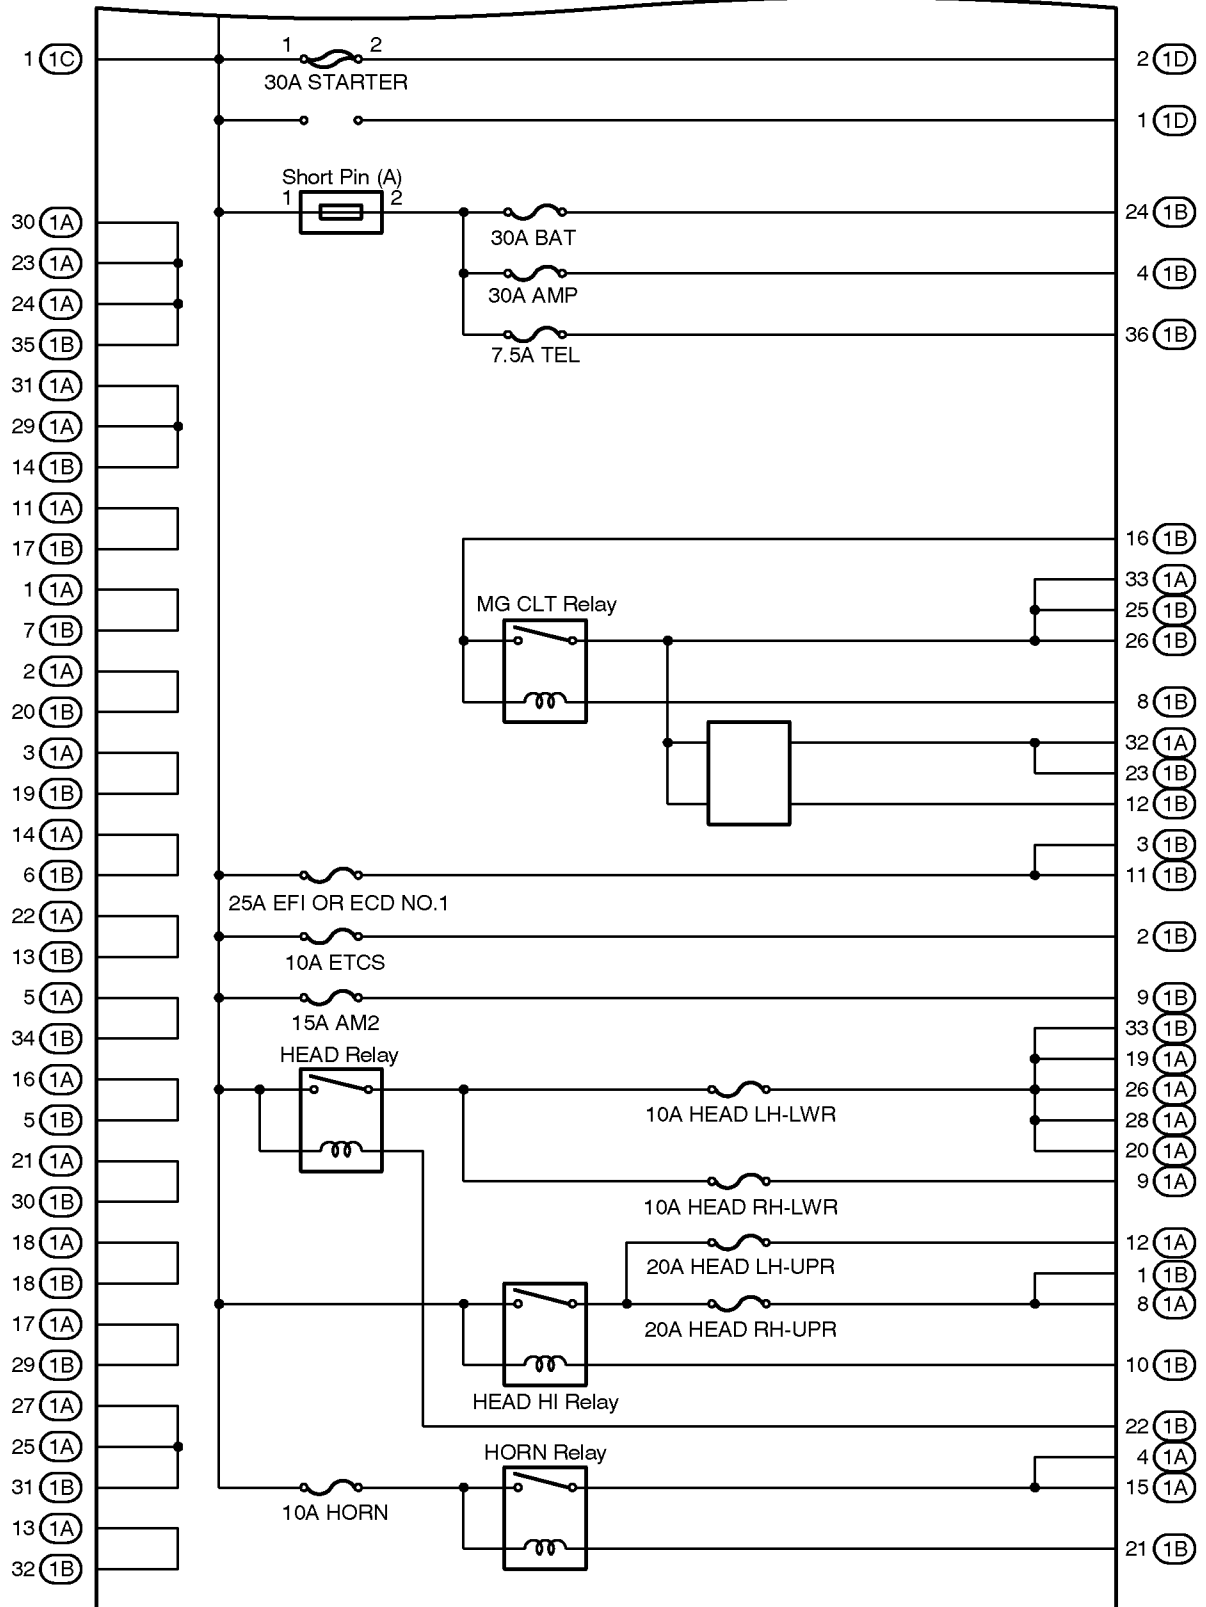



F RELAY LOCATIONS

 : Cowl Side J/B LH

Left Kick Panel (See Page 20)

(Inner Circuit : See Page 34)

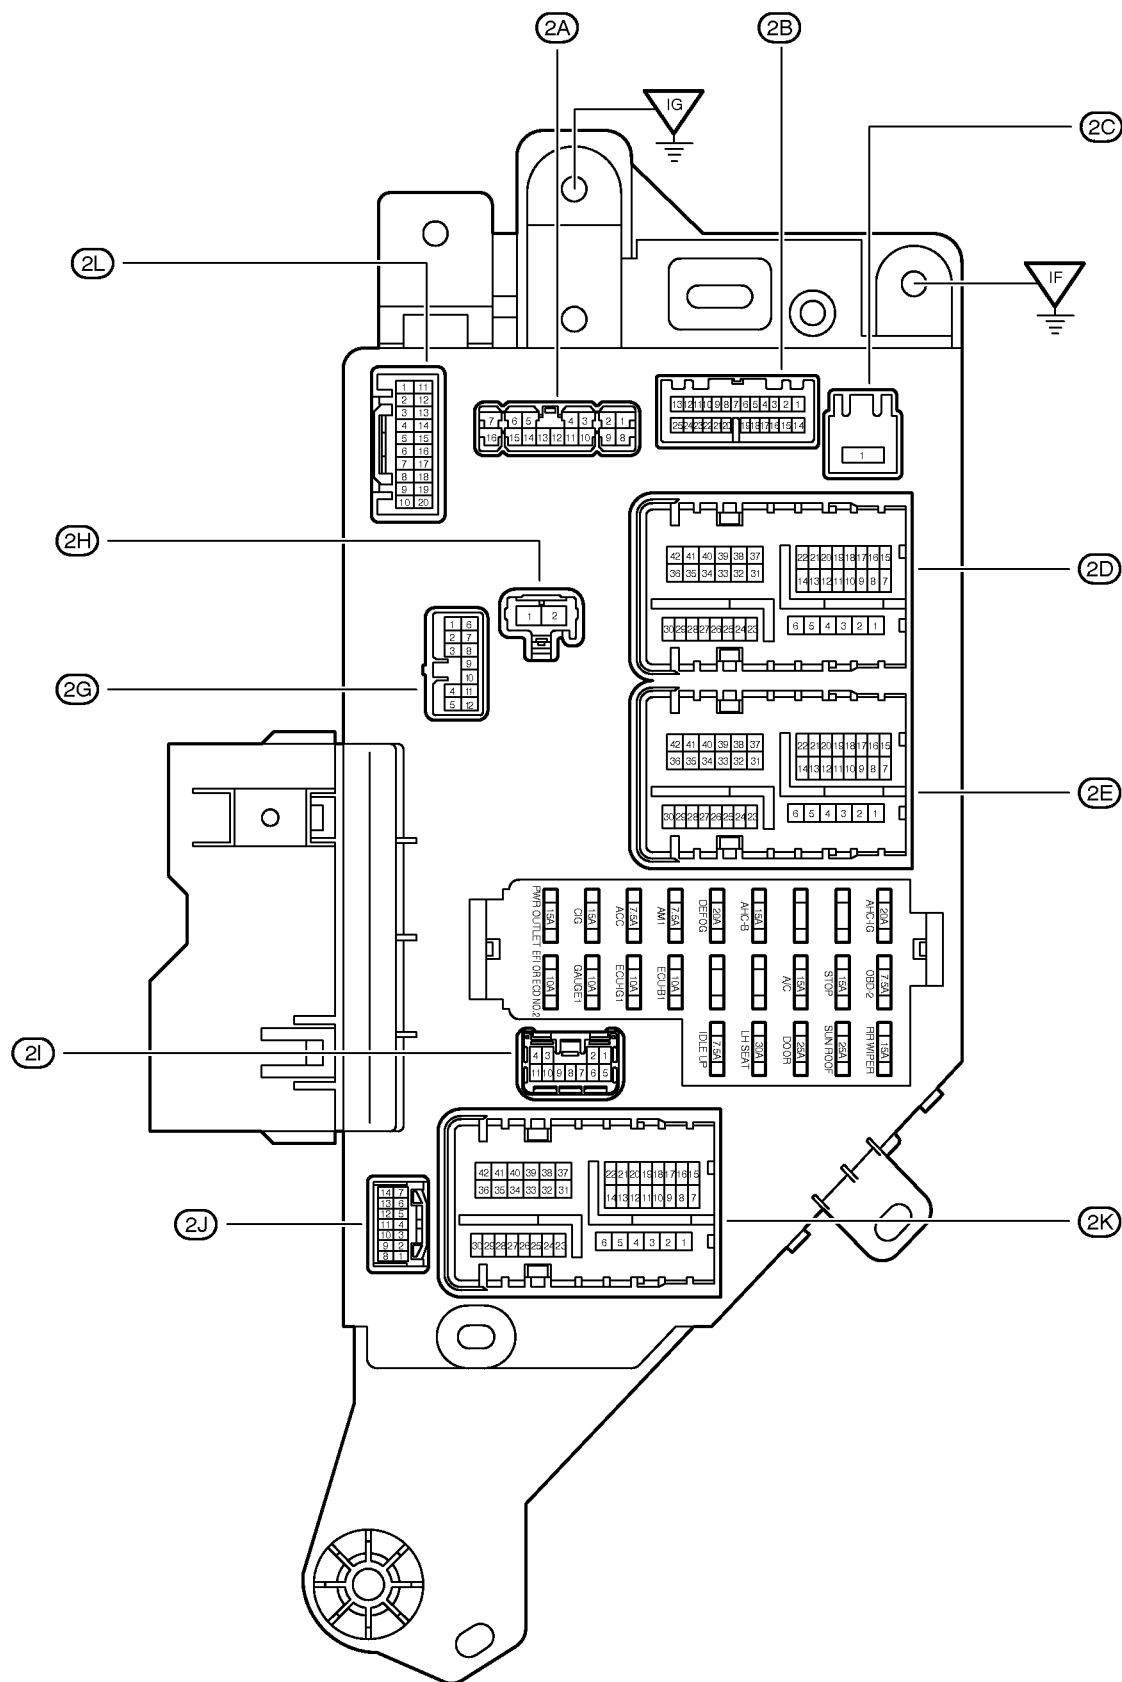


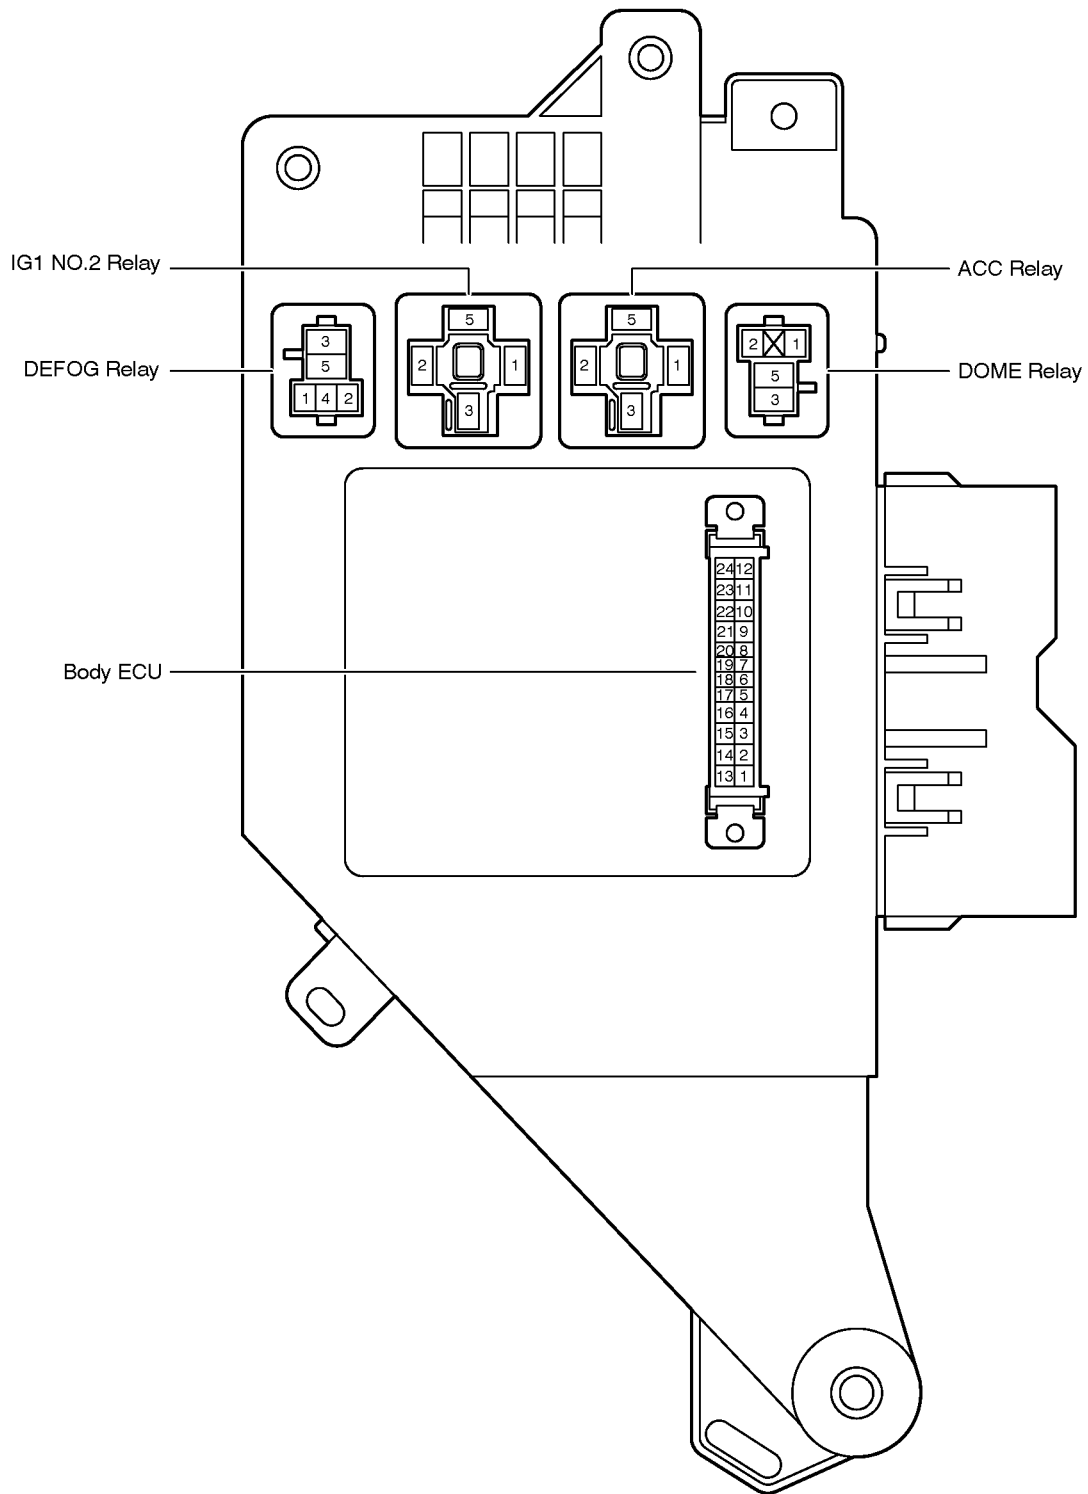

F RELAY LOCATIONS

 : Cowl Side J/B LH

Left Kick Panel (See Page 20)
(Inner Circuit : See Page 34)









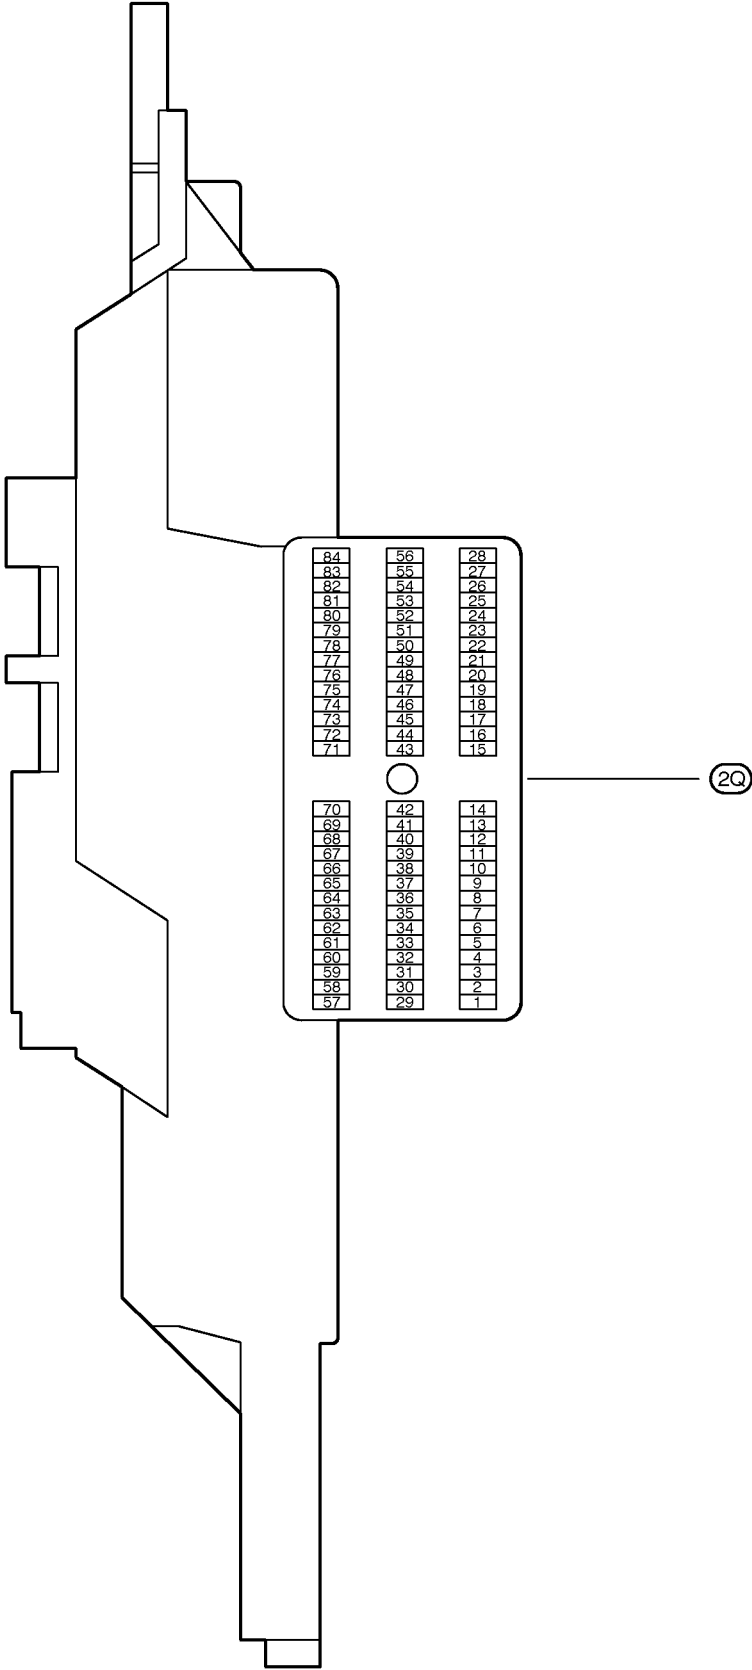





F RELAY LOCATIONS

 : Cowl Side J/B LH

Left Kick Panel (See Page 20)


(Inner Circuit : See Page 34)

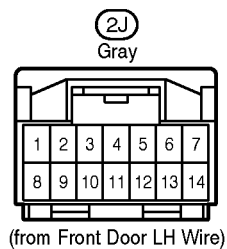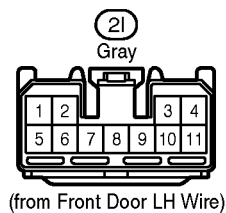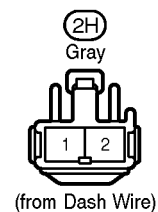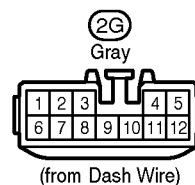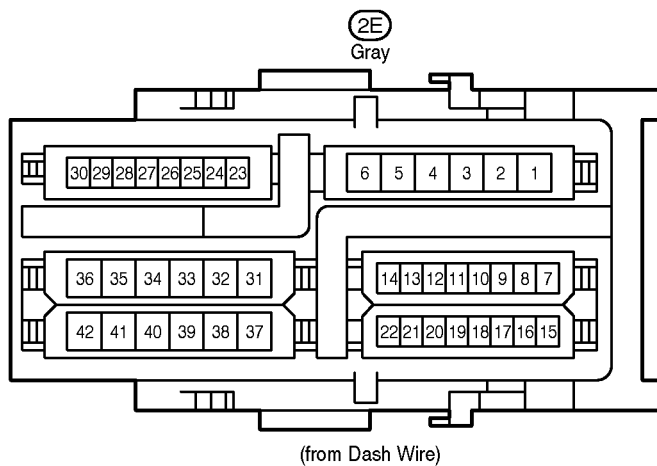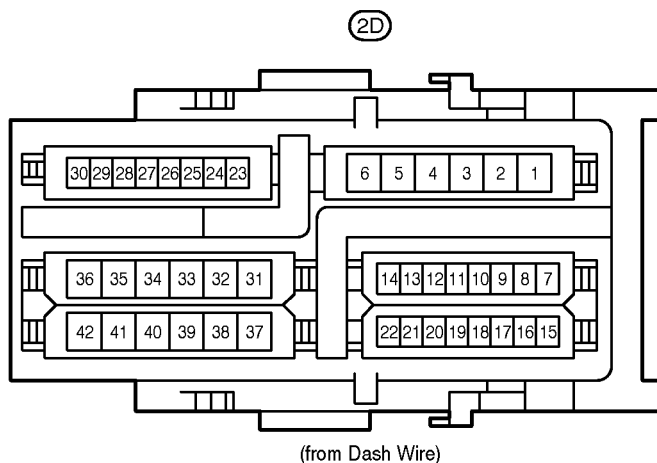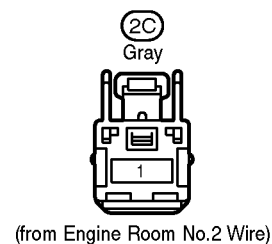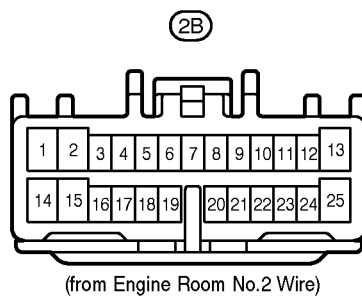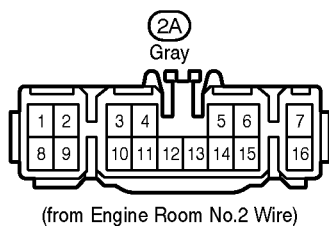

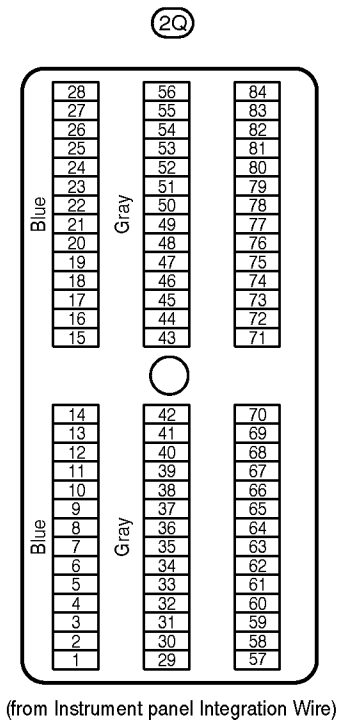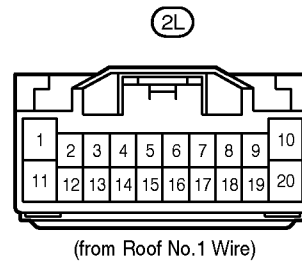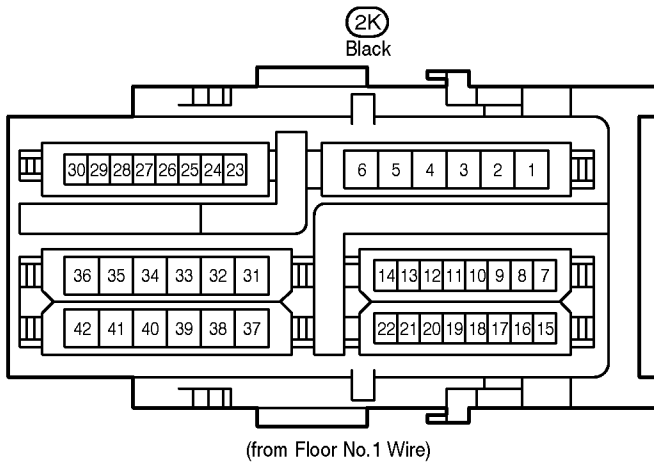

F RELAY LOCATIONS

[Cowl Side J/B LH Inner Circuit]

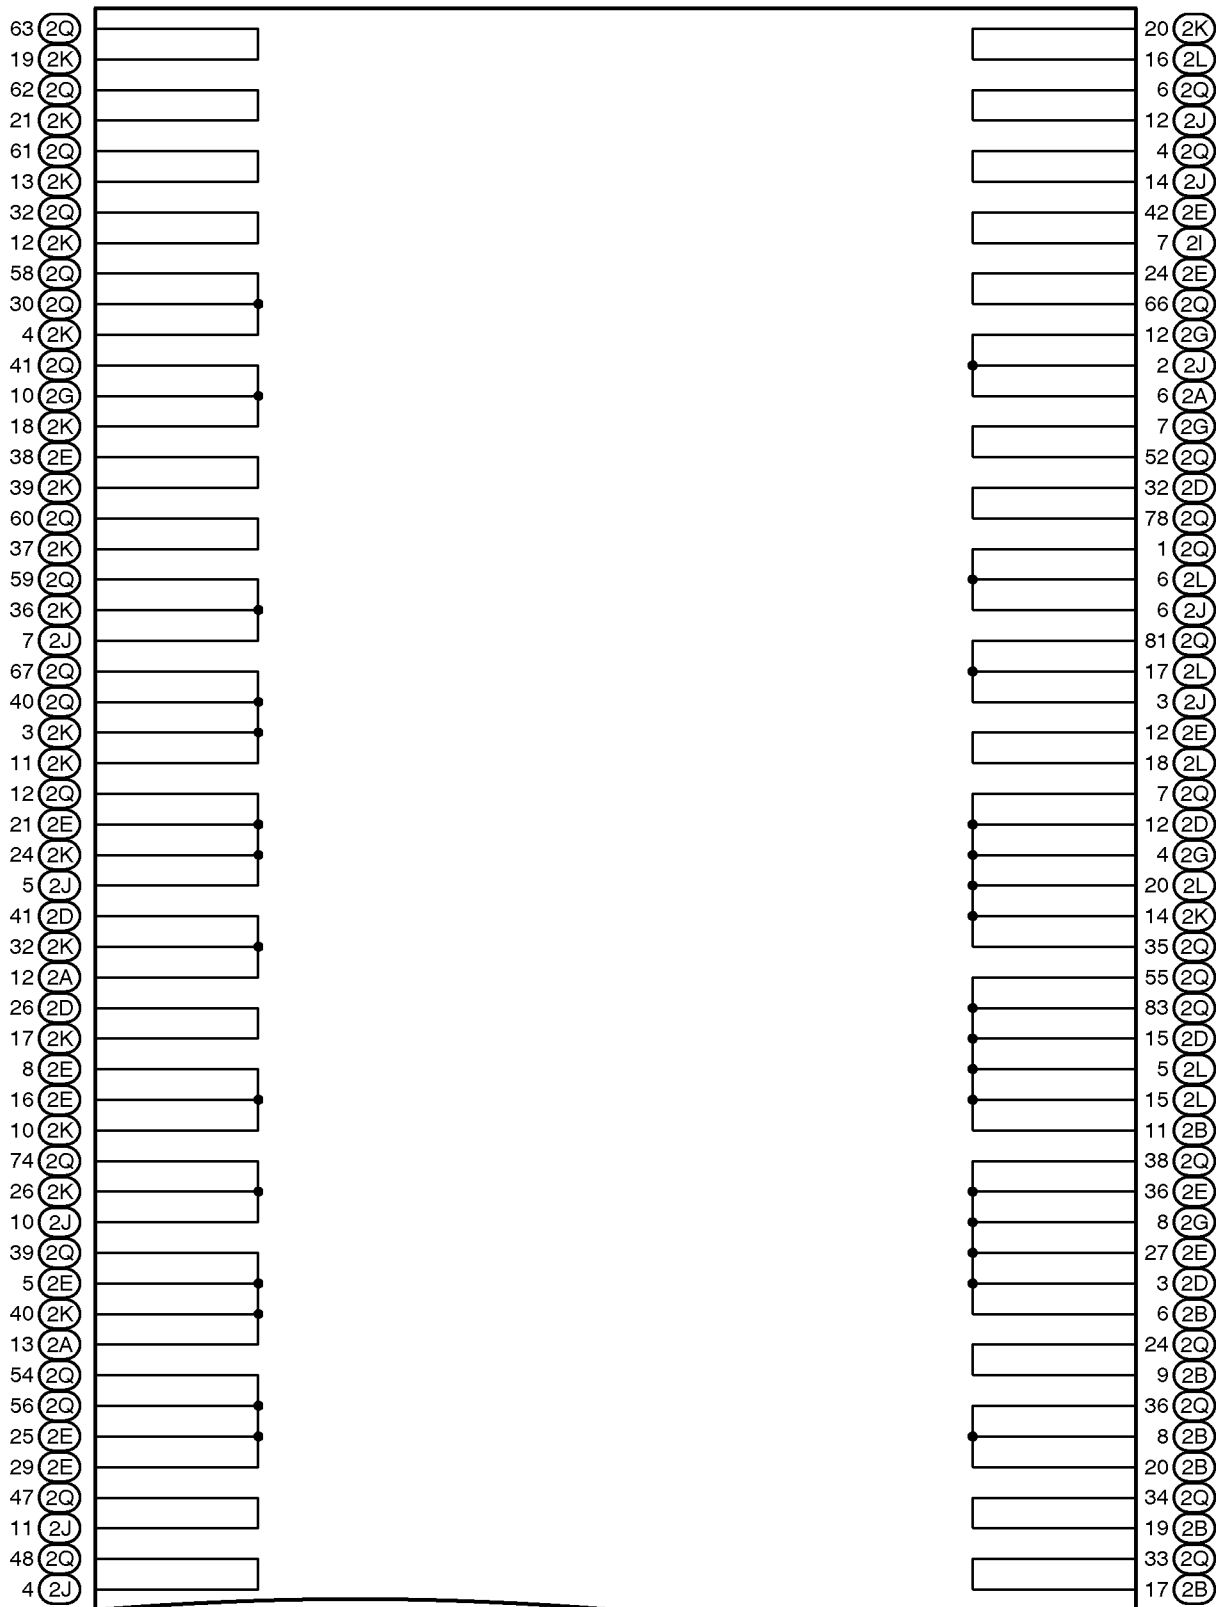

(Cont. next page)


(Cont'd)

53	(2Q)	
16	(2A)	
42	(2Q)	
68	(2Q)	•
2	(2B)	
42	(2D)	
25	(2B)	
40	(2D)	
14	(2B)	
38	(2D)	
1	(2A)	
33	(2E)	
1	(2B)	
8	(2D)	
10	(2D)	•
9	(2A)	
6	(2G)	
16	(2B)	
41	(2E)	
10	(2A)	
9	(2G)	
4	(2D)	•
7	(2B)	
39	(2D)	
14	(2A)	•
34	(2K)	
49	(2Q)	
1	(2E)	•
4	(2A)	
6	(2E)	
8	(2A)	
2	(2E)	
15	(2B)	
4	(2E)	
2	(2A)	
29	(2D)	
33	(2D)	•
15	(2A)	
29	(2Q)	
31	(2Q)	•
4	(2B)	•
27	(2K)	
14	(2E)	
37	(2Q)	
28	(2Q)	
84	(2Q)	•
30	(2K)	•
1	(2J)	
72	(2Q)	
28	(2K)	•
8	(2J)	

(Cont. next page)


F RELAY LOCATIONS

[Cowl Side J/B LH Inner Circuit]

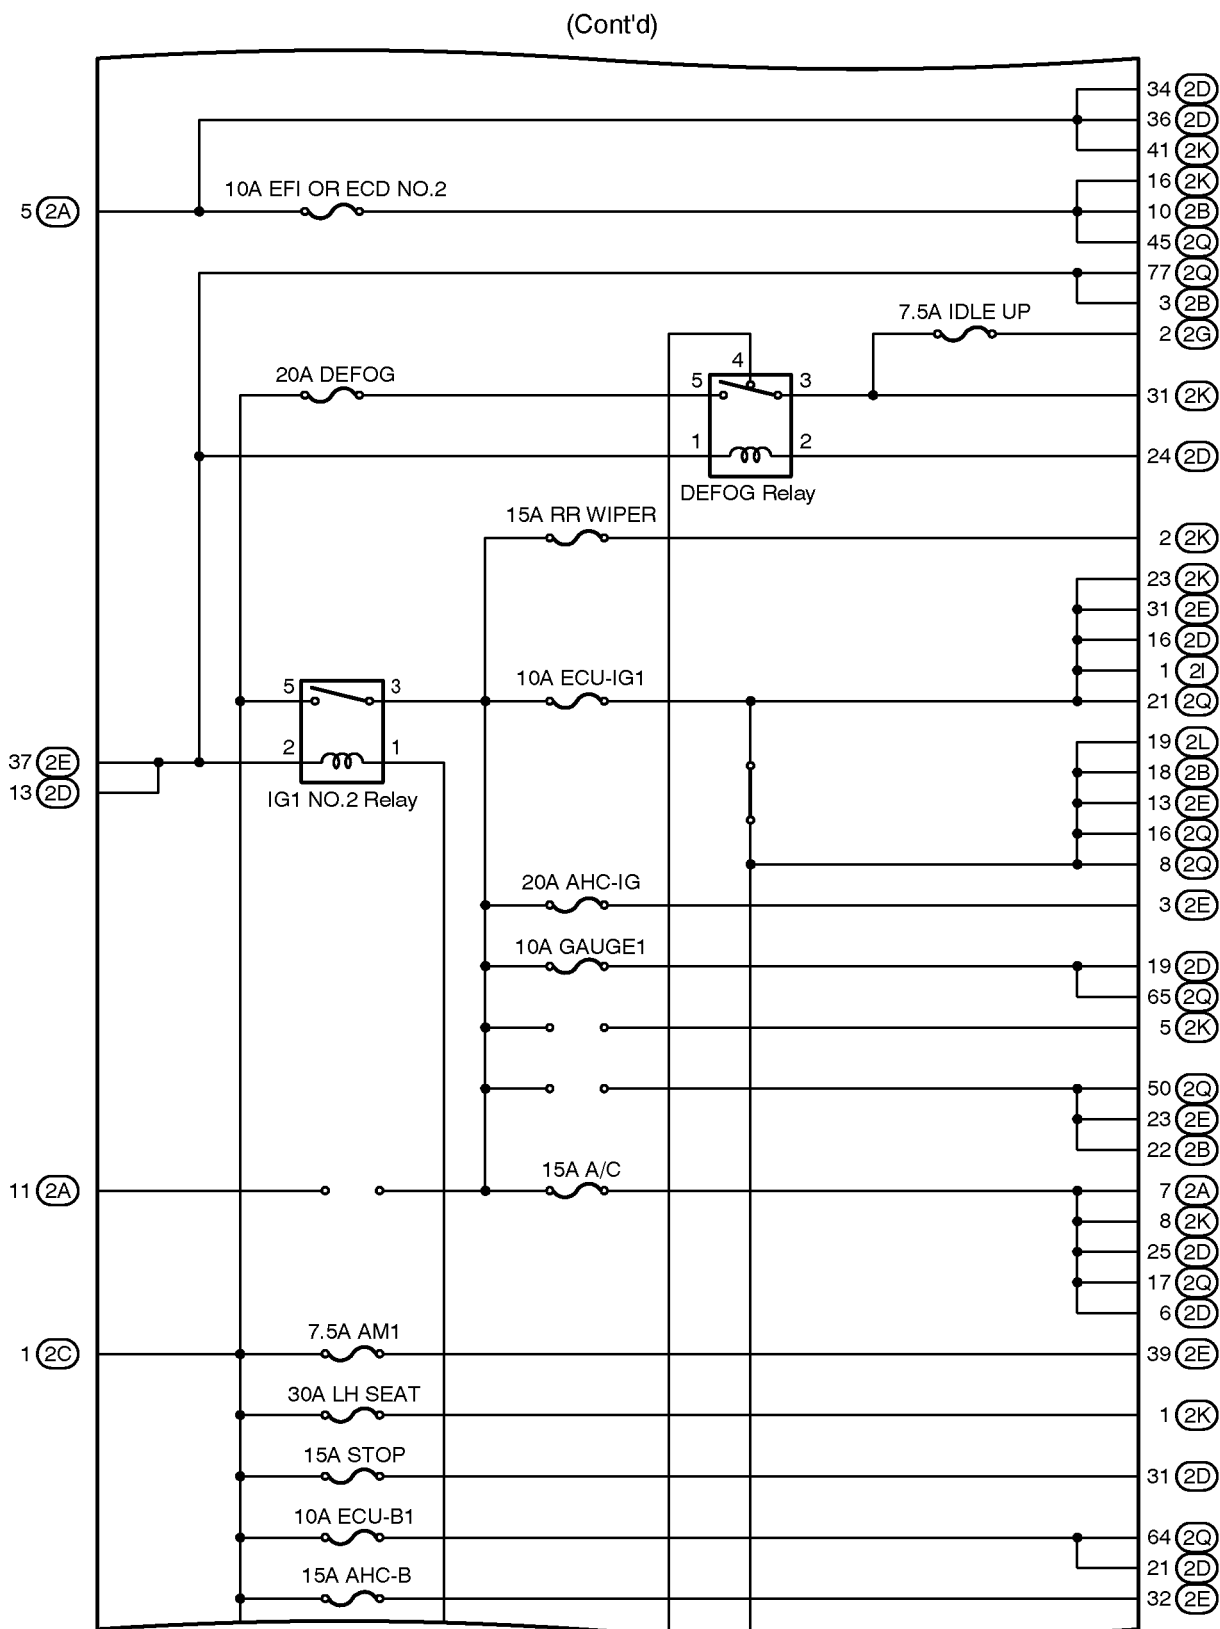

(Cont. next page)


(Cont'd)

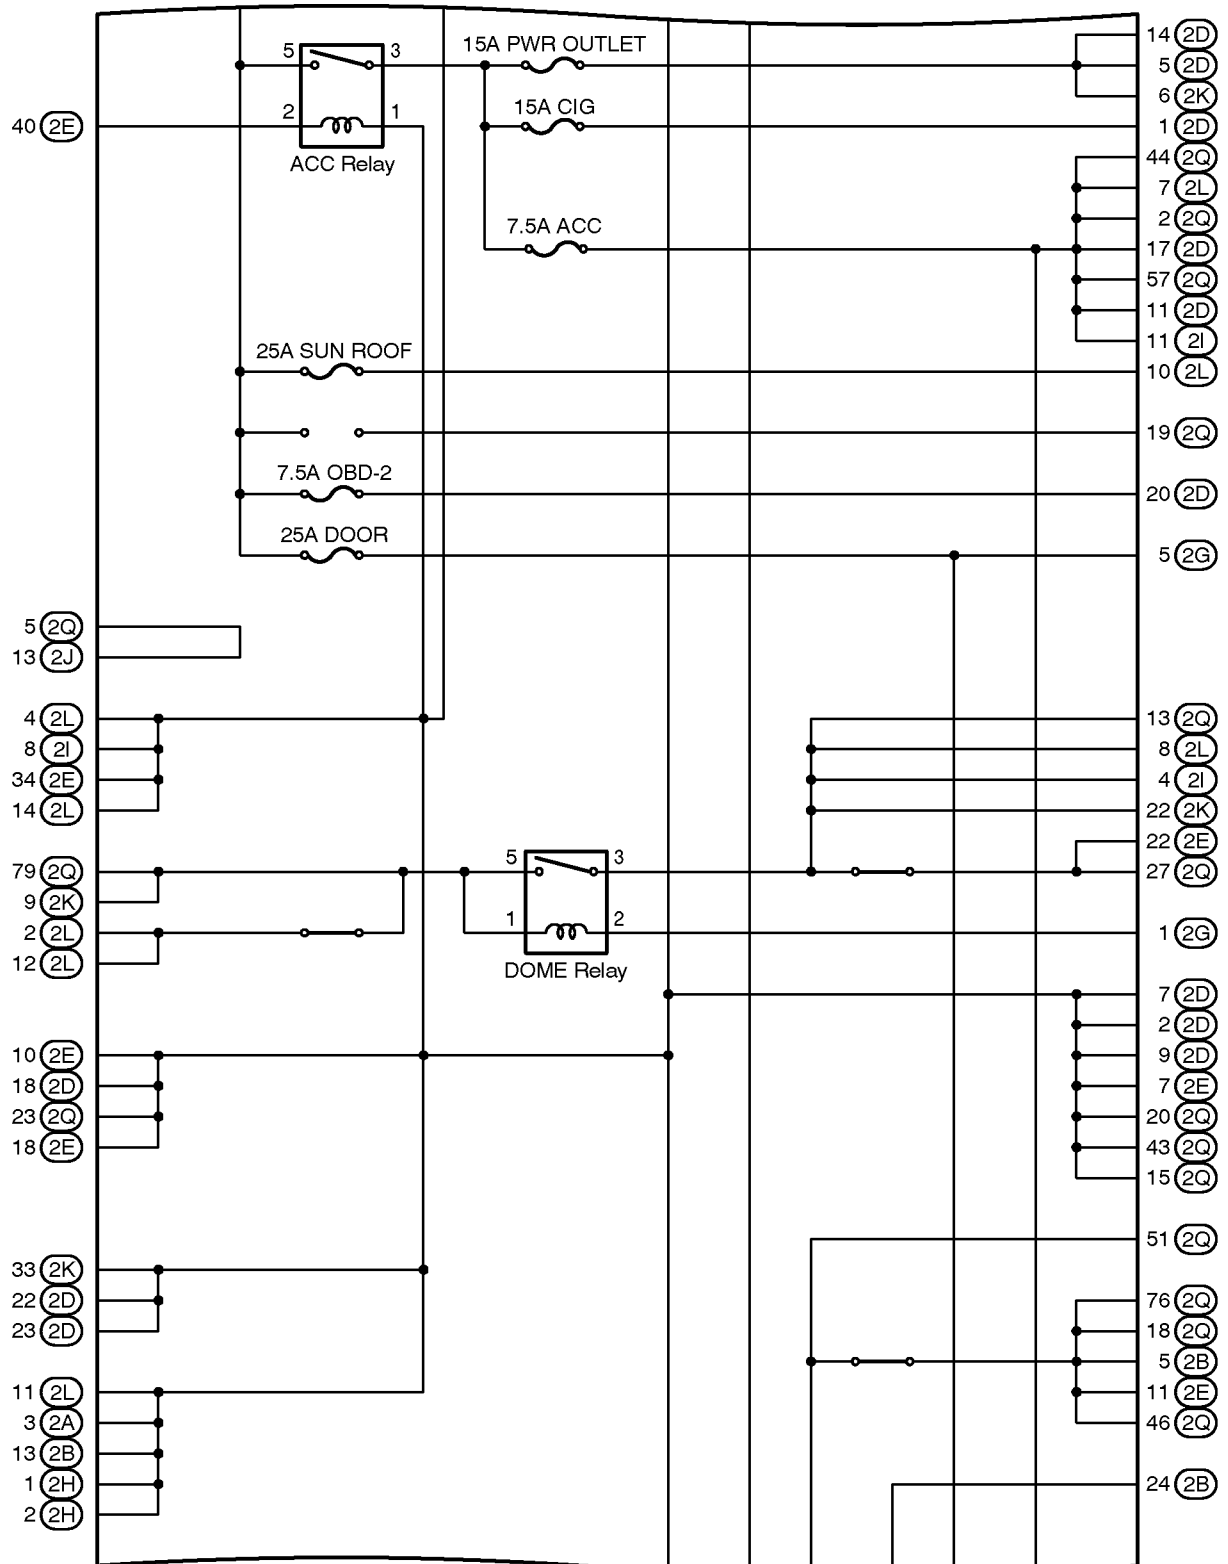

(Cont. next page)

F RELAY LOCATIONS

[Cowl Side J/B LH Inner Circuit]

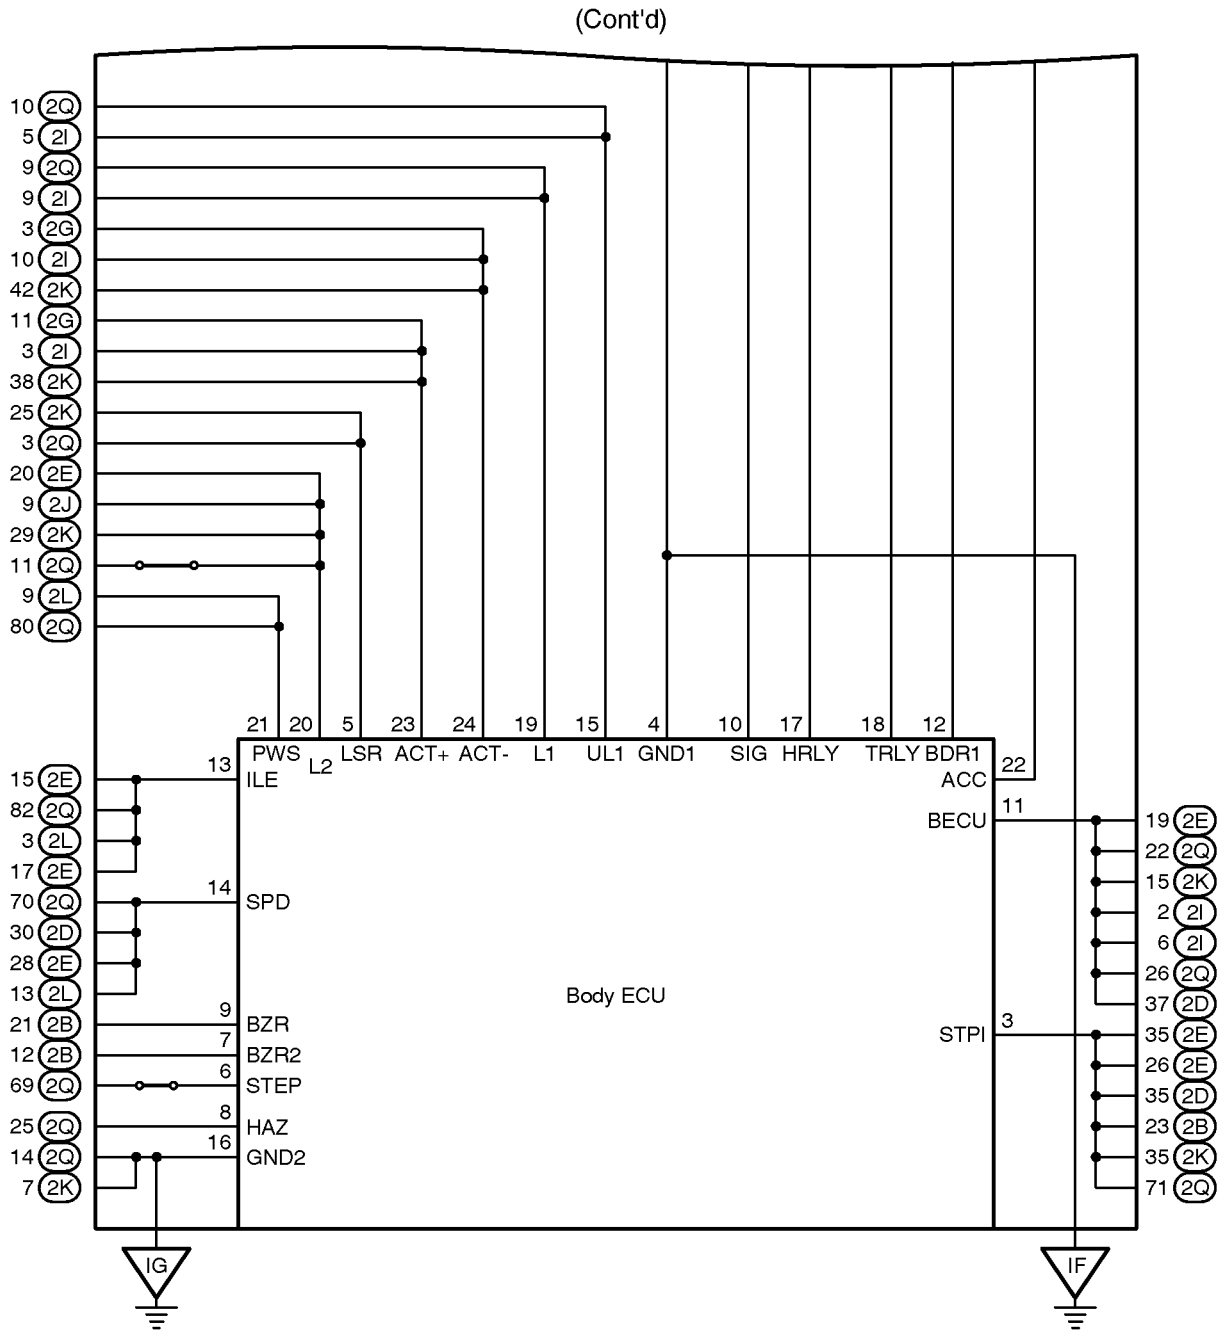



F RELAY LOCATIONS

 : Cowl Side J/B RH

Right Kick Panel (See Page 20)


(Inner Circuit : See Page 46)

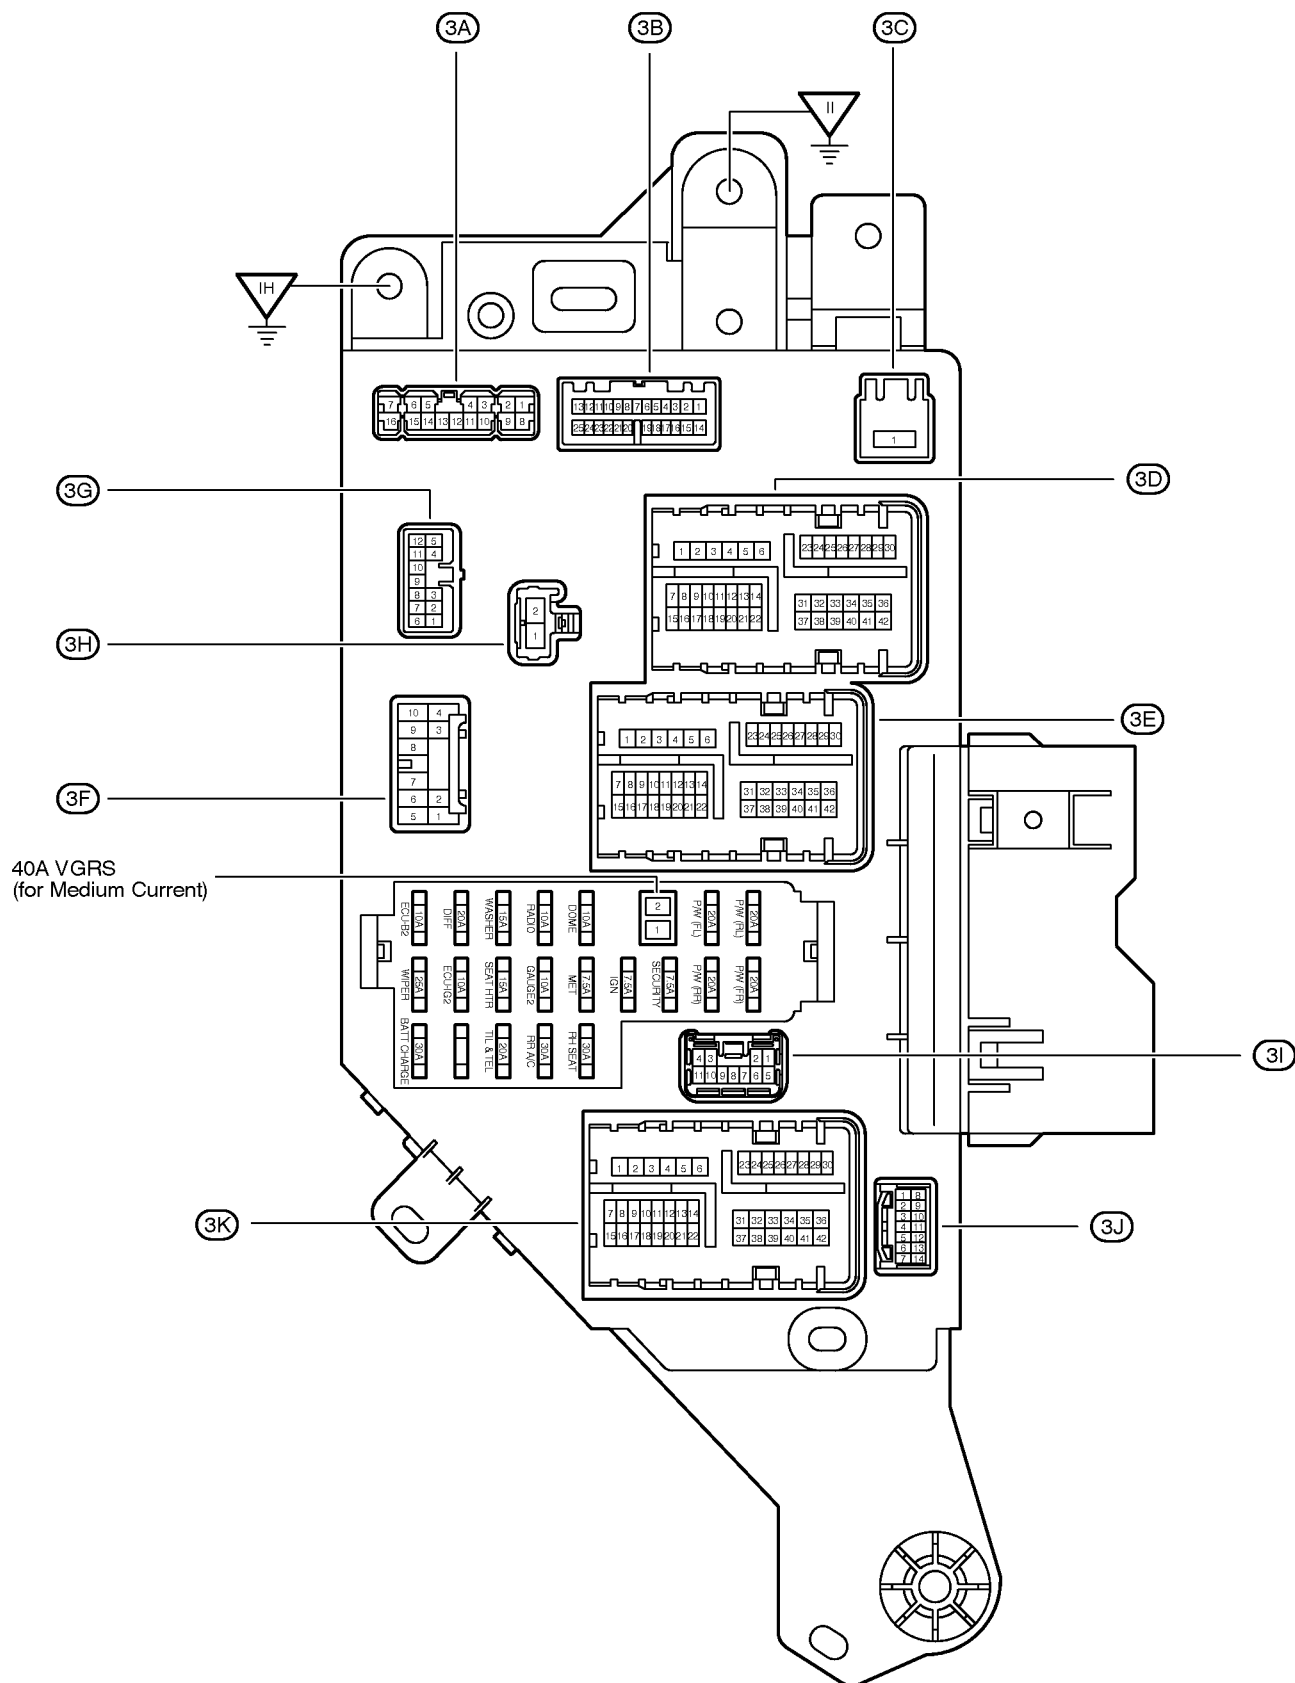


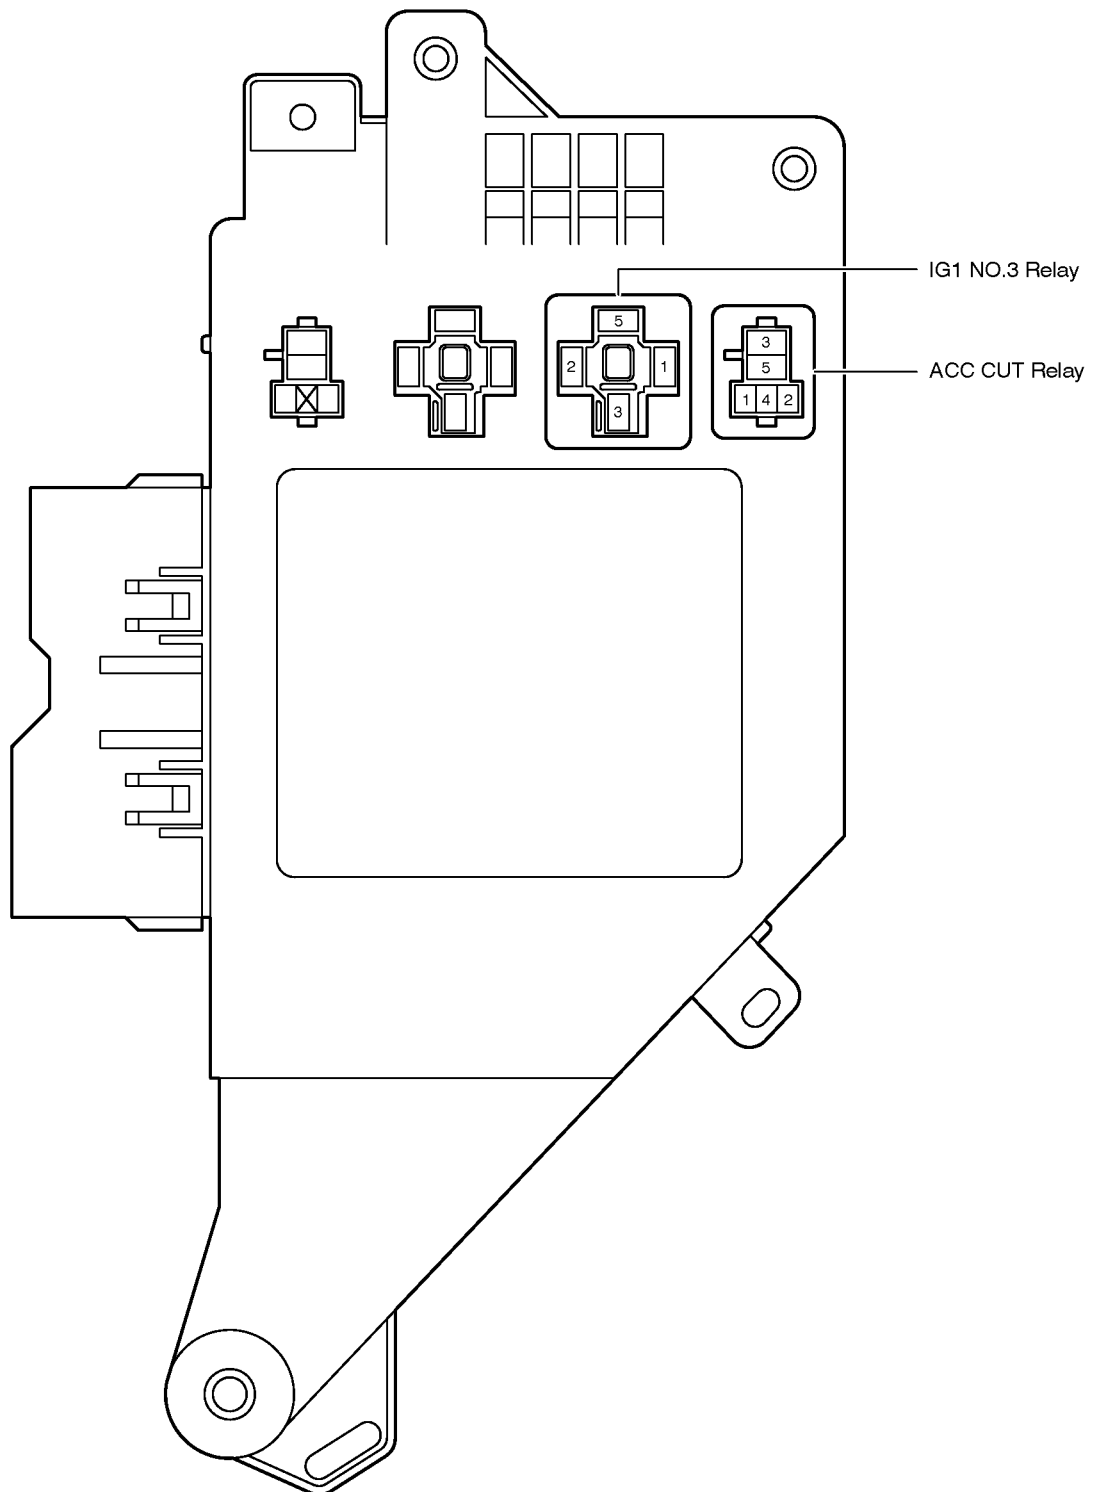

F RELAY LOCATIONS

 : Cowl Side J/B RH	Right Kick Panel (See Page 20) (Inner Circuit : See Page 46)
--	---

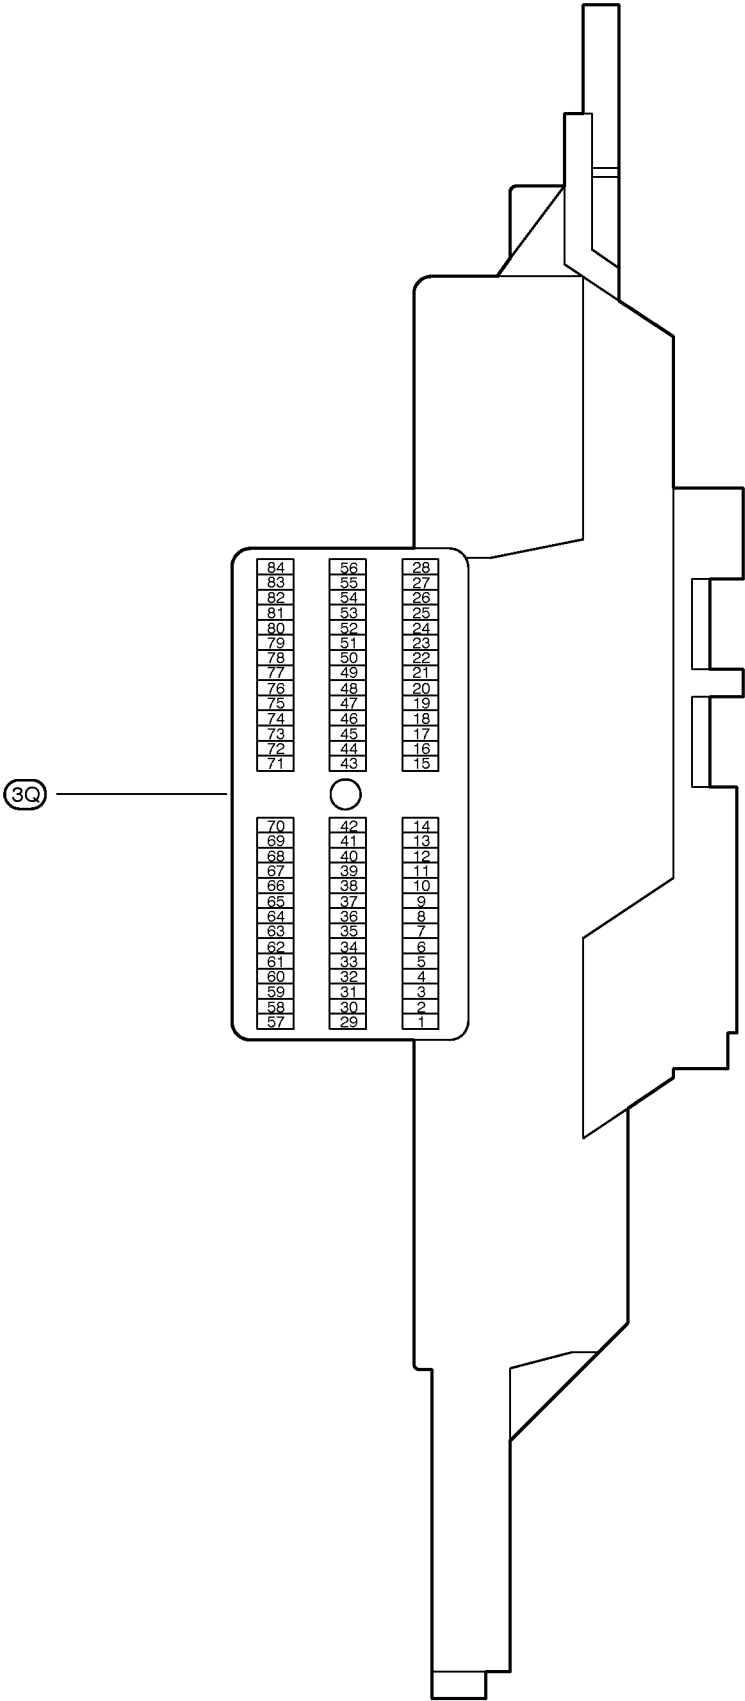

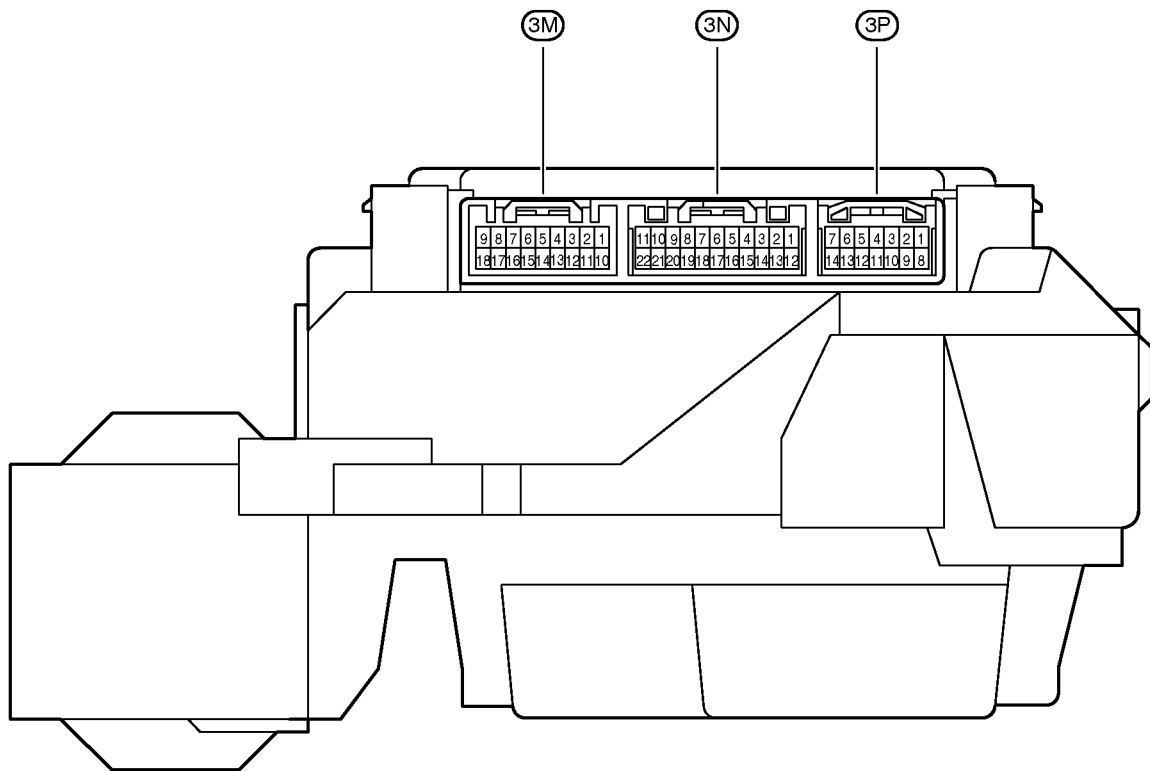


F RELAY LOCATIONS


 : Cowl Side J/B RH

Right Kick Panel (See Page 20)

(Inner Circuit : See Page 46)

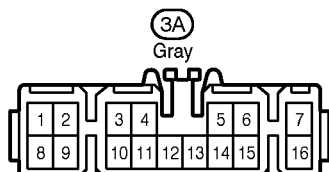


(from Engine Room No.2 Wire)

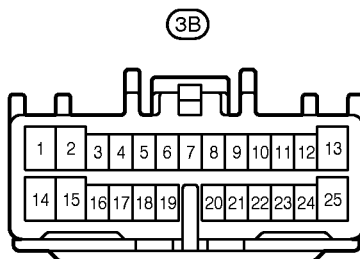


(from Engine Room No.2 Wire)




(from Engine Room No.2 Wire)

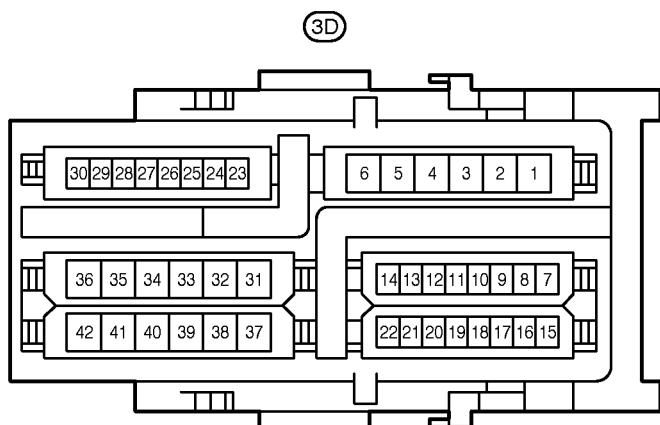


(from Dash Wire)

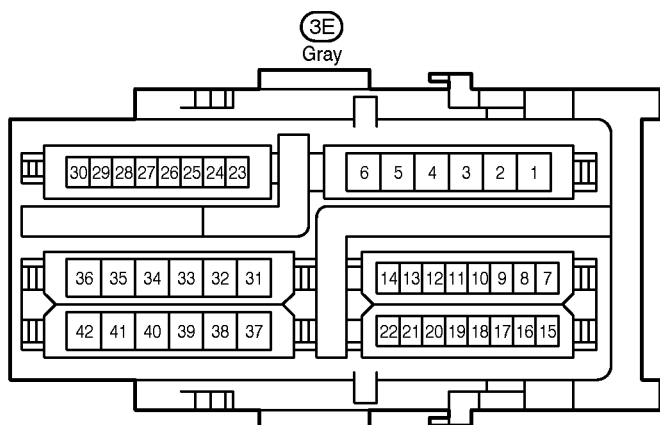


(from Dash Wire)

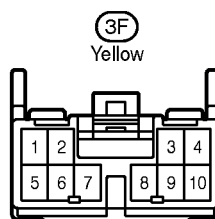


(from Dash Wire)

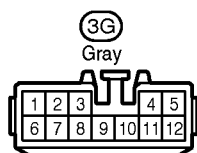


(from Dash Wire)

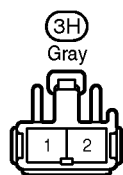






(from Dash Wire)

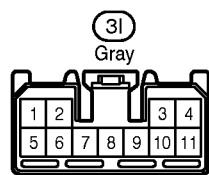

(from Front Door RH Wire)

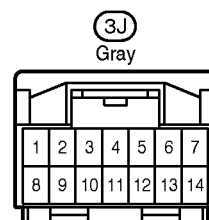


(from Front Door RH Wire)

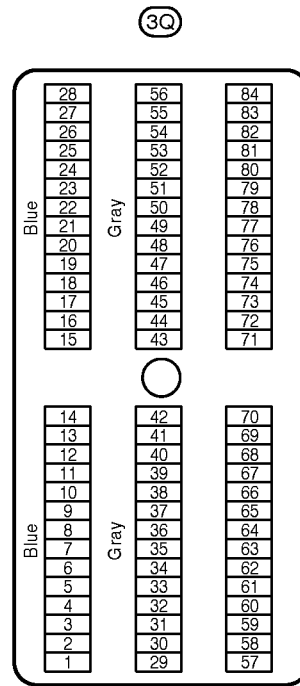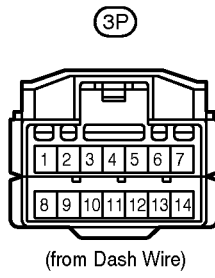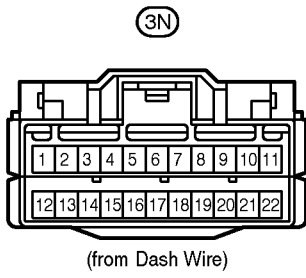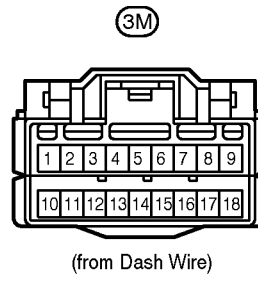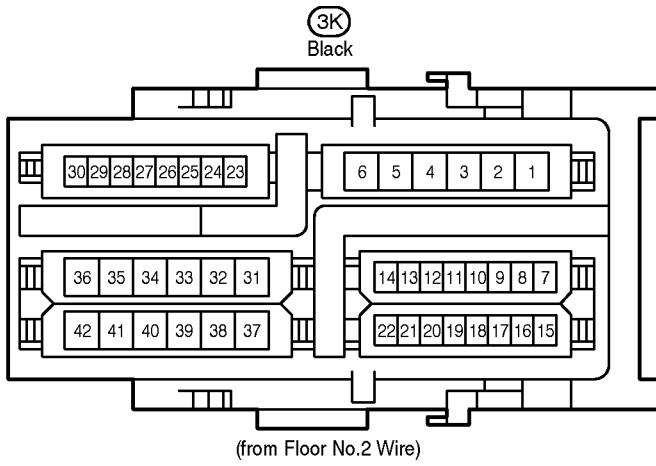

F RELAY LOCATIONS

[Cowl Side J/B RH Inner Circuit]

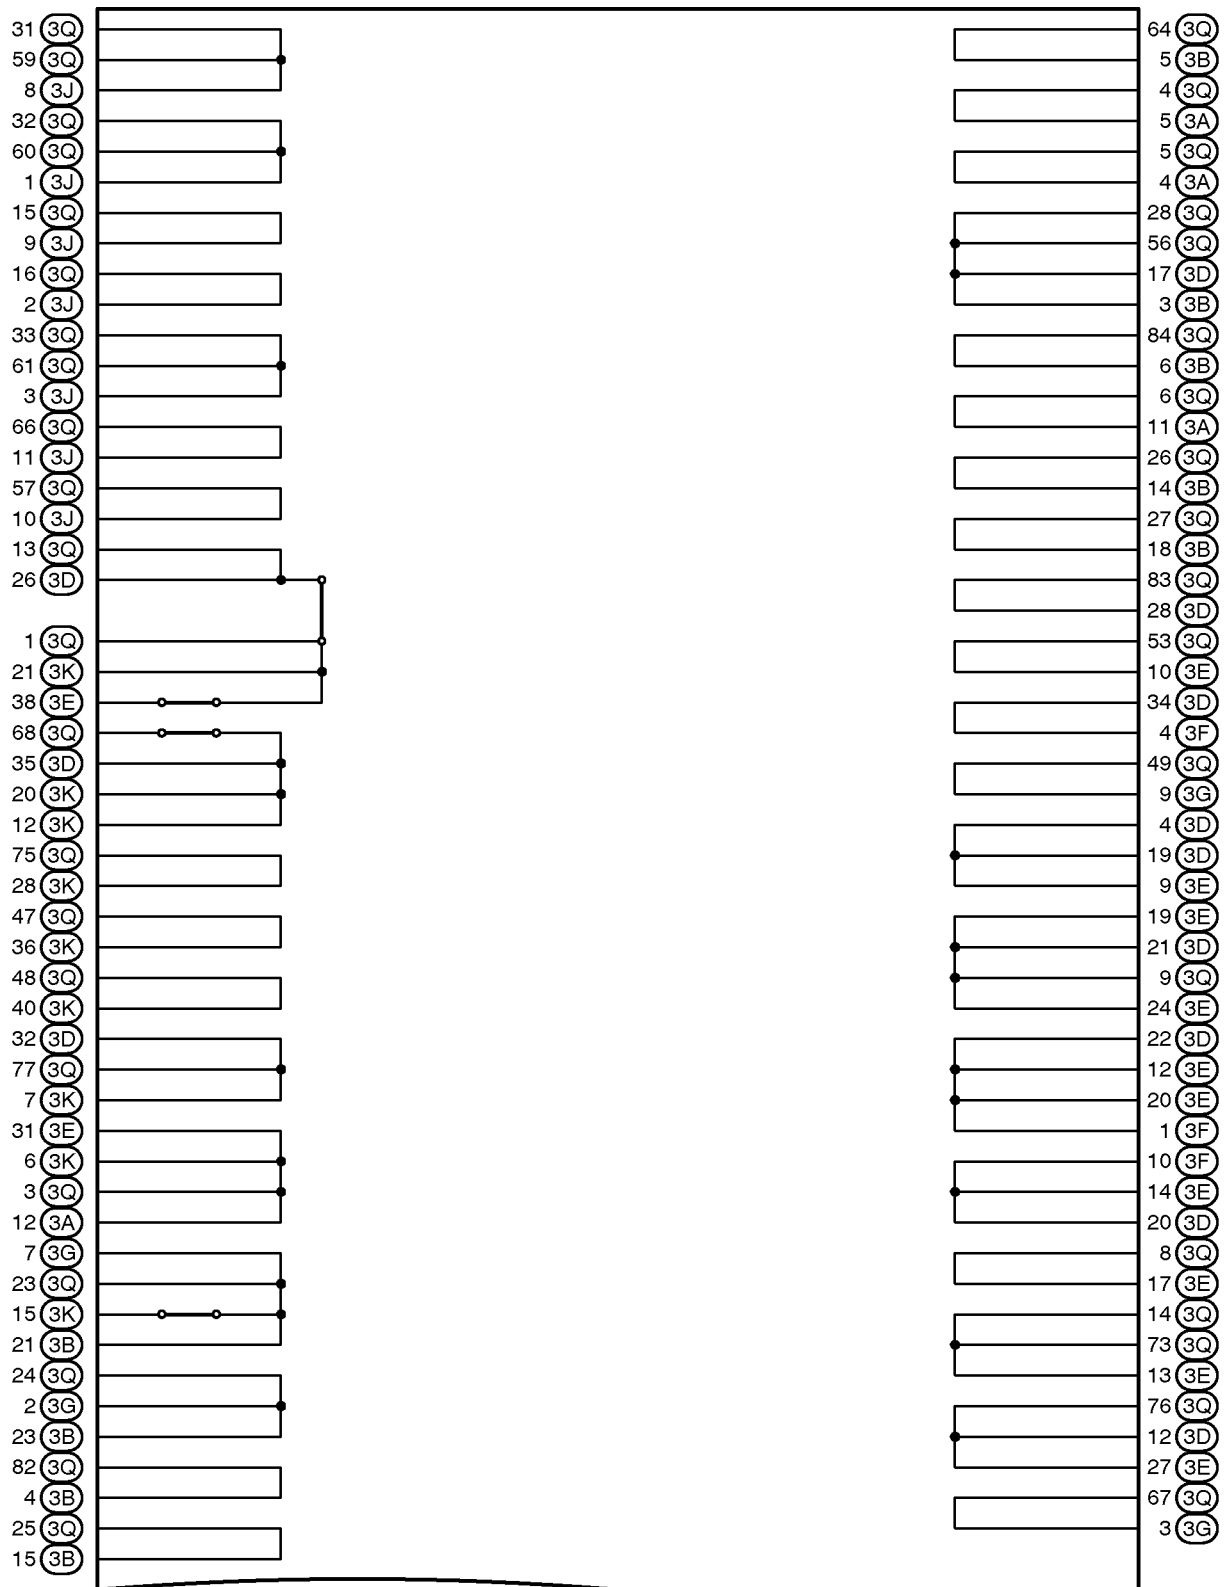

(Cont. next page)

(Cont'd)


26 (3E)			36 (3Q)
10 (3Q)			27 (3K)
21 (3E)			12 (3J)
13 (3D)			41 (3E)
40 (3E)			40 (3D)
42 (3Q)			23 (3E)
14 (3J)			18 (3E)
2 (3Q)			46 (3Q)
7 (3D)			74 (3Q)
13 (3K)			25 (3E)
6 (3A)			81 (3Q)
80 (3Q)			30 (3E)
5 (3D)			2 (3F)
22 (3K)			69 (3Q)
7 (3J)			28 (3E)
11 (3Q)			15 (3E)
8 (3F)			26 (3K)
14 (3A)			8 (3P)
11 (3E)			9 (3P)
54 (3Q)			1 (3P)
5 (3G)			2 (3P)
6 (3D)			3 (3P)
20 (3B)			10 (3M)
8 (3B)			11 (3M)
22 (3Q)			7 (3N)
15 (3D)			10 (3P)
16 (3B)			3 (3M)
19 (3Q)			12 (3M)
30 (3K)			13 (3M)
4 (3J)			11 (3P)
18 (3K)			4 (3M)
10 (3B)			5 (3M)
2 (3E)			14 (3M)
13 (3B)			12 (3P)
8 (3G)			1 (3M)
15 (3A)			13 (3P)
4 (3G)			2 (3M)
10 (3A)			14 (3P)
12 (3G)			6 (3M)
13 (3A)			5 (3P)
37 (3Q)			15 (3M)
41 (3D)			6 (3P)
7 (3F)			16 (3M)
25 (3K)			17 (3M)
30 (3D)			18 (3N)
5 (3F)			7 (3M)
62 (3Q)			12 (3N)
34 (3Q)			8 (3M)
29 (3K)			14 (3N)
5 (3J)			

(Cont. next page)

F RELAY LOCATIONS


[Cowl Side J/B RH Inner Circuit]

(Cont'd)

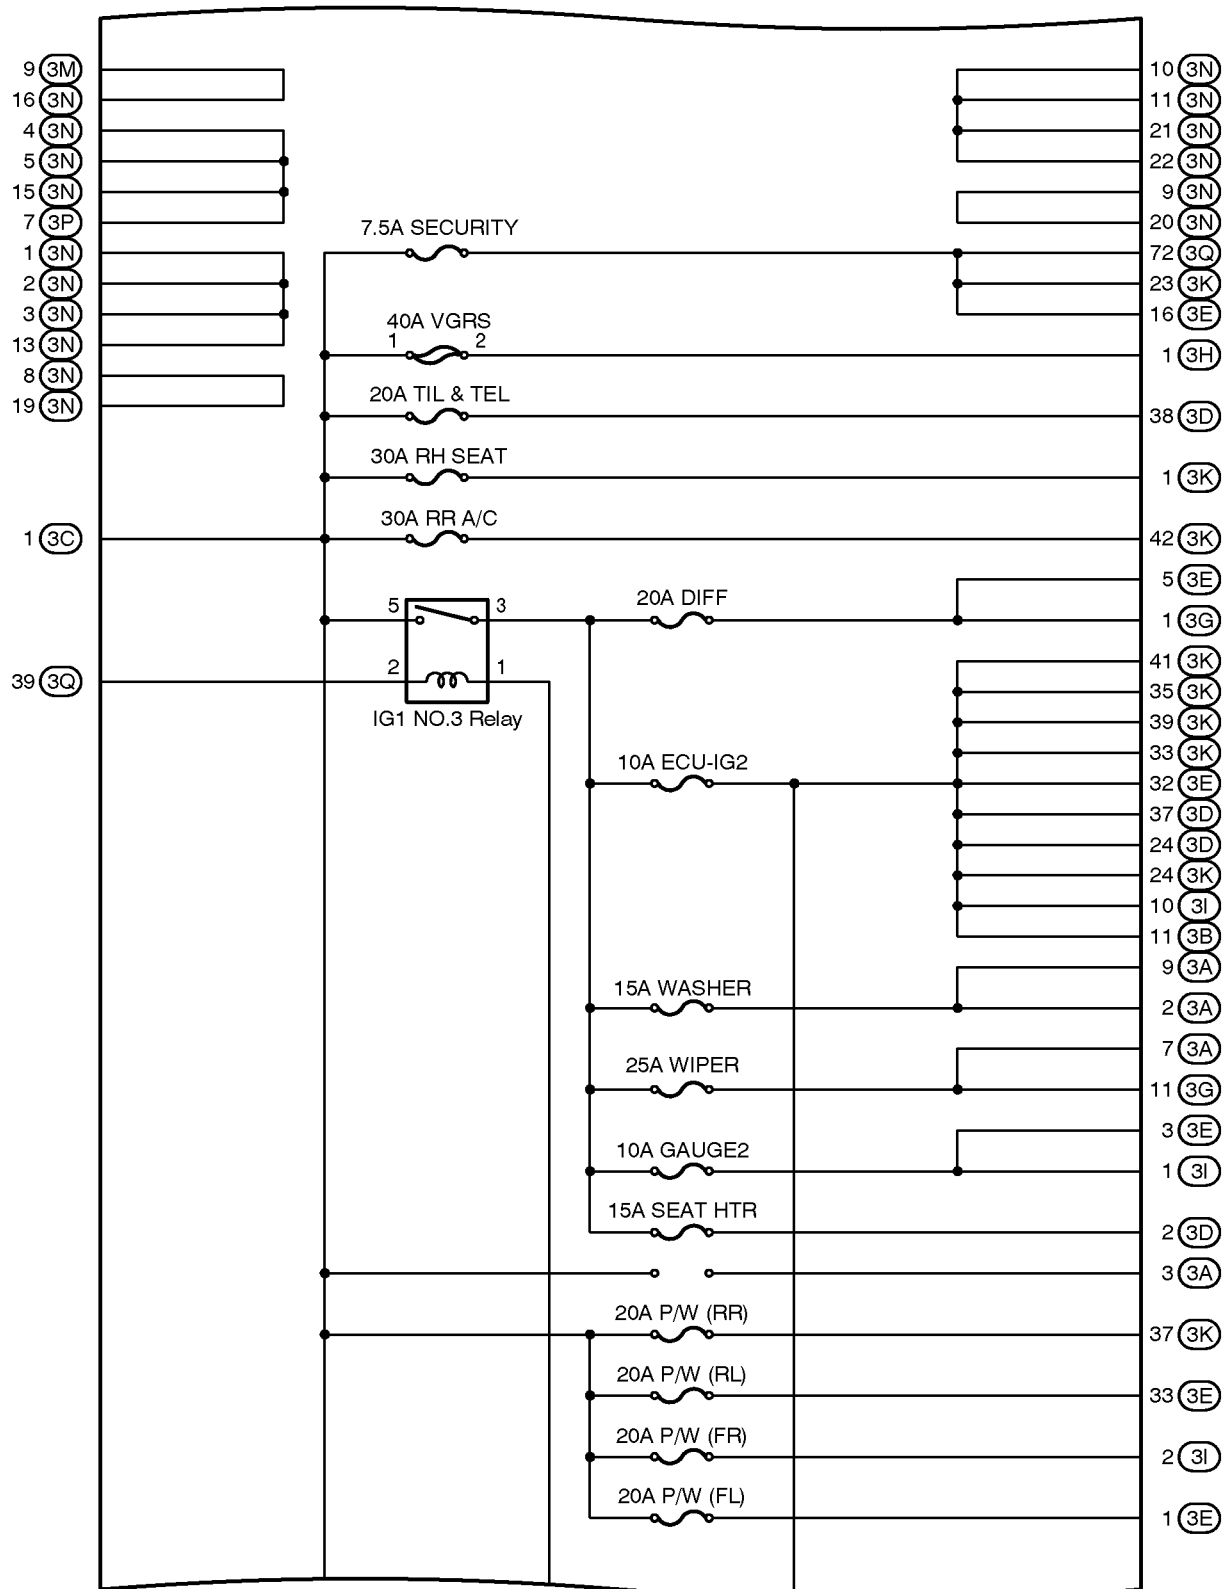

(Cont. next page)


(Cont'd)

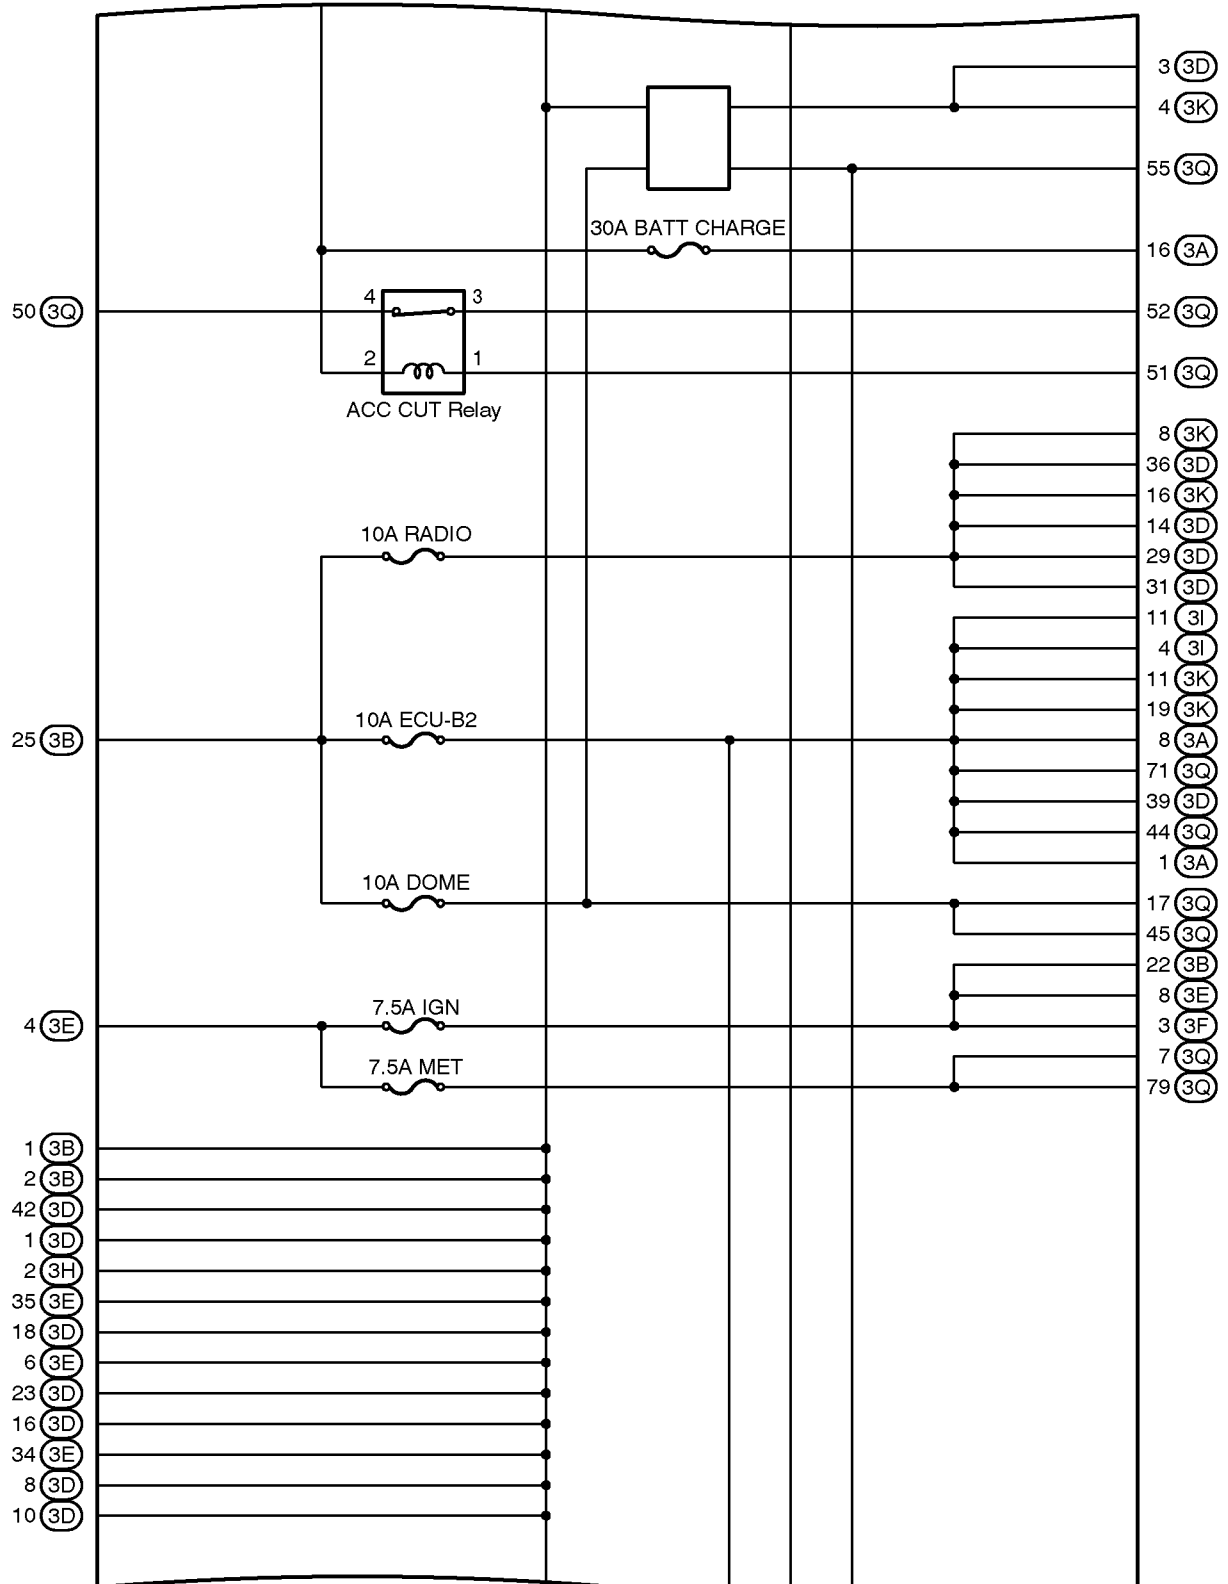

(Cont. next page)


F RELAY LOCATIONS

[Cowl Side J/B RH Inner Circuit]

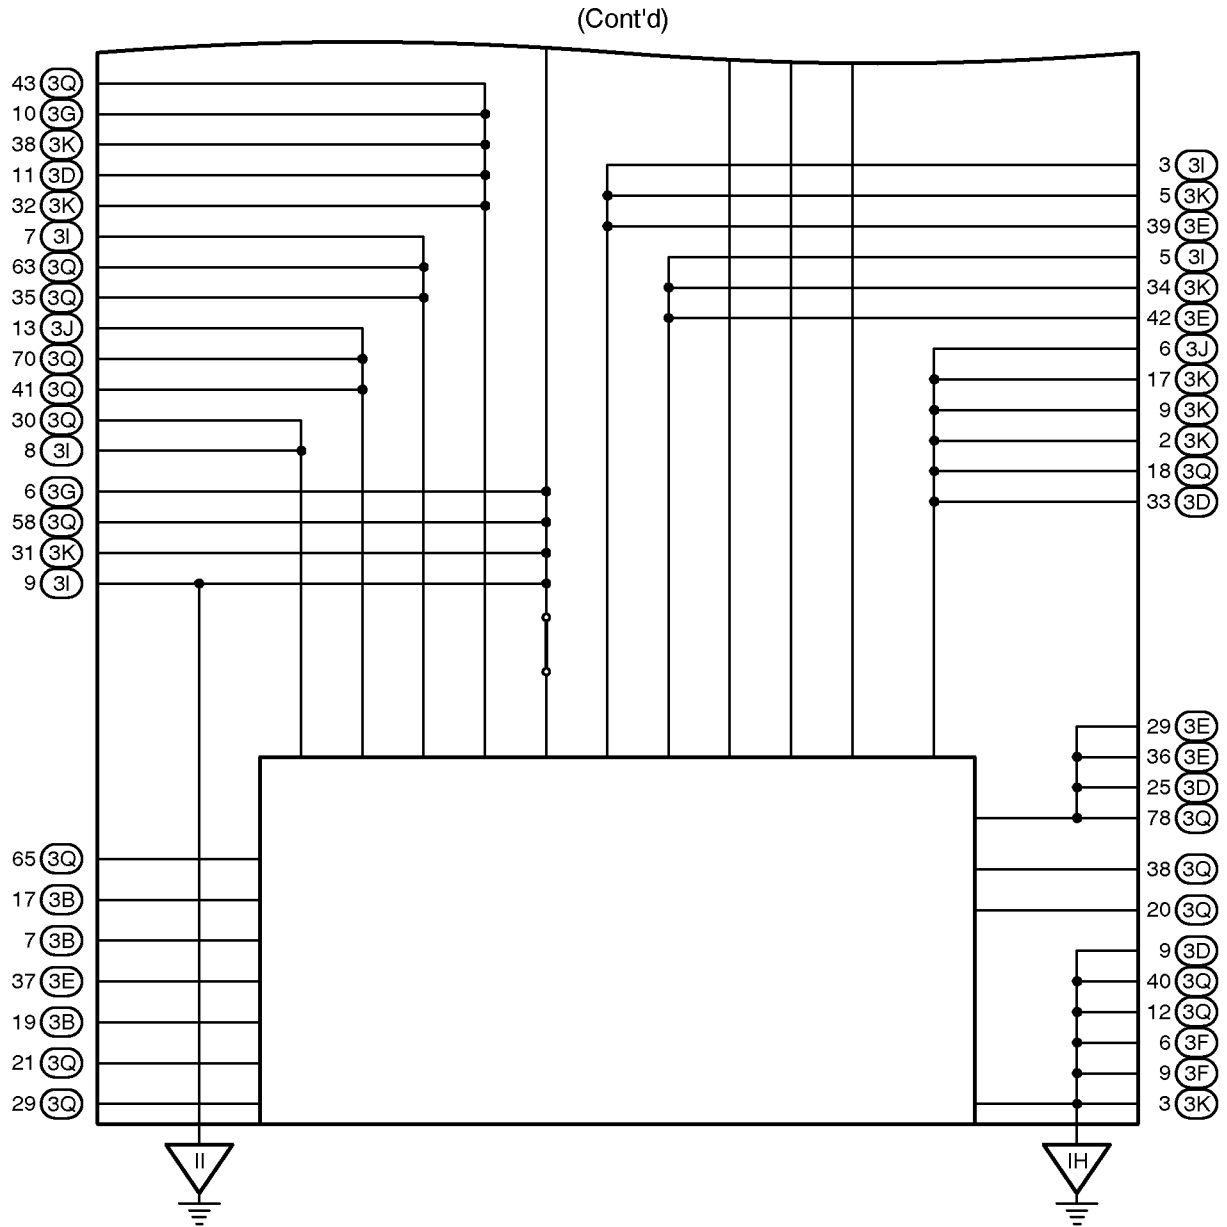


F RELAY LOCATIONS

○ : J/B No.4

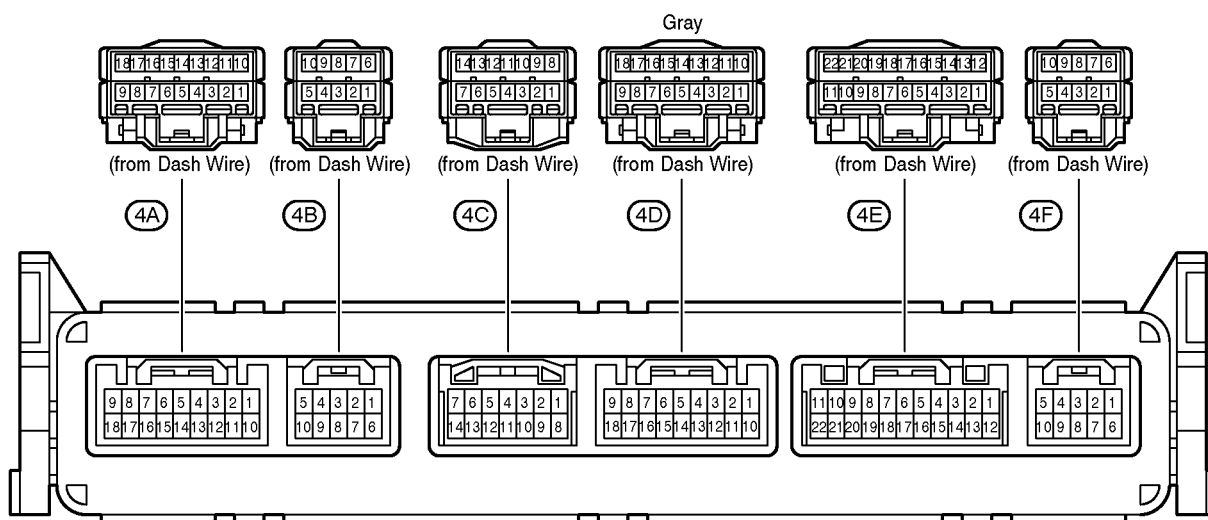Instrument Panel Center (See Page 20)

F RELAY LOCATIONS

[J/B No.4 Inner Circuit]

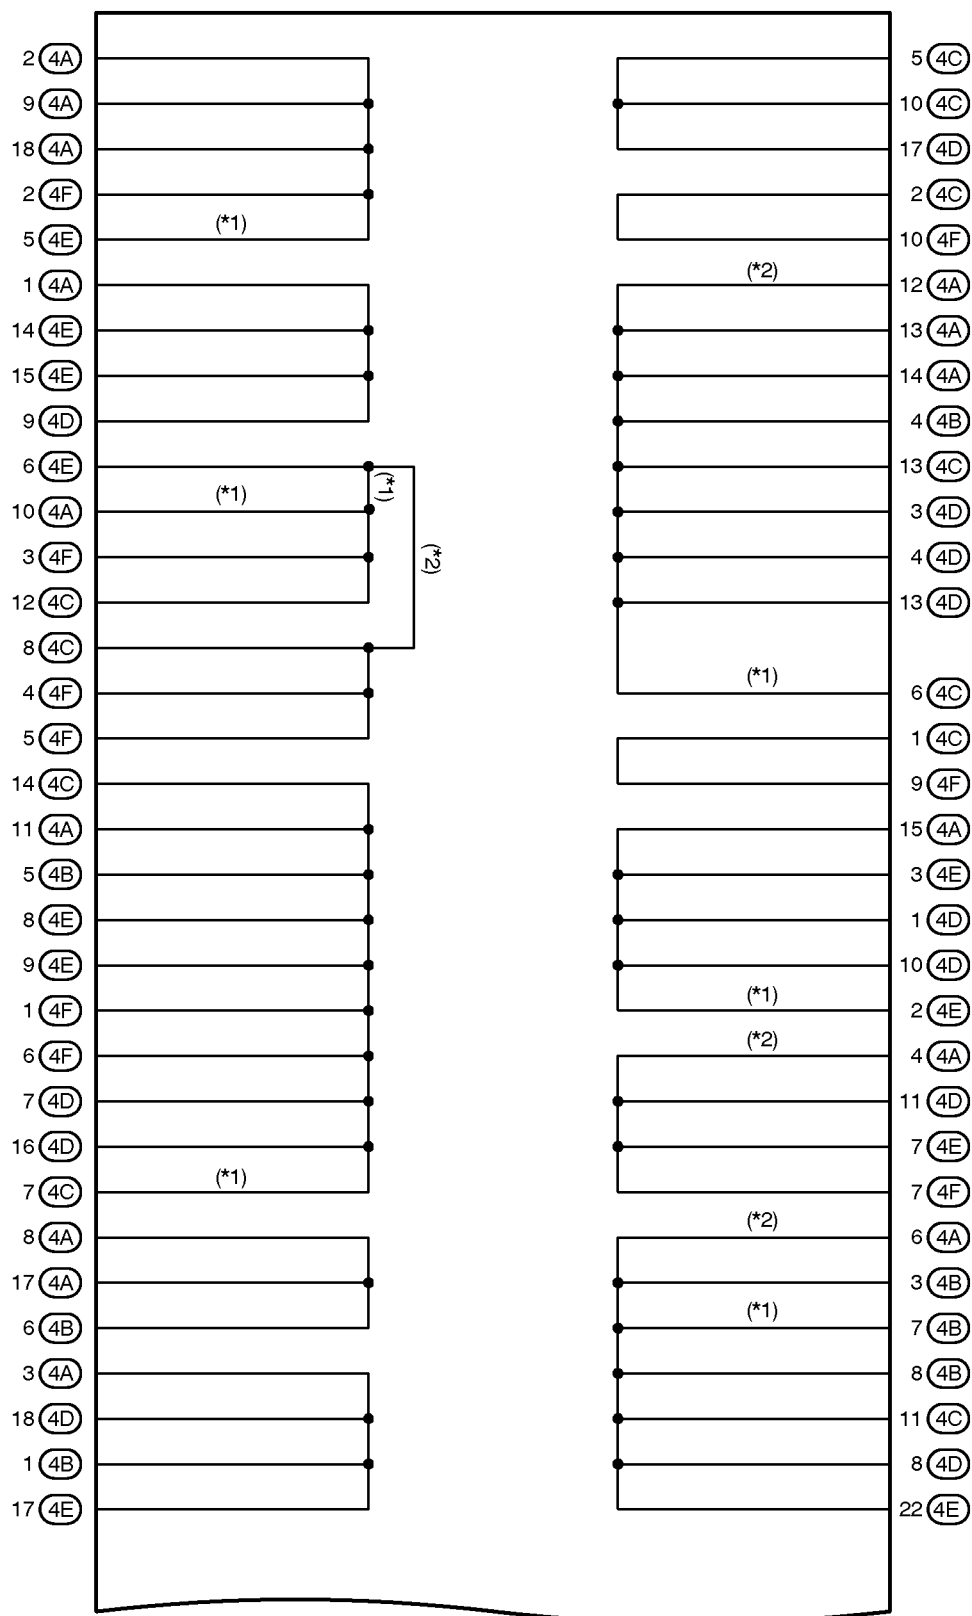

(Cont. next page)

(Cont'd)


2 (4B)			9 (4C)
12 (4D)			13 (4E)
21 (4E)			4 (4C)
10 (4E)	(*1)		19 (4E)
2 (4D)		(*2)	5 (4A)
12 (4E)			10 (4B)
5 (4D)			6 (4D)
14 (4D)			15 (4D)
20 (4E)			11 (4E)
4 (4E)			9 (4B)
3 (4C)	(*1)		
16 (4A)			
1 (4E)	(*2)		

* 1:w/ LEXUS Navigation System
 * 2:w/o LEXUS Navigation System

F RELAY LOCATIONS


○ : J/B No.5

Behind the Combination Meter (See Page 20)

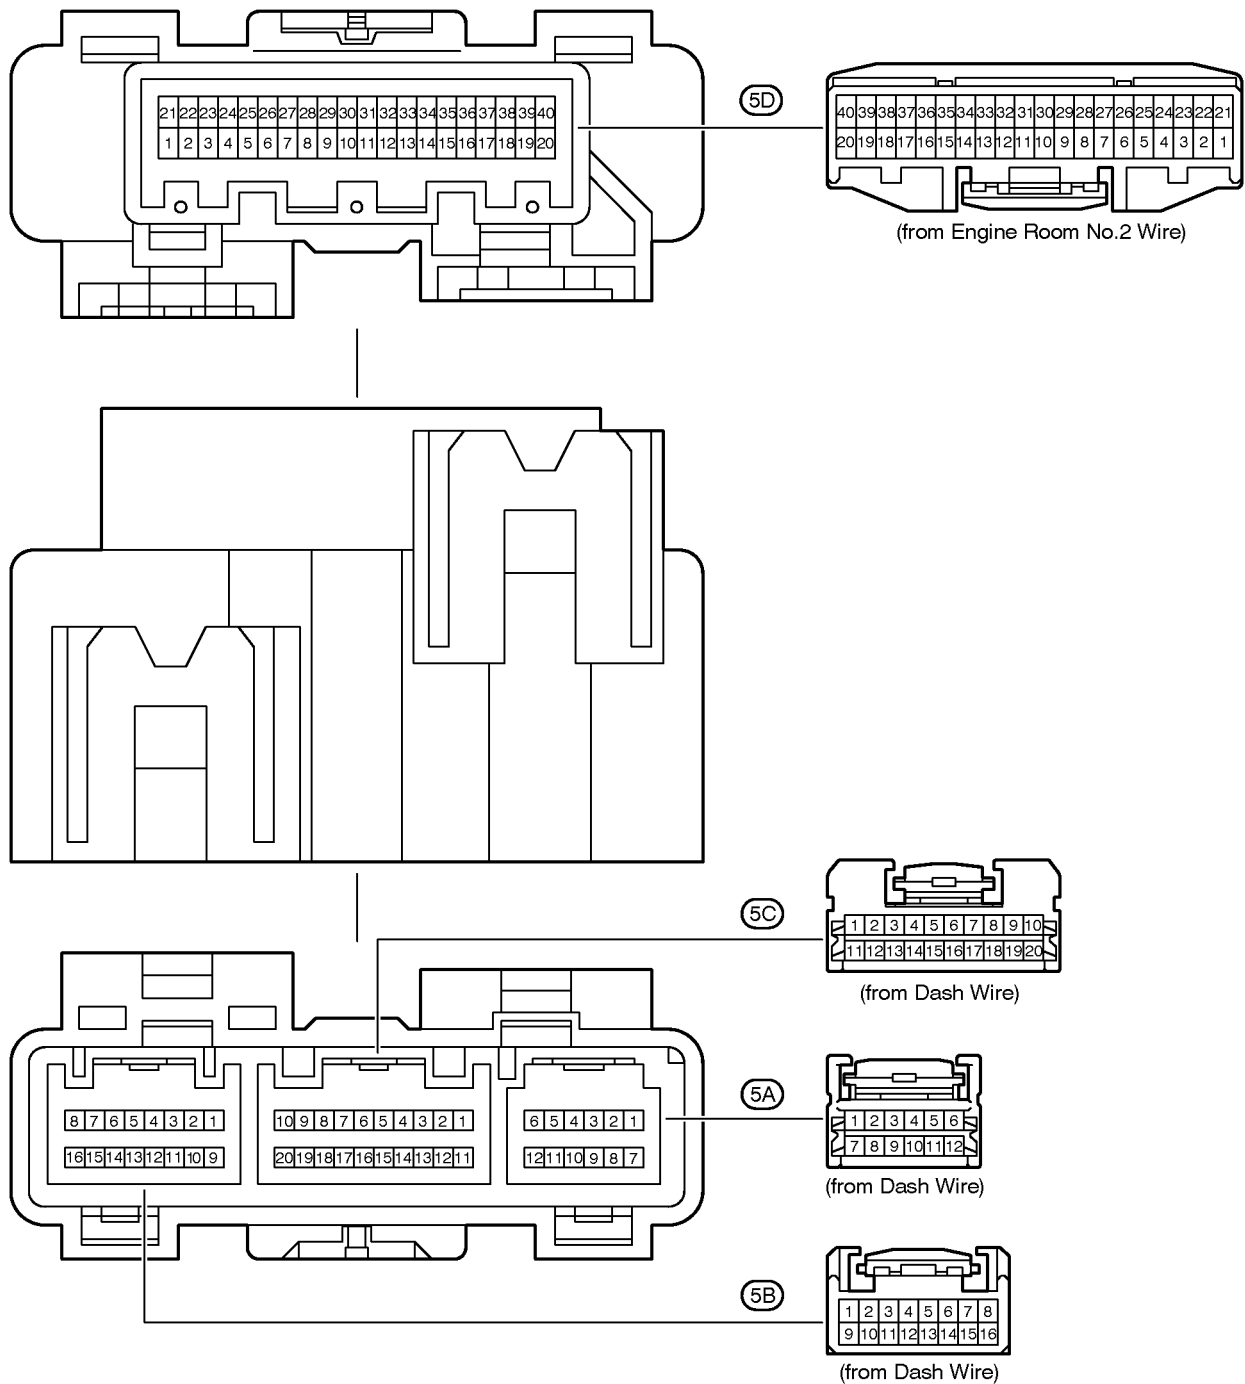

F RELAY LOCATIONS

[J/B No.5 Inner Circuit]

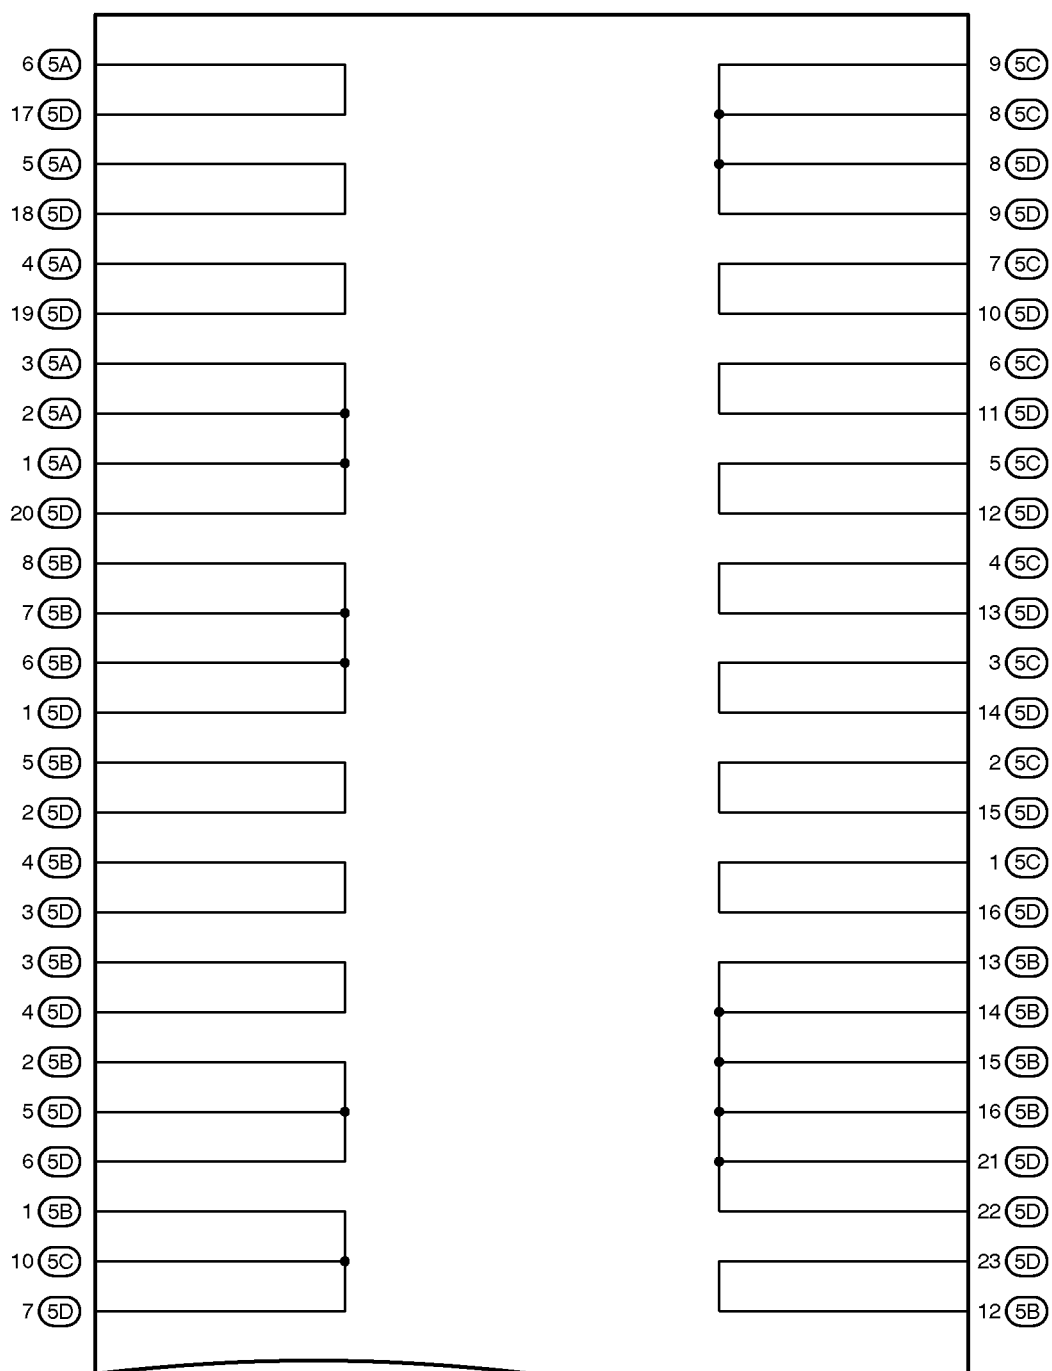

(Cont. next page)


(Cont'd)

24 (5D)			33 (5D)
11 (5B)			14 (5C)
25 (5D)			34 (5D)
10 (5B)			13 (5C)
26 (5D)			35 (5D)
9 (5B)			36 (5D)
27 (5D)			12 (5C)
20 (5C)			11 (5C)
28 (5D)			12 (5A)
19 (5C)			37 (5D)
29 (5D)			38 (5D)
18 (5C)			11 (5A)
30 (5D)			39 (5D)
17 (5C)			10 (5A)
31 (5D)			40 (5D)
16 (5C)			9 (5A)
32 (5D)			8 (5A)
15 (5C)			7 (5A)

F RELAY LOCATIONS


 : J/B No.6

Behind the Glove Box (See Page 20)

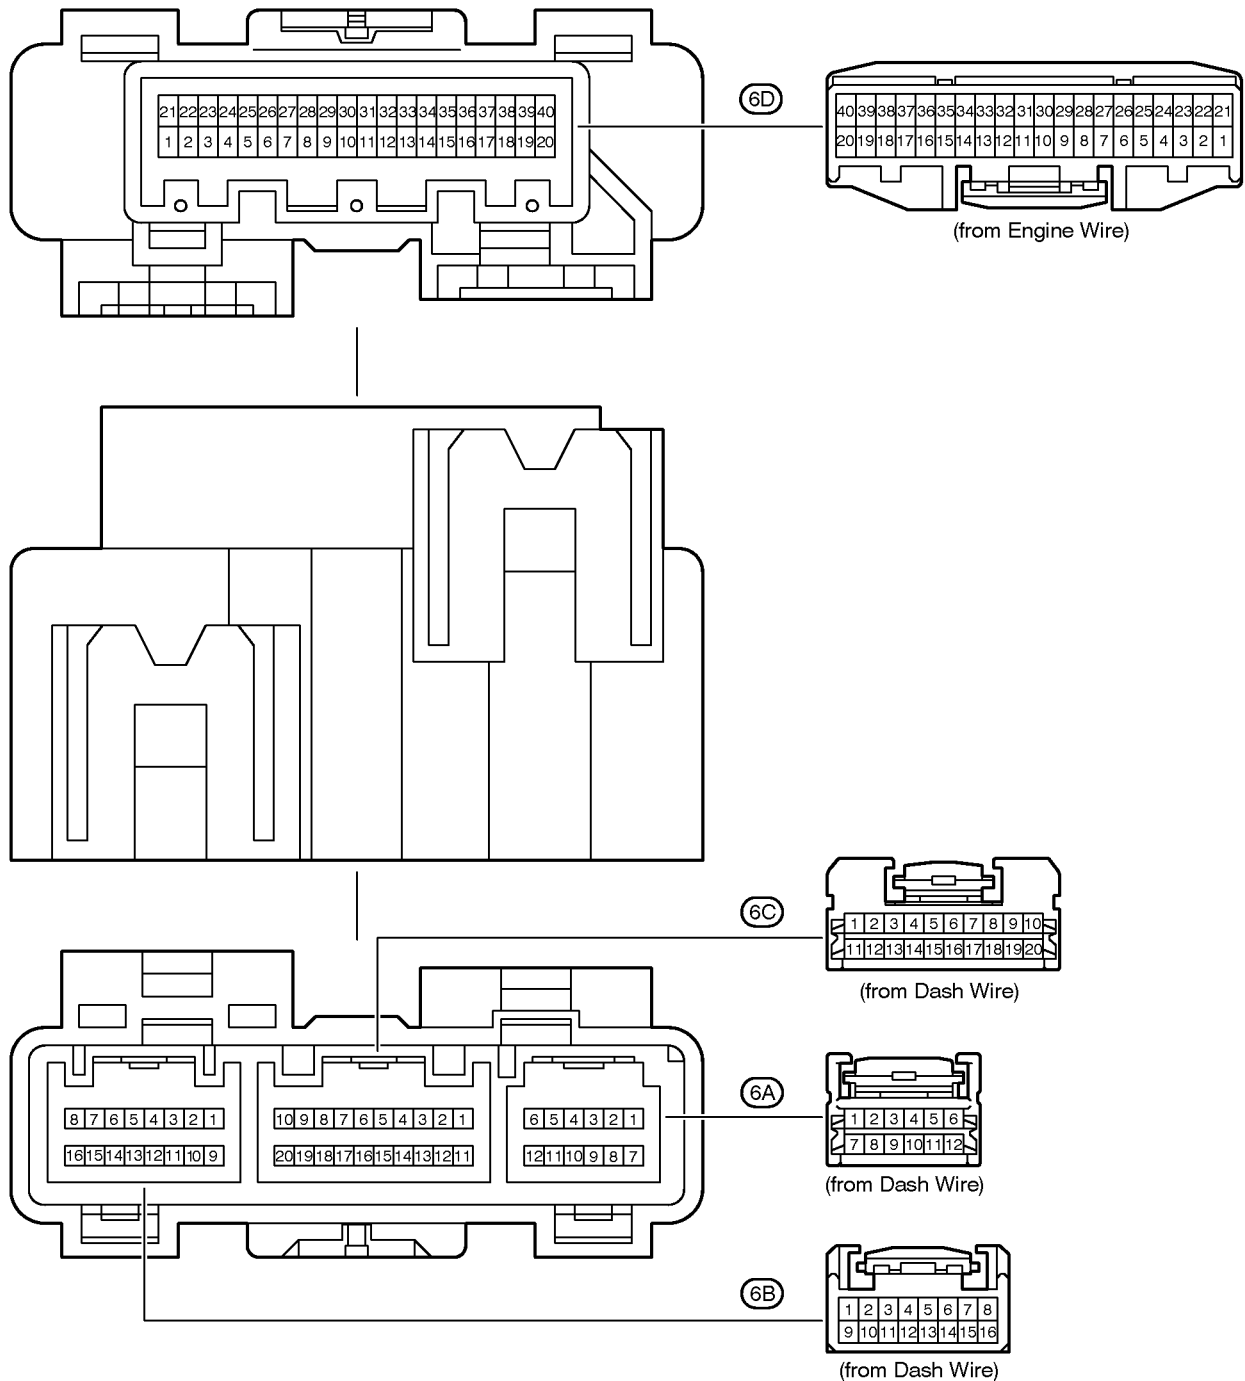


F RELAY LOCATIONS

[J/B No.6 Inner Circuit]

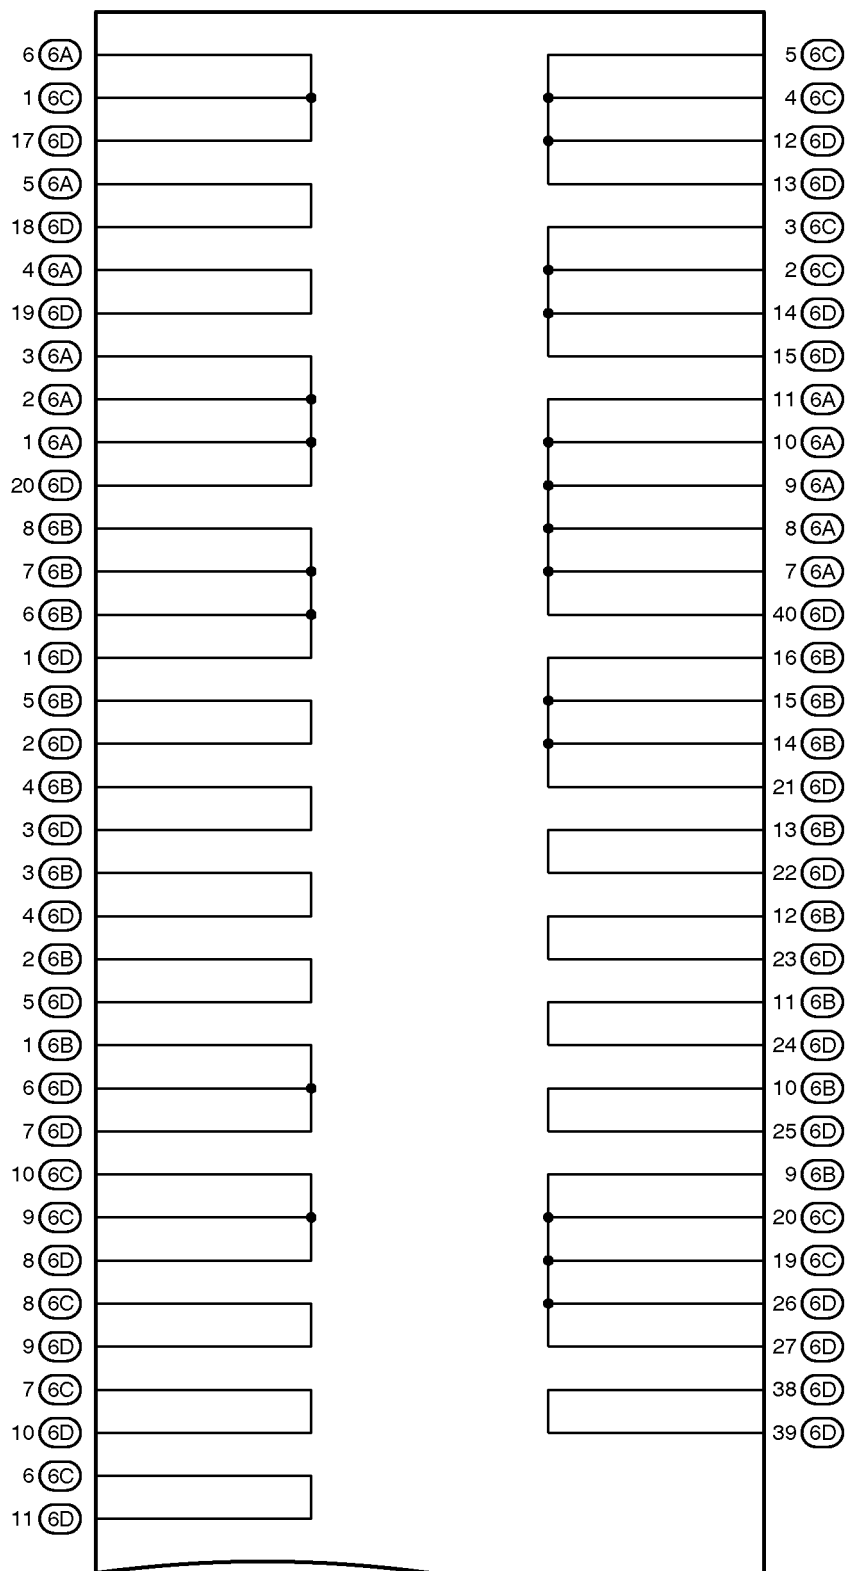

(Cont. next page)


(Cont'd)

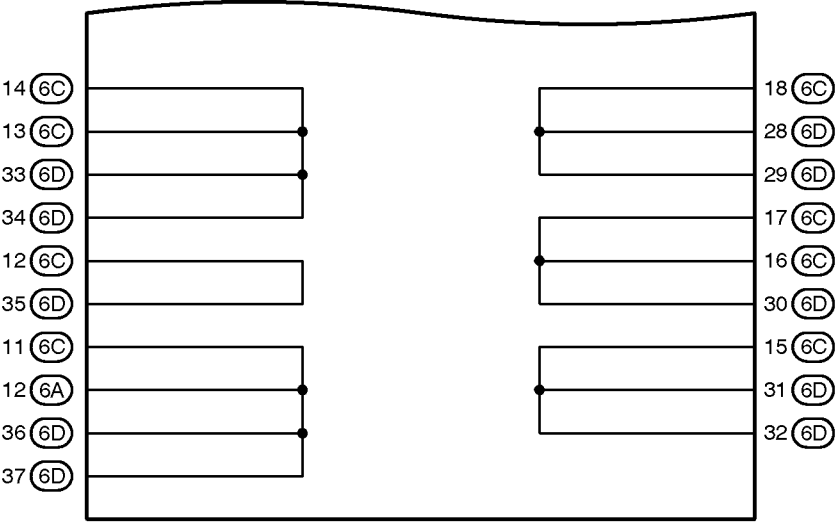

F RELAY LOCATIONS


○ : J/B No.7

Behind the Glove Box (See Page 20)

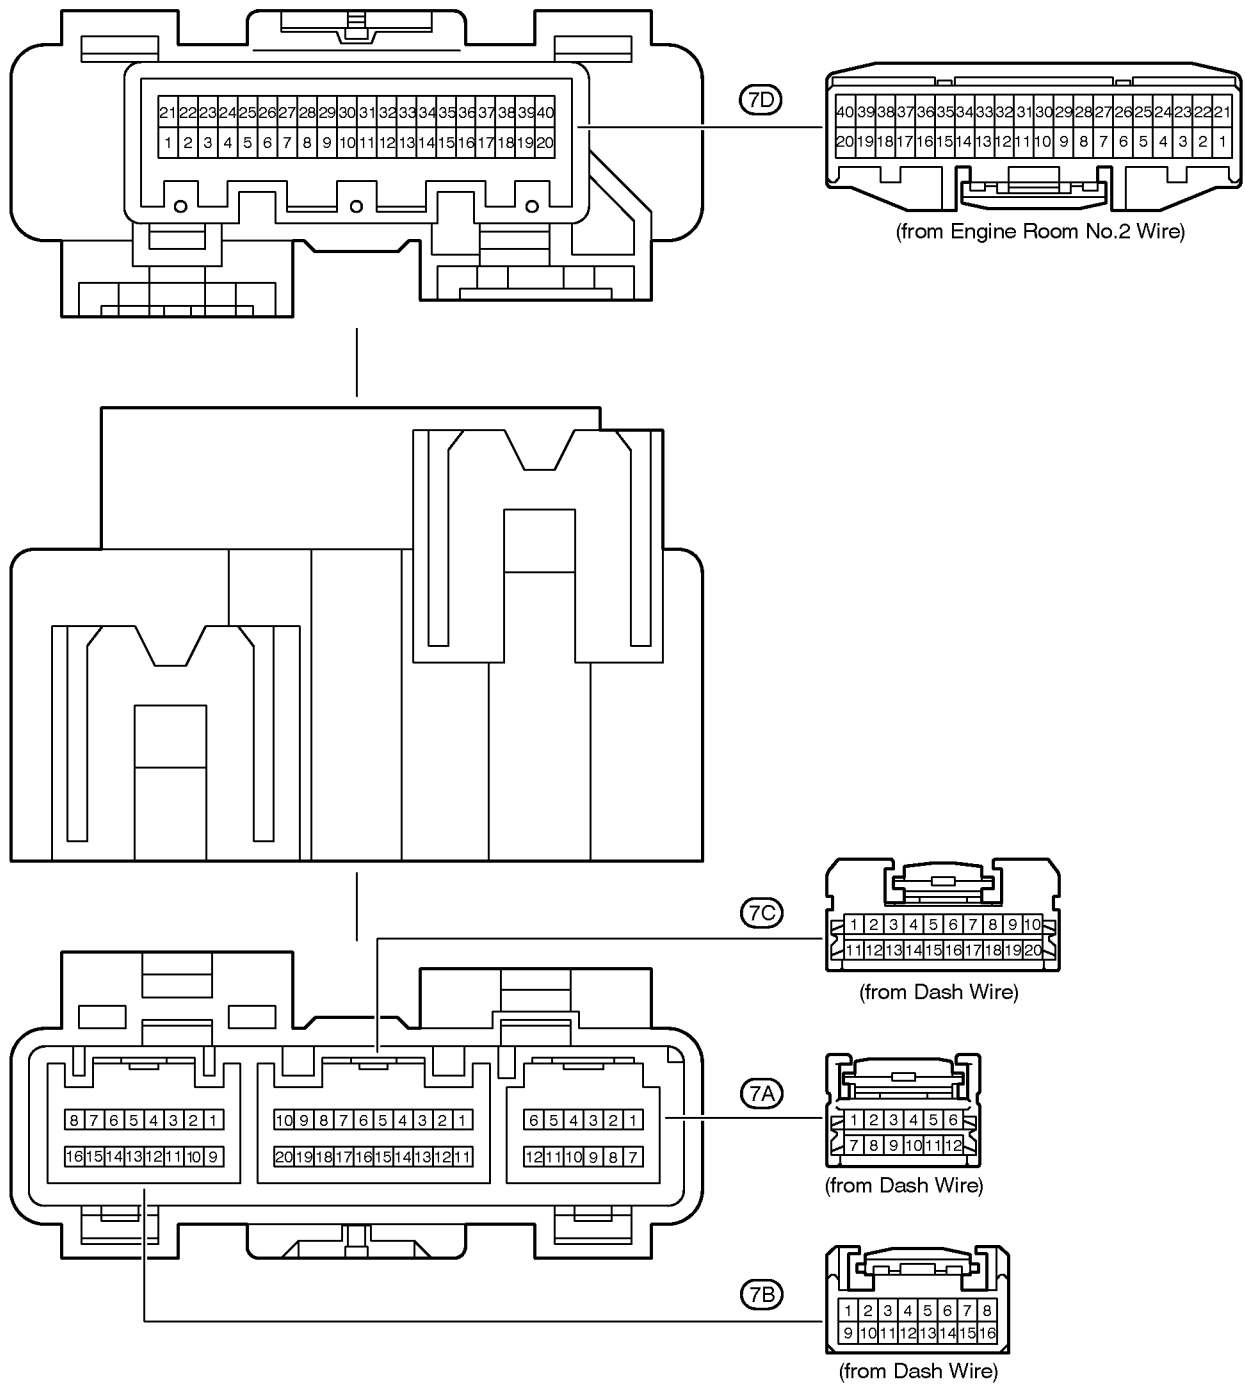

F RELAY LOCATIONS

[J/B No.7 Inner Circuit]

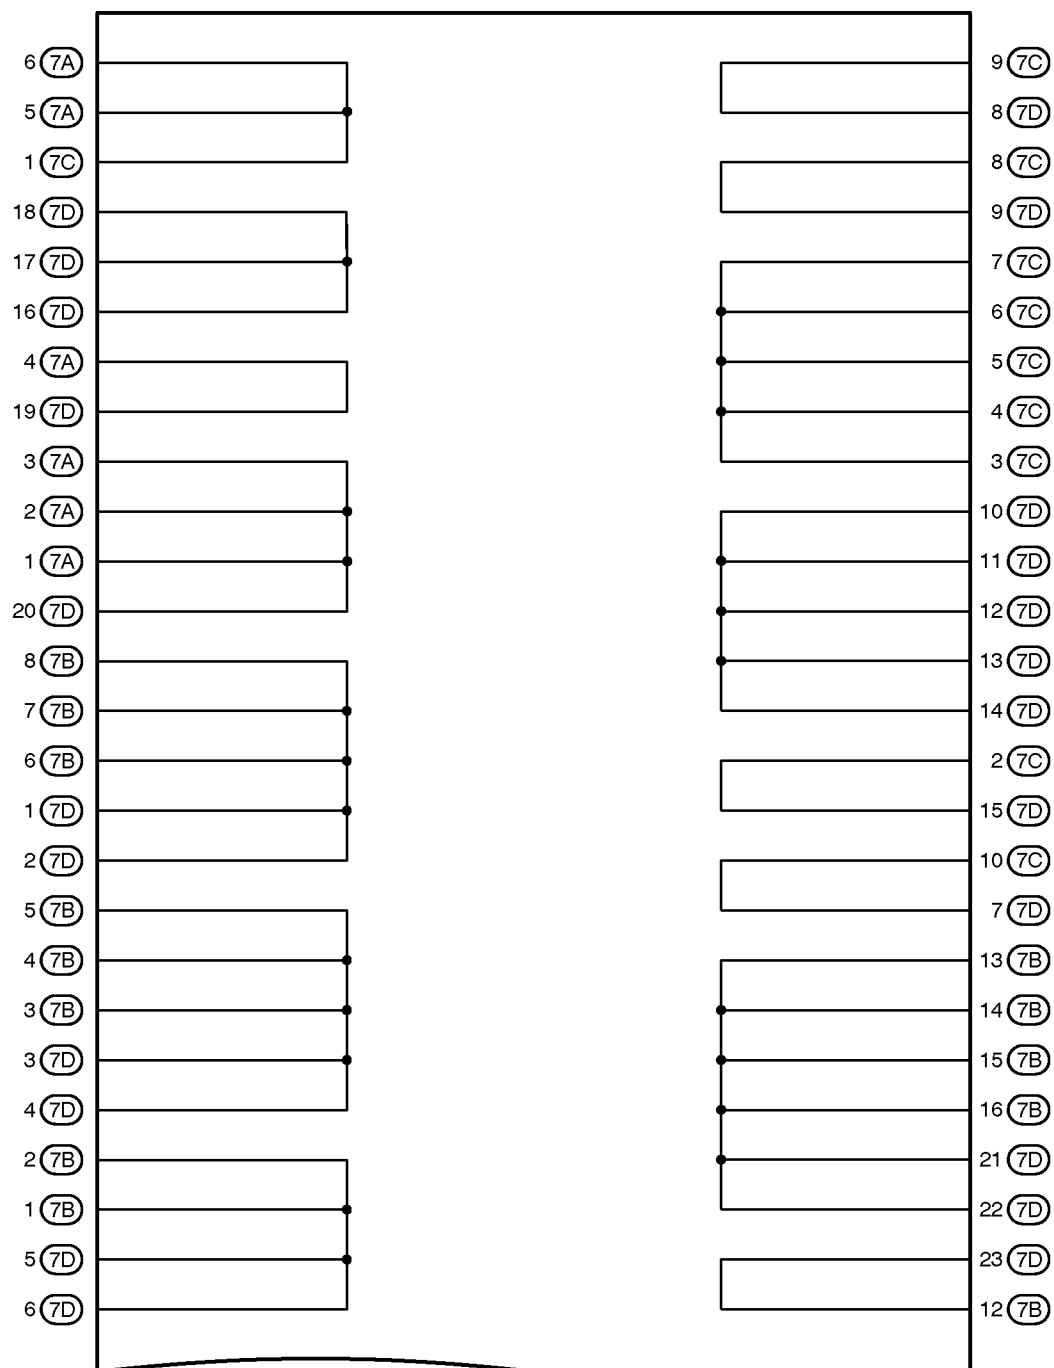

(Cont. next page)

(Cont'd)

24 (7D)			33 (7D)
11 (7B)			14 (7C)
25 (7D)			34 (7D)
10 (7B)			13 (7C)
26 (7D)			35 (7D)
9 (7B)			36 (7D)
27 (7D)			12 (7C)
20 (7C)			37 (7D)
28 (7D)			11 (7C)
19 (7C)			12 (7A)
29 (7D)			38 (7D)
18 (7C)			11 (7A)
30 (7D)			39 (7D)
17 (7C)			10 (7A)
31 (7D)			40 (7D)
16 (7C)			9 (7A)
32 (7D)			8 (7A)
15 (7C)			7 (7A)