


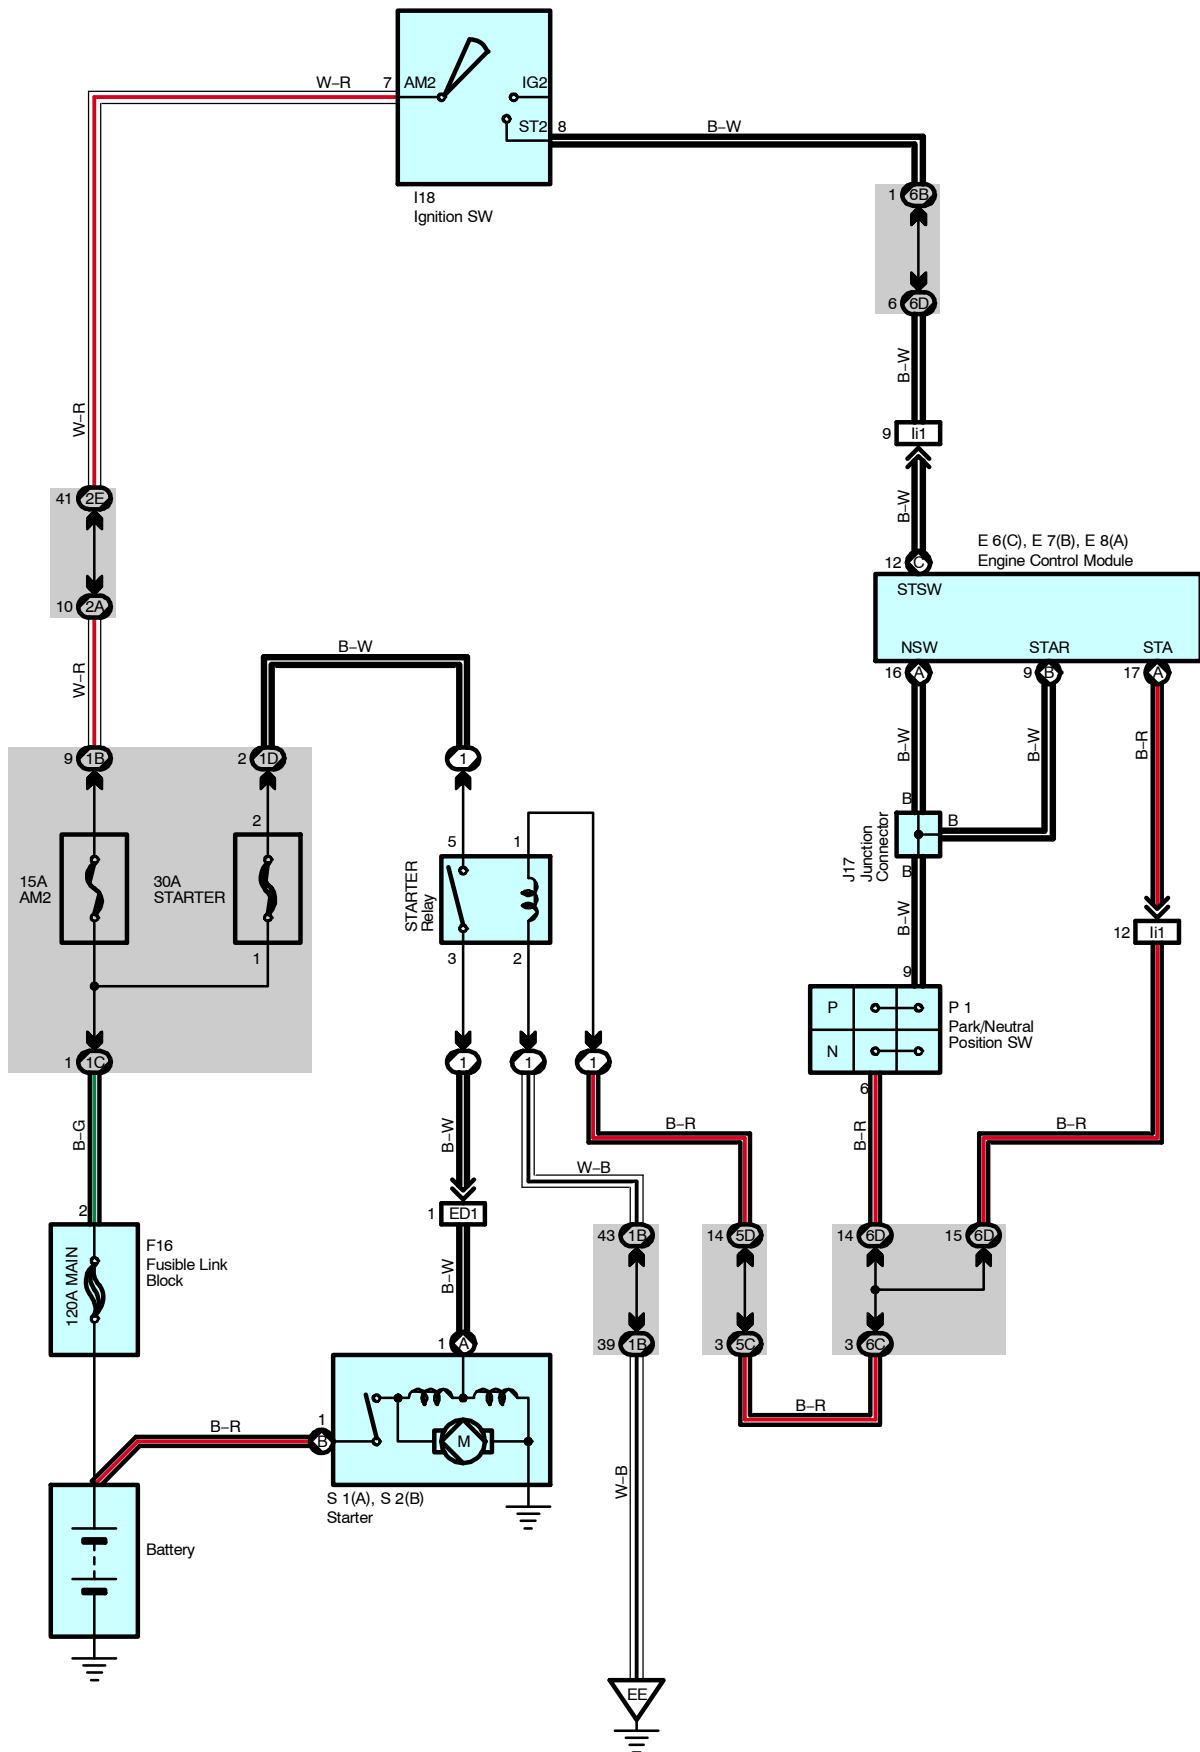

Service Hints

I18 Ignition SW

7-8 : Closed with ignition SW at ST position

P1 Park/Neutral Position SW

6-9 : Closed with A/T shift lever in P or N position

S1 (A), S2 (B) Starter

Points closed with Park/Neutral position SW at P or N position and ignition SW at ST position

: Parts Location

Code		See Page	Code		See Page	Code		See Page
E6	C	71	F16	68		P1		69
E7	B	71	I18	71		S1	A	69
E8	A	71	J17	72		S2	B	69

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1C		
1D		
2A	28	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2E	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
5C	56	Dash Wire and J/B No.5 (Behind the Combination Meter)
5D	56	Engine Room No.2 Wire and J/B No.5 (Behind the Combination Meter)
6B	60	Dash Wire and J/B No.6 (Behind the Grove Box)
6C		
6D	60	Engine Wire and J/B No.6 (Behind the Grove Box)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ED1	78	Engine No.2 Wire and Engine Room No.2 Wire (Near the Engine Room J/B)
Ii1	88	Engine Wire and Engine Wire (Behind the Glove Box)

: Ground Points

Code	See Page	Ground Points Location
EE	78	Front Left Side of Fender Apron