



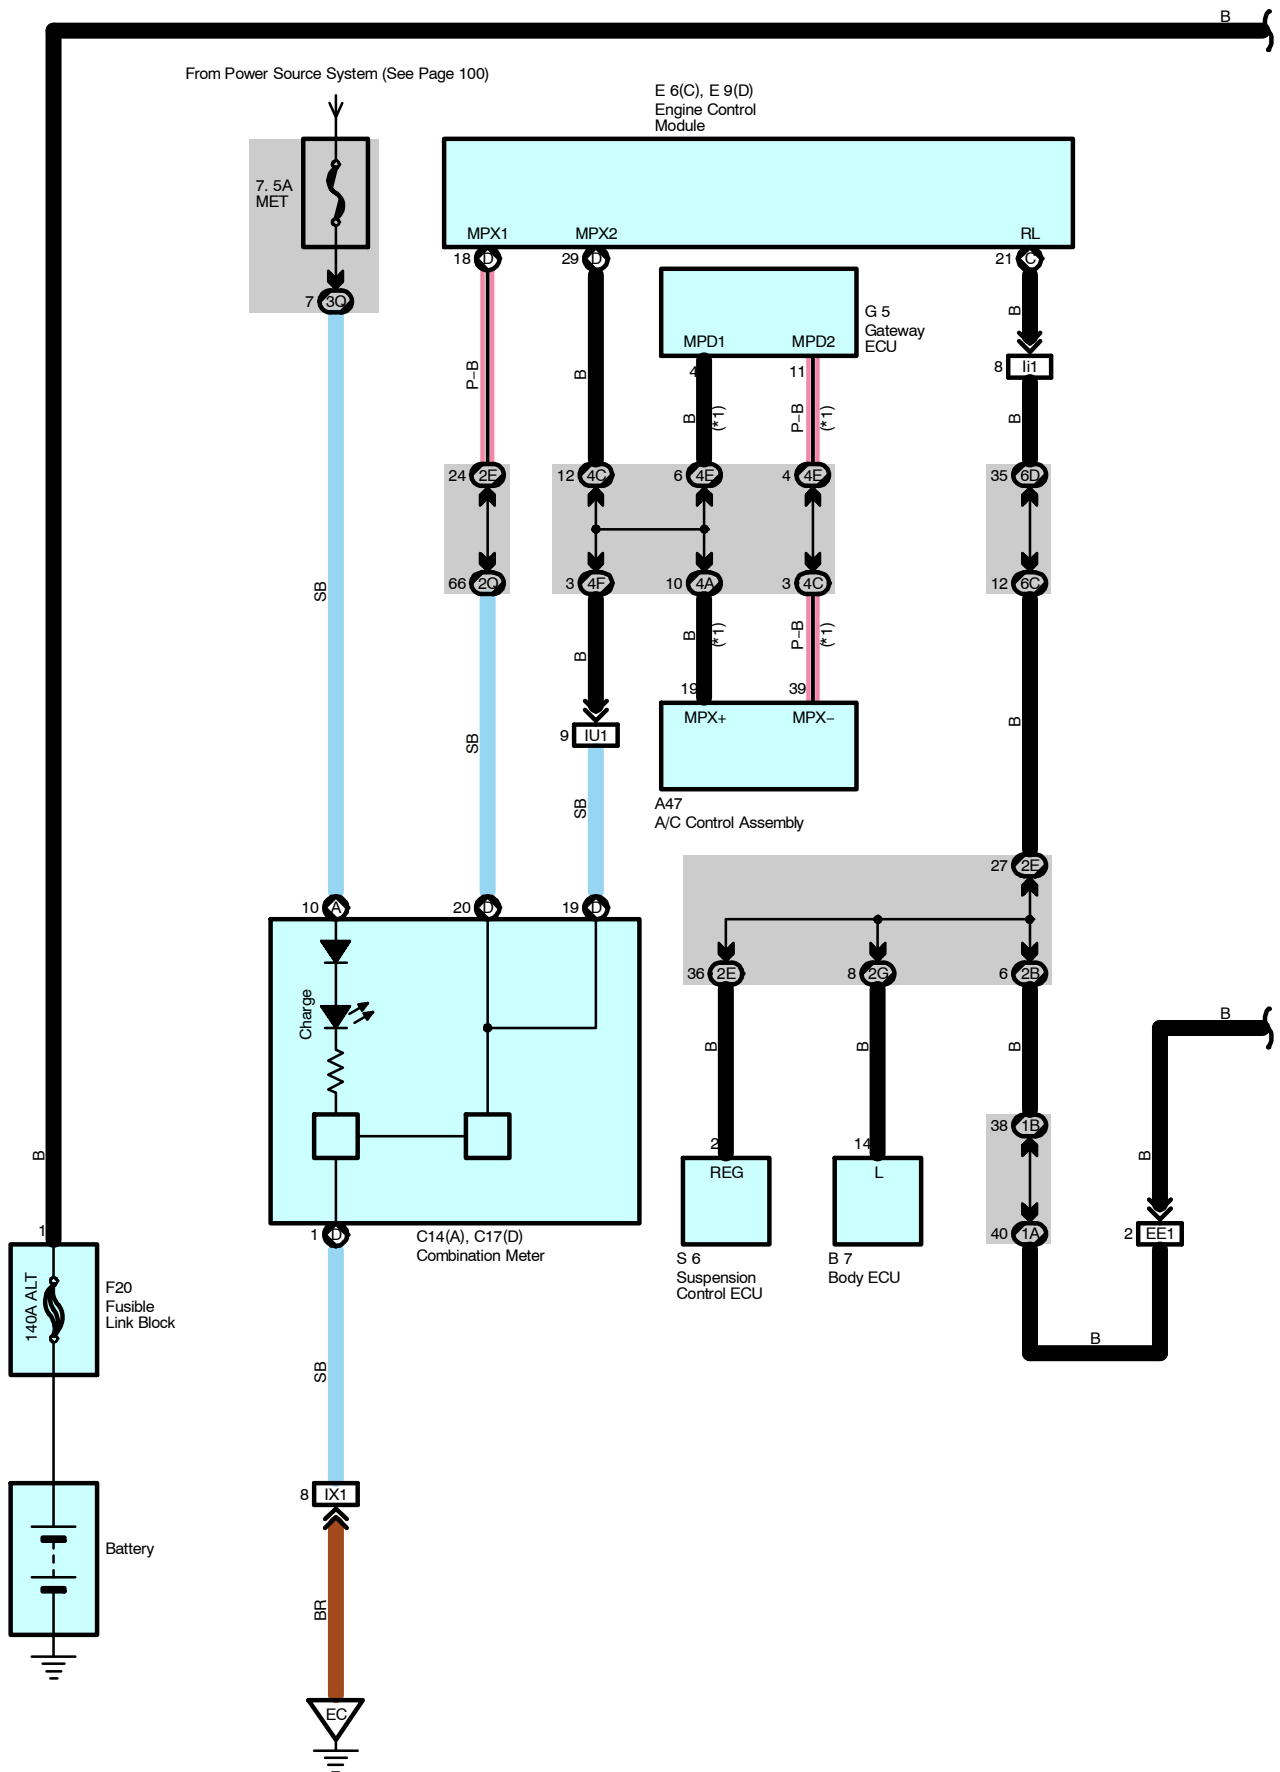

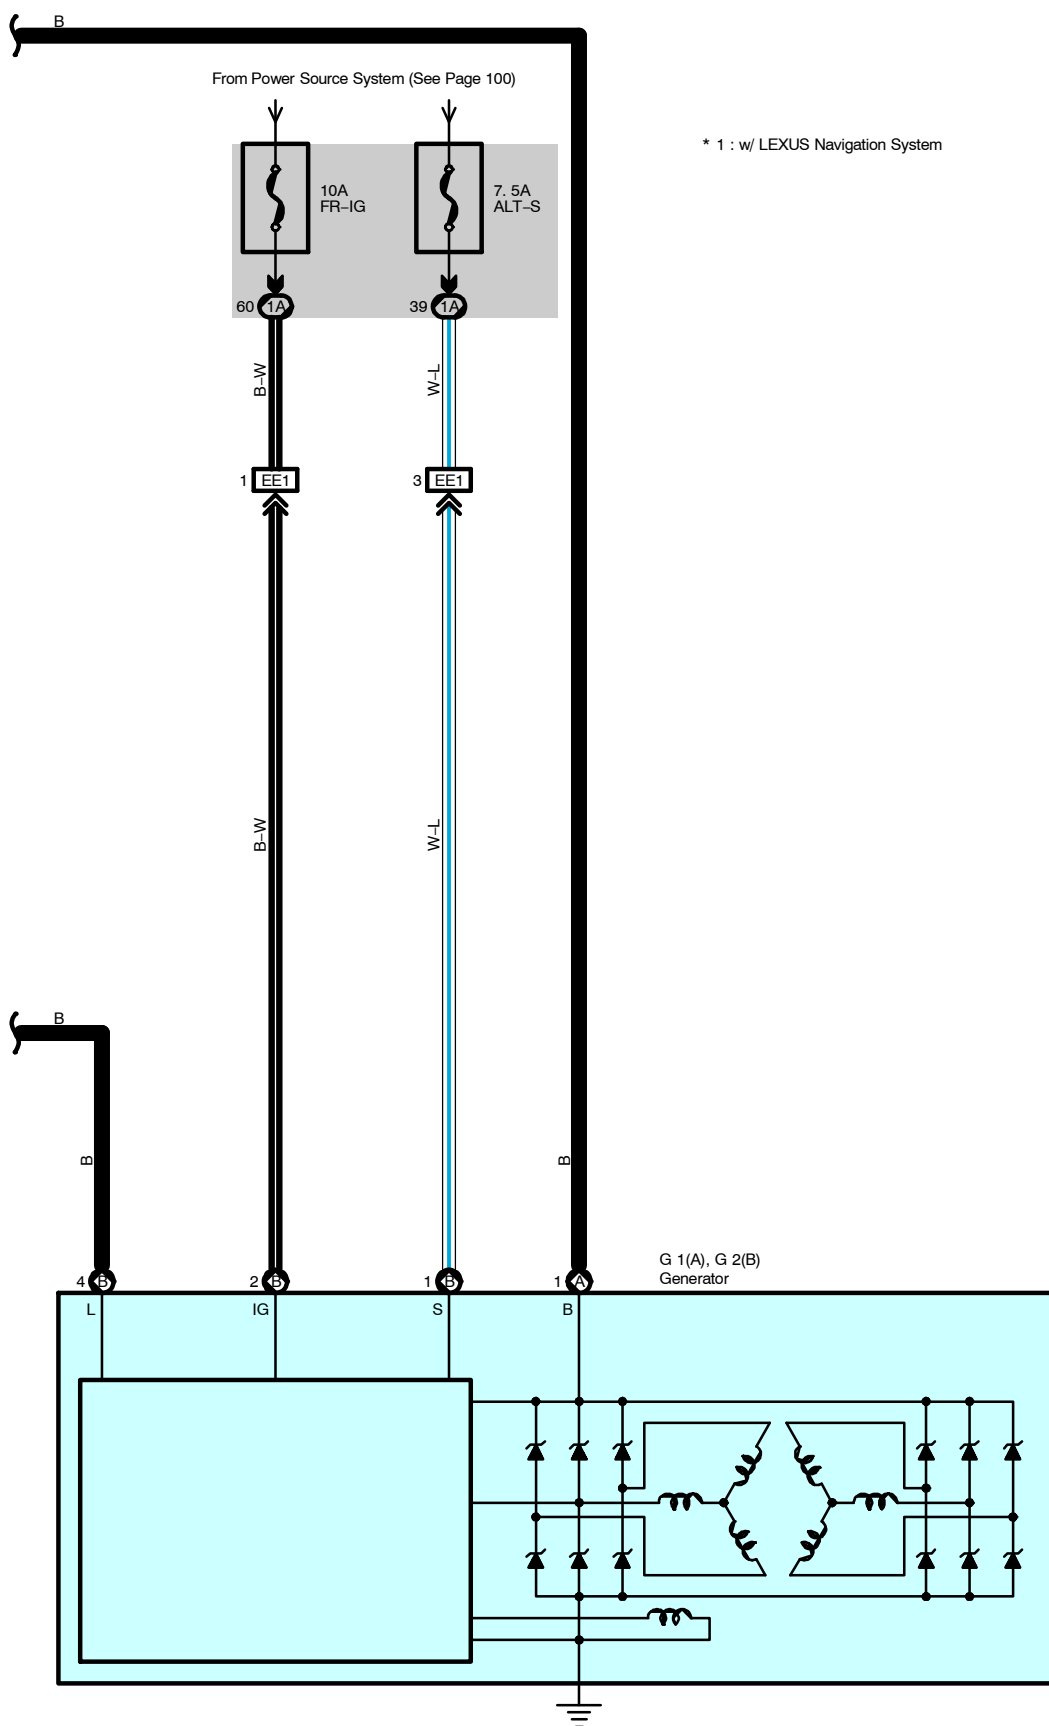

Charging

Service Hints

G1 Generator

1-Ground : 13.2–14.0 volts with engine running at 5000 rpm and 115°C (239°F)

○ : Parts Location

Code		See Page		Code		See Page		Code		See Page	
A47		70		E6	C	71		G2	B	68	
B7		70		E9	D	71		G5		71	
C14	A	71		F20		68		S6		73	
C17	D	71		G1	A	68					

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1B	24	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2B	28	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2E	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2G		
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3Q	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)
4A	52	Dash Wire and J/B No.4 (Instrument Panel Center)
4C		
4E		
4F		
6C	60	Dash Wire and J/B No.6 (Behind the Grove Box)
6D	60	Engine Wire and J/B No.6 (Behind the Grove Box)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EE1	78	Engine Room Main Wire and Alternator Wire (Near the Battery)
IU1	84	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IX1	86	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)
Ii1	88	Engine Wire and Engine Wire (Behind the Glove Box)

▽ : Ground Points

Code	See Page	Ground Points Location
EC	78	Rear Bank of Right Cylinder Head

