



Engine Immobilizer System

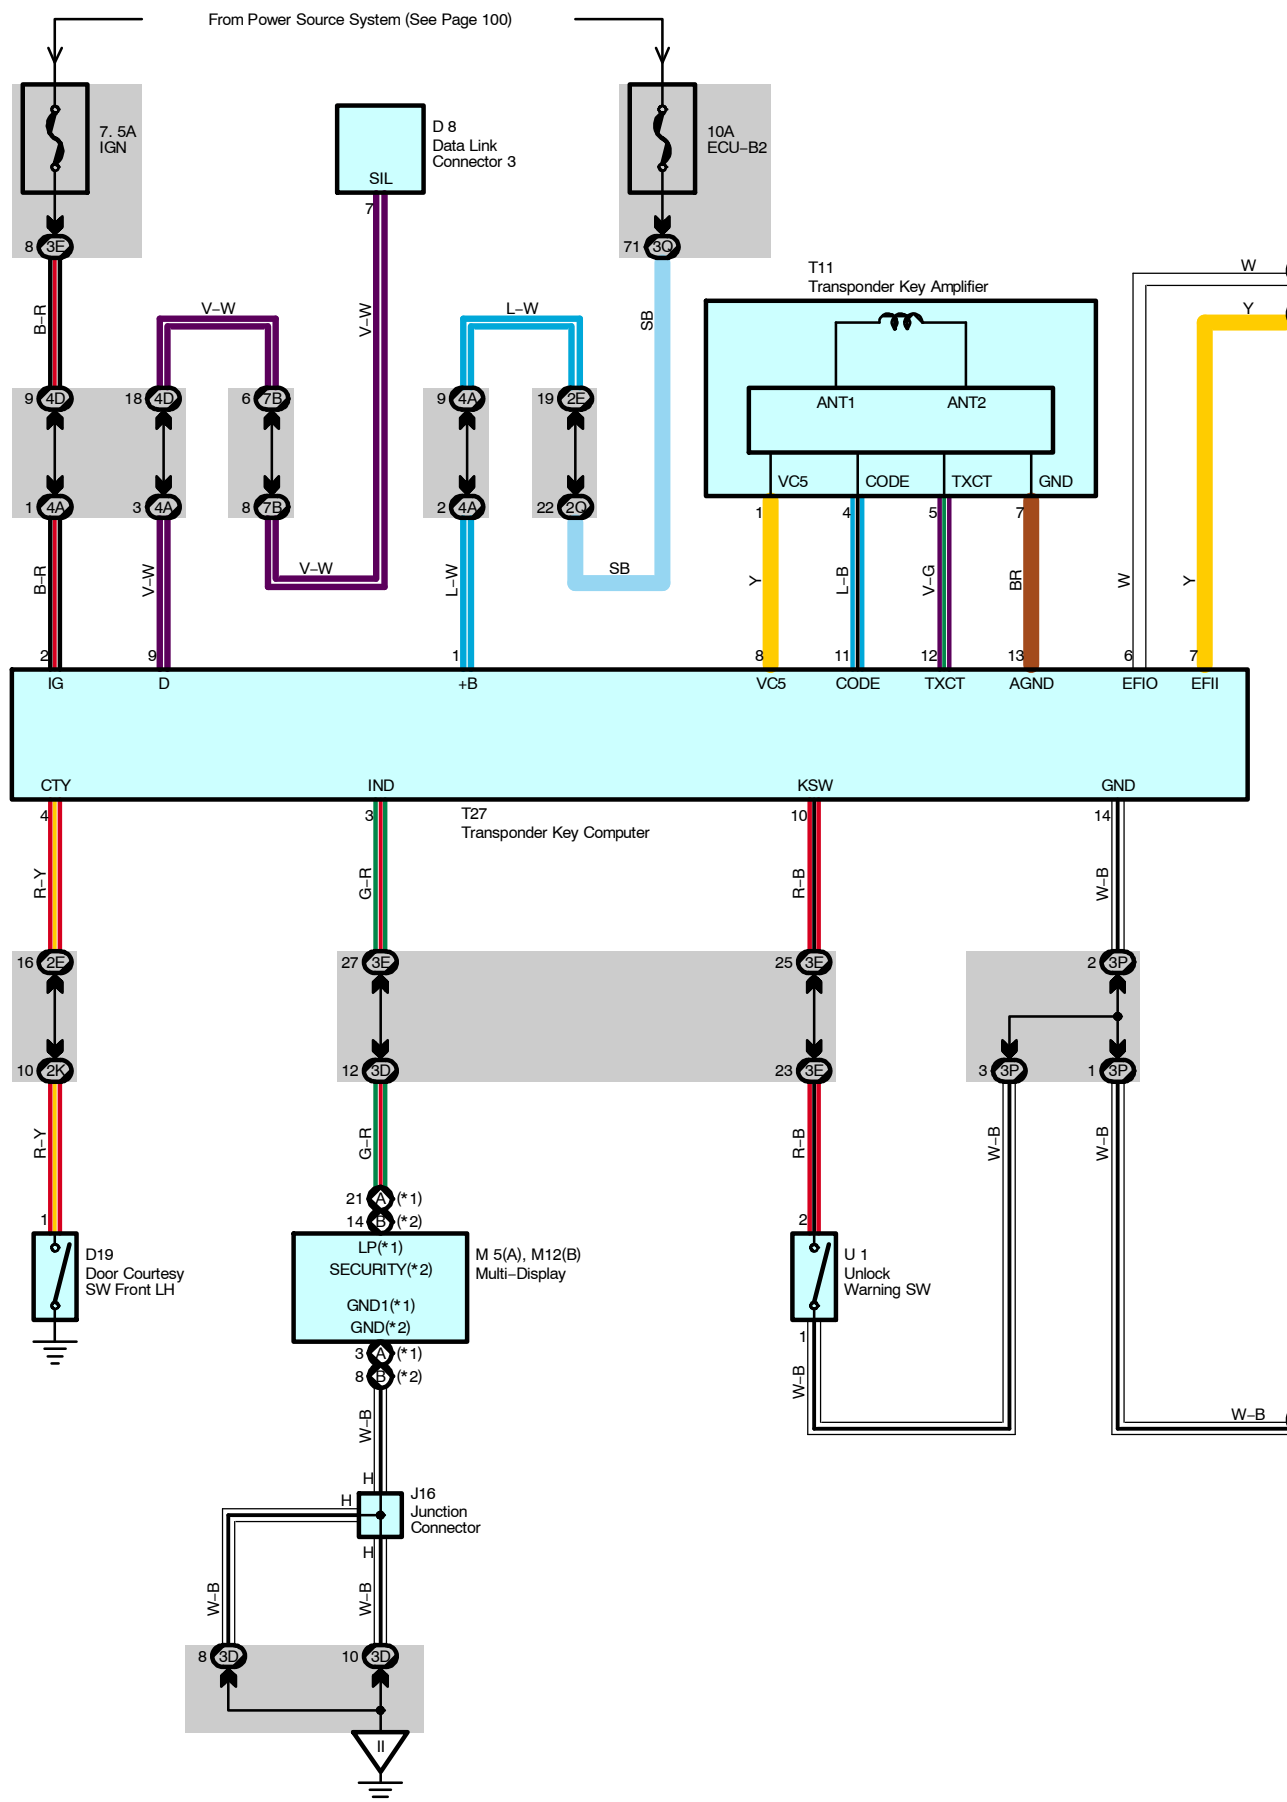

* 1 : w/ LEXUS Navigation System
* 2 : w/o LEXUS Navigation System

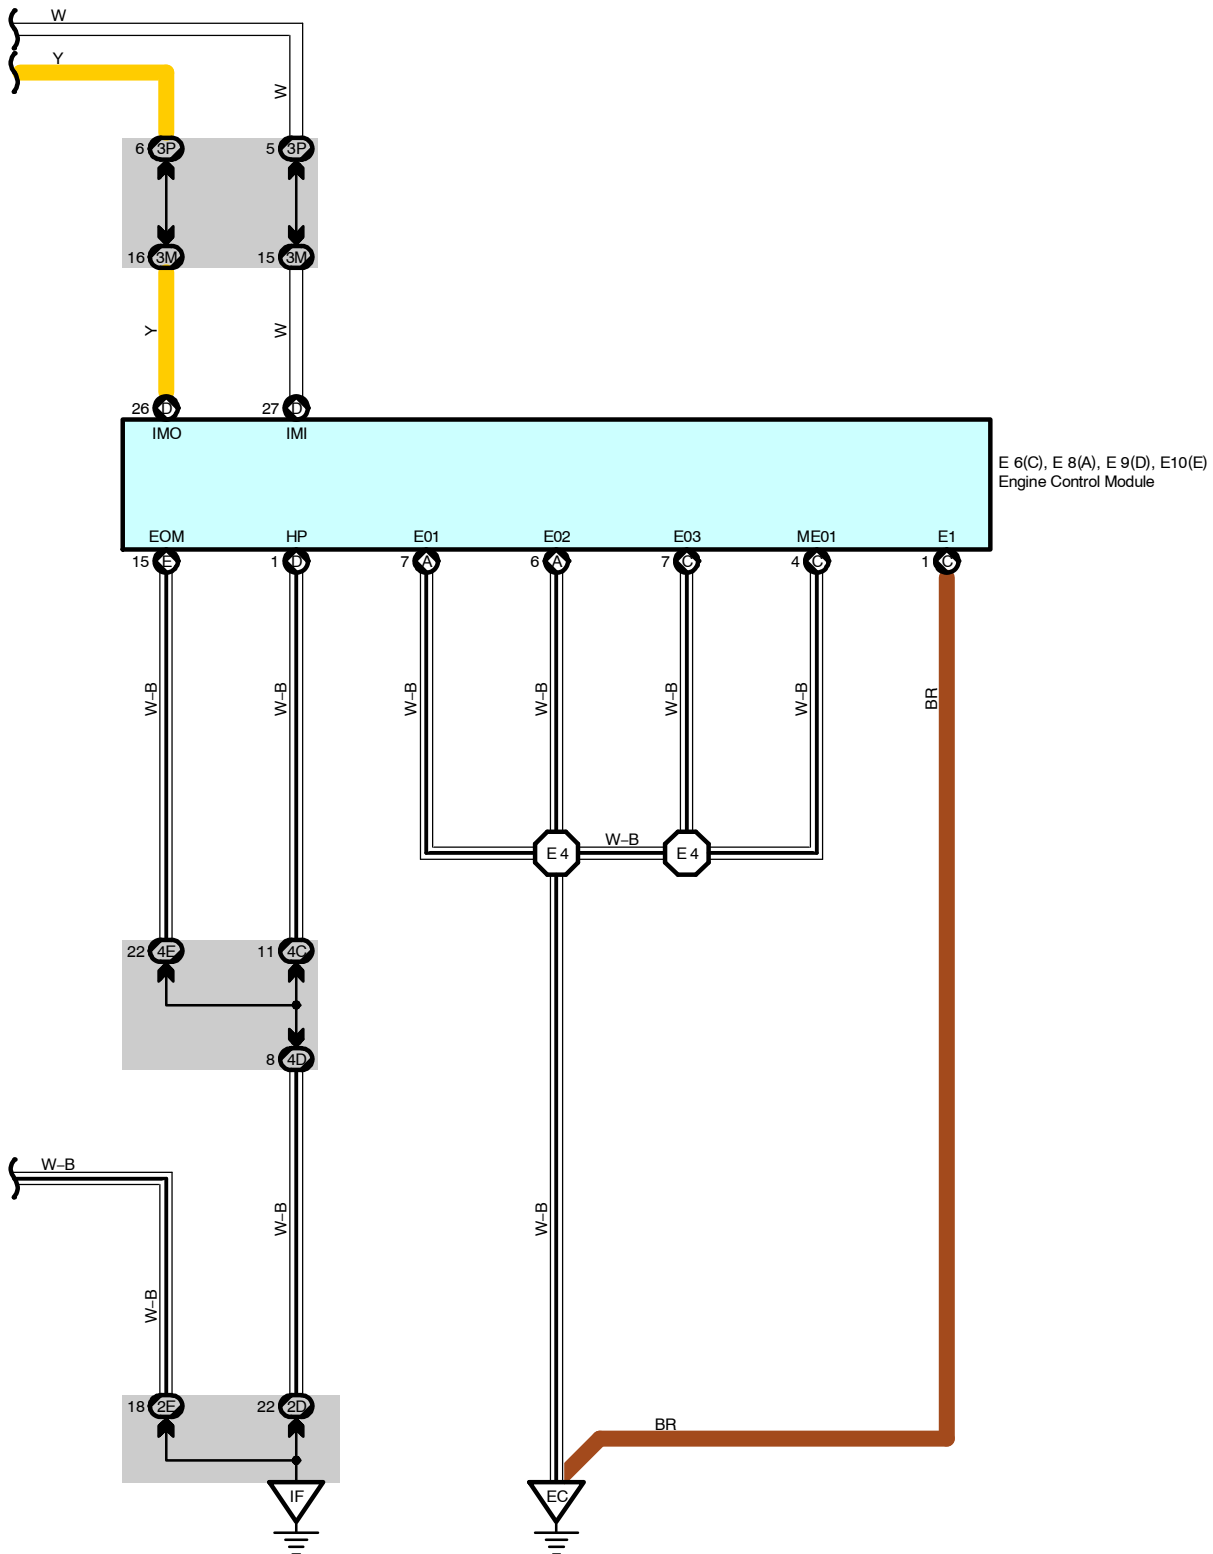

Engine Immobilizer System

Service Hints

T27 Transponder Key Computer

- 1-Ground : Always approx. 12 volts
- 2-Ground : Approx. 12 volts with ignition SW at ON or ST position
- 14-Ground : Always continuity

: Parts Location

Code		See Page		Code		See Page		Code		See Page	
D8		71		E9	D	71		M12	B	72	
D19		74		E10	E	71		T11		73	
E6	C	71		J16		72		T27		73	
E8	A	71		M5	A	72		U1		73	

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2D	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2E		
2K	28	Floor No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3D	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3E		
3M	43	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3P		
3Q	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)
4A	52	Dash Wire and J/B No.4 (Instrument Panel Center)
4C		
4D		
4E		
7B	64	Dash Wire and J/B No.7 (Behind the Grove Box)

: Ground Points

Code	See Page	Ground Points Location
EC	78	Rear Bank of Right Cylinder Head
IF	80	Set Bolt of Cowl Side J/B LH
II	80	Set Bolt of Cowl Side J/B RH

: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E4	78	Engine Wire			

