


Front Fog Light

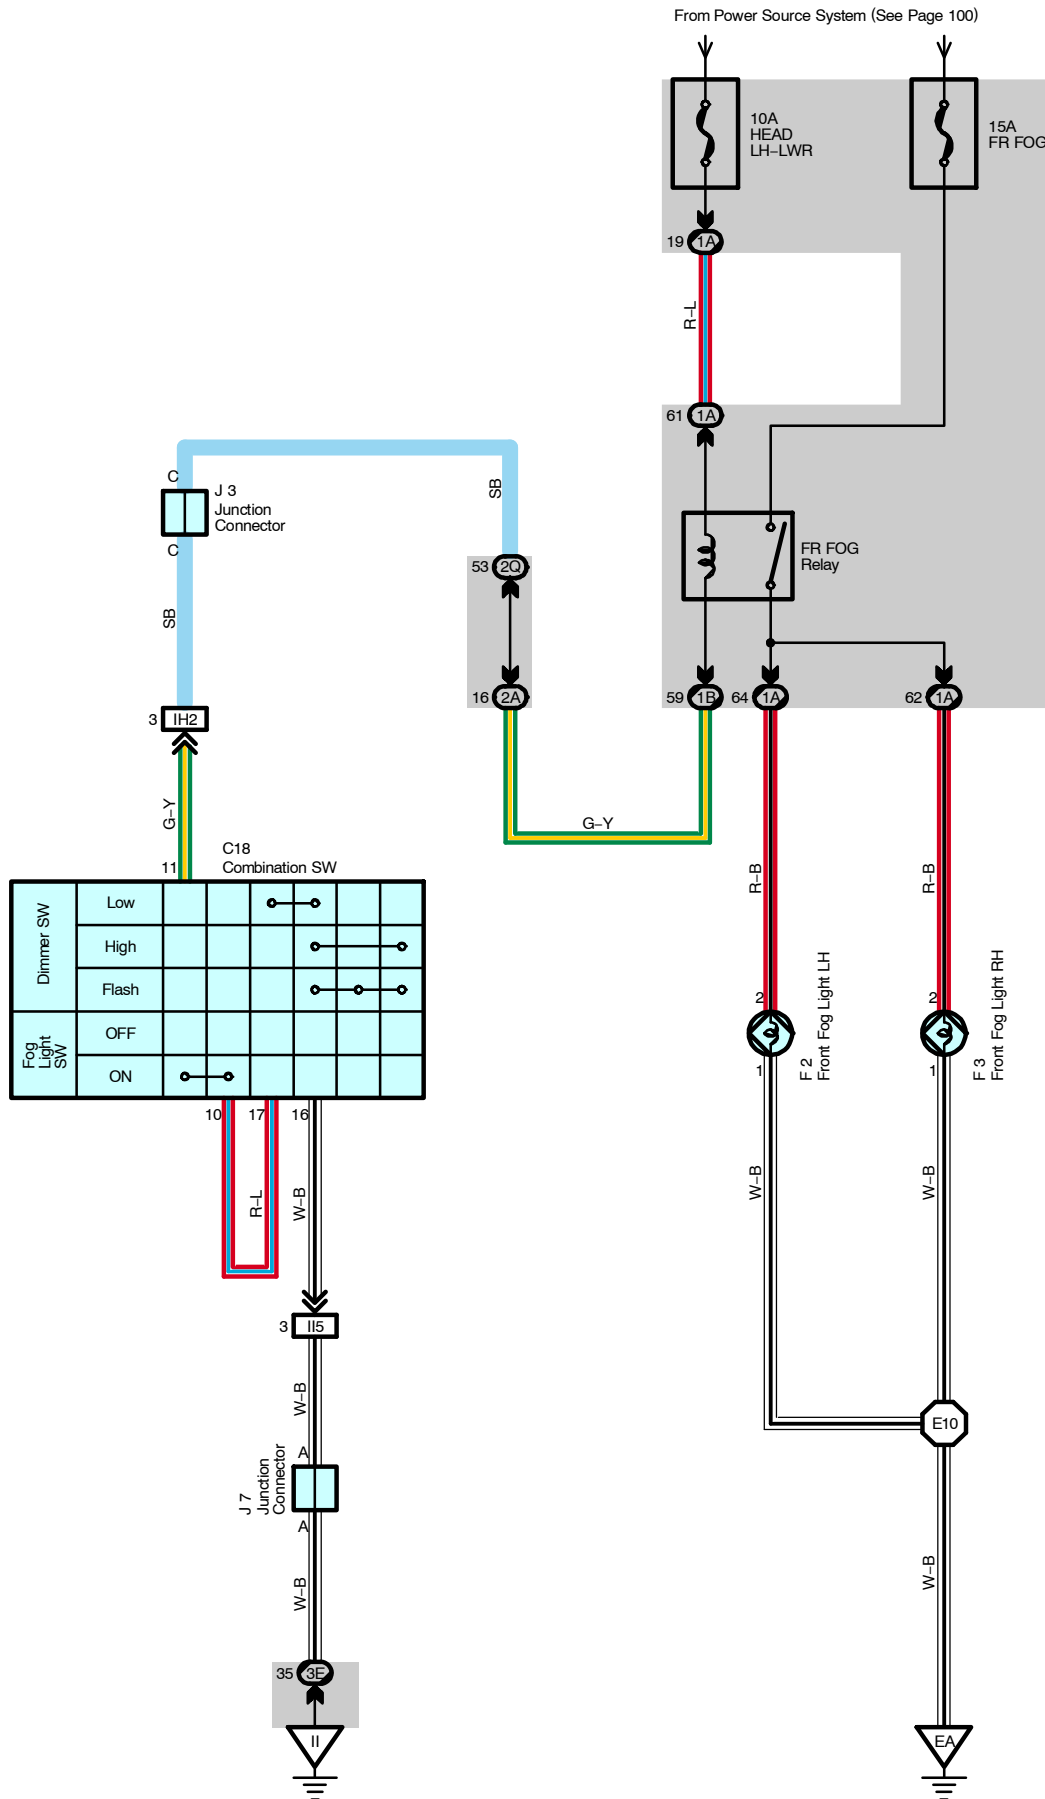

Service Hints

C18 Combination SW

11-Ground : Continuity with light control SW at HEAD position, dimmer SW at LOW position and fog light SW at ON position

: Parts Location

Code	See Page	Code	See Page	Code	See Page
C18	71	F3	68	J7	72
F2	68	J3	72		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1B	24	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2A	28	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3E	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IH2	82	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)
II5	82	Dash Wire and Column Wire (Near the Ignition SW)

: Ground Points

Code	See Page	Ground Points Location
EA	78	Front Right Side of Fender Apron
II	80	Set Bolt of Cowl Side J/B RH

: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E10	78	Engine Room Main Wire			