



Taillight

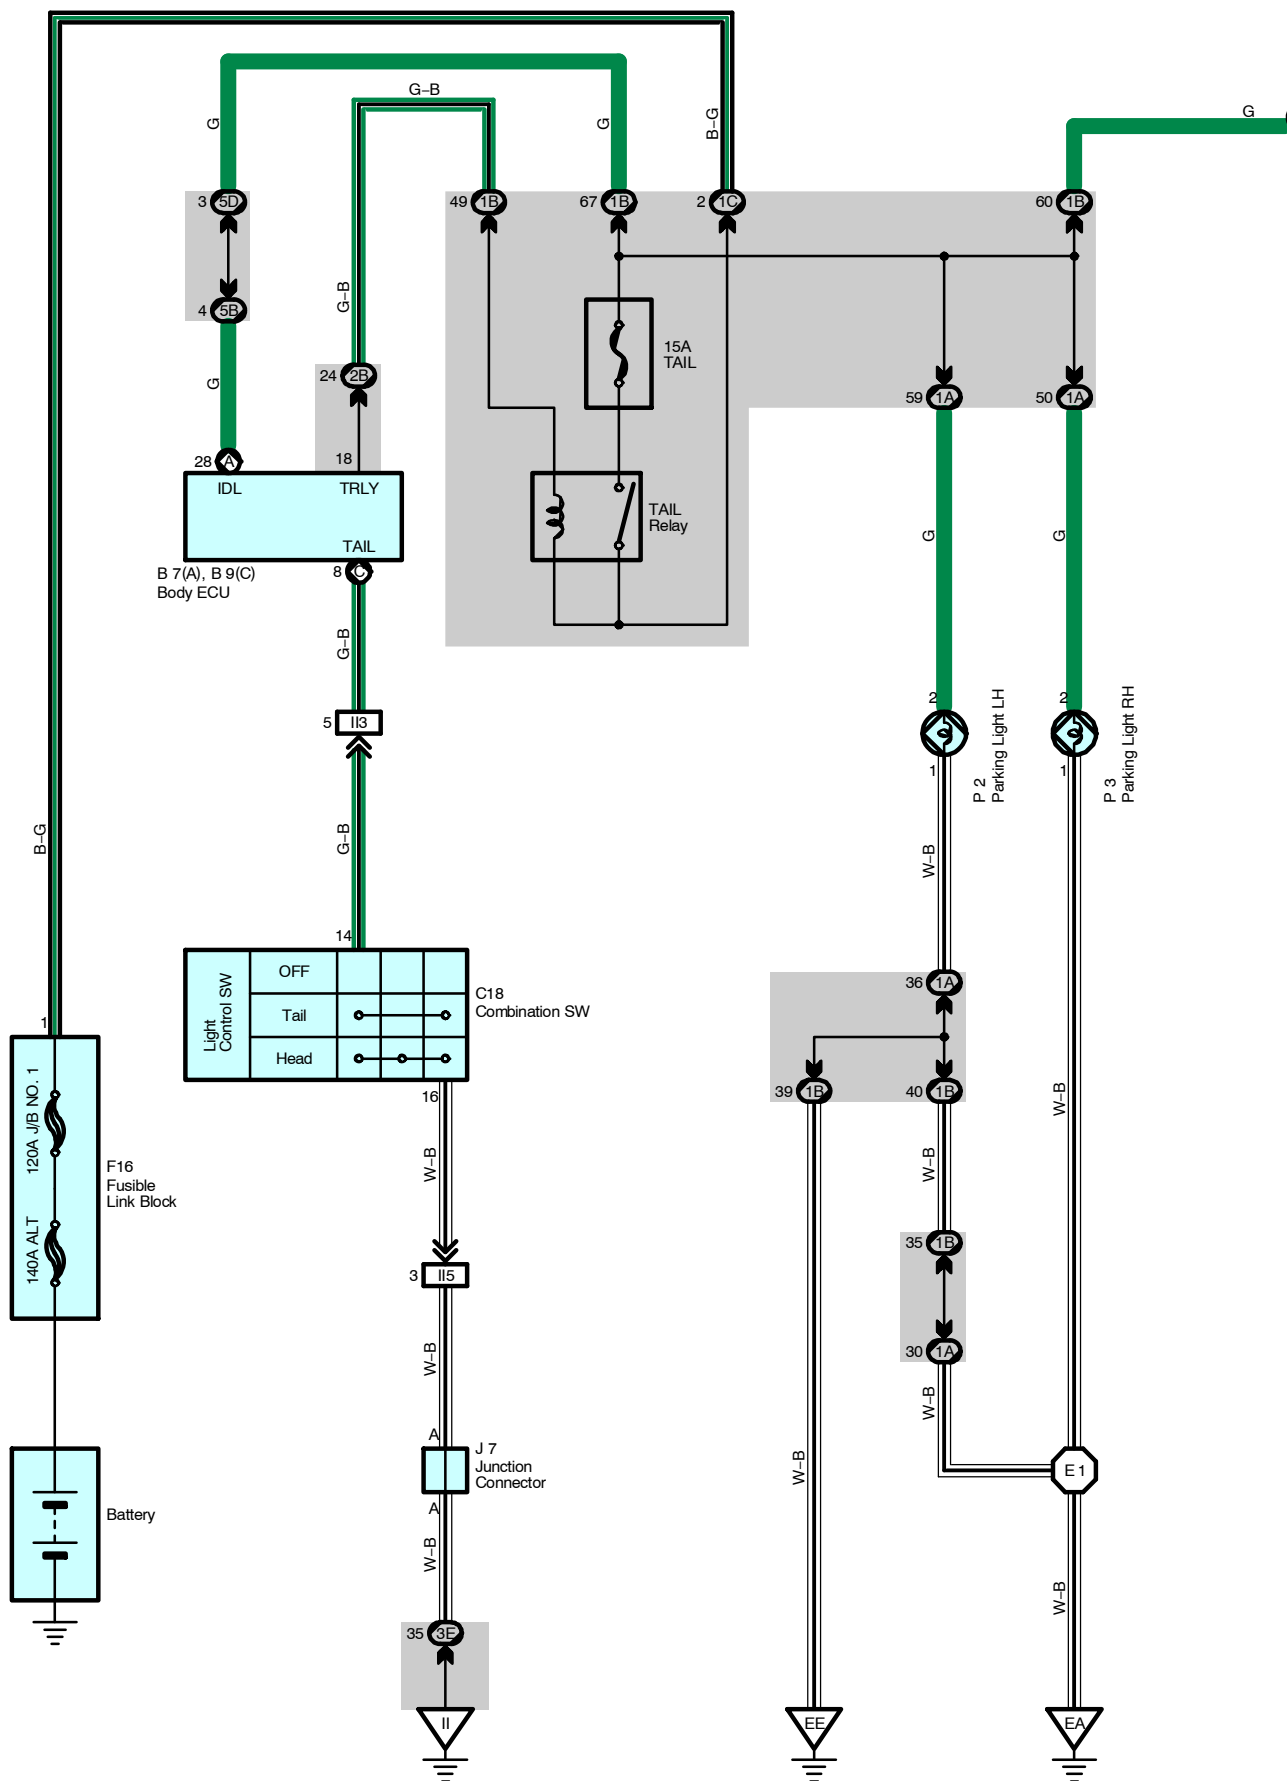

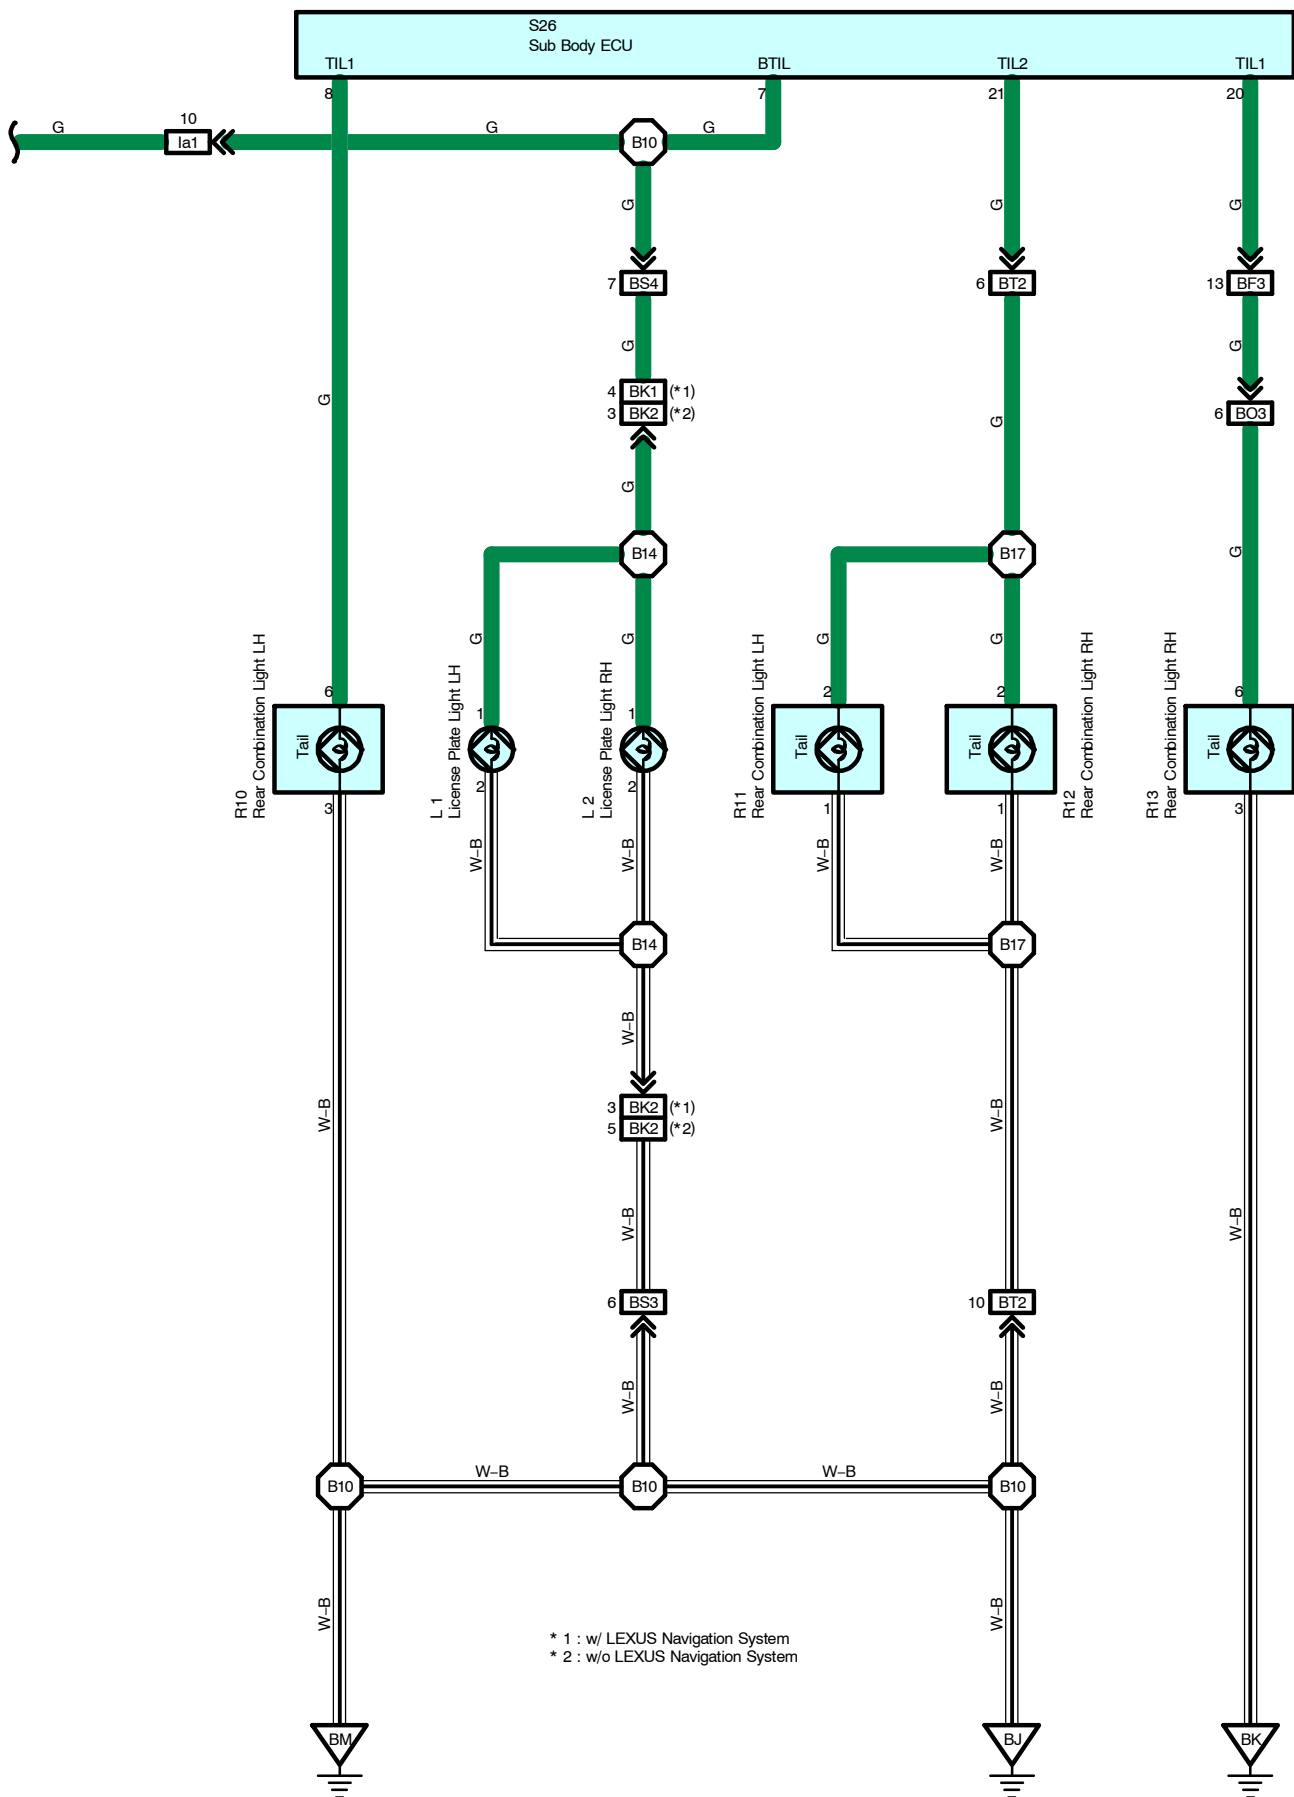

Taillight

Service Hints

C18 Combination SW

14-16 : Closed with light control SW at TAIL or HEAD position

○ : Parts Location

Code		See Page	Code	See Page	Code	See Page
B7	A	70	L1	74	R11	75
B9	C	70	L2	74	R12	75
C18		71	P2	69	R13	75
F16		68	P3	69	S26	75
J7		72	R10	75		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1B	24	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1C		
2B	28	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
3E	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
5B	56	Dash Wire and J/B No.5 (Behind the Combination Meter)
5D	56	Engine Room No.2 Wire and J/B No.5 (Behind the Combination Meter)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
II3	82	Dash Wire and Column Wire (Near the Ignition SW)
II5		
Ia1	86	Engine Room No.2 Wire and Floor No.1 Wire (Left Kick Panel)
BF3	90	Floor No.3 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BK1	92	Pillar No.1 Wire and Back Door Upper Wire (Left Side of Back Door)
BK2		
BO3	94	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)
BS3	94	Pillar No.1 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BS4		
BT2	94	Back Door Lower Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
EA	78	Front Right Side of Fender Apron
EE	78	Front Left Side of Fender Apron
II	80	Set Bolt of Cowl Side J/B RH
BJ	90	Under the Driver's Seat
BK	90	Front Side Under the Front Passenger's Seat
BM	90	Left Rear Side Quarter Panel

○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	78	Engine Room Main Wire	B14	92	Back Door Upper Wire
B10	92	Floor No.1 Wire	B17	92	Back Door Lower Wire

