



Trailer Towing

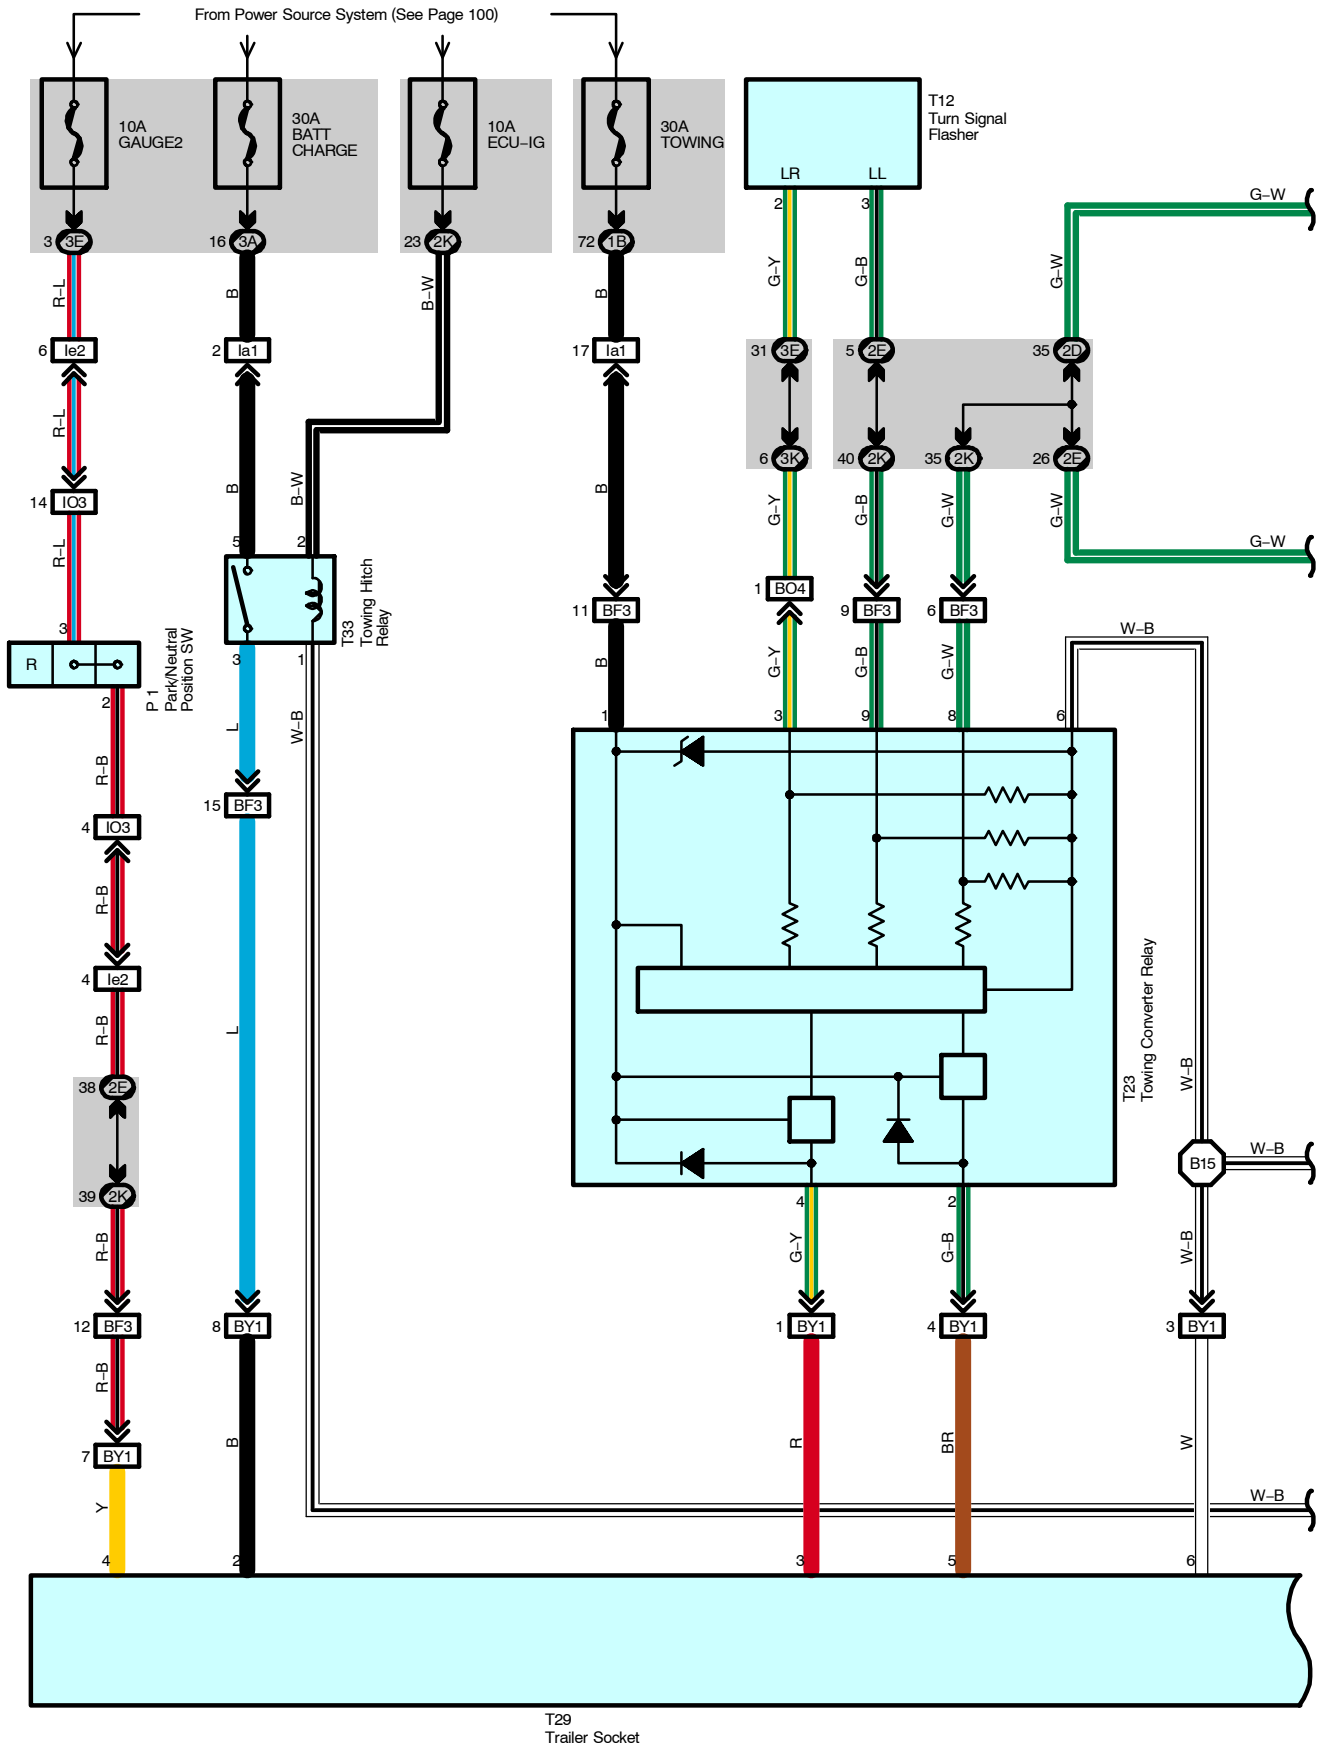

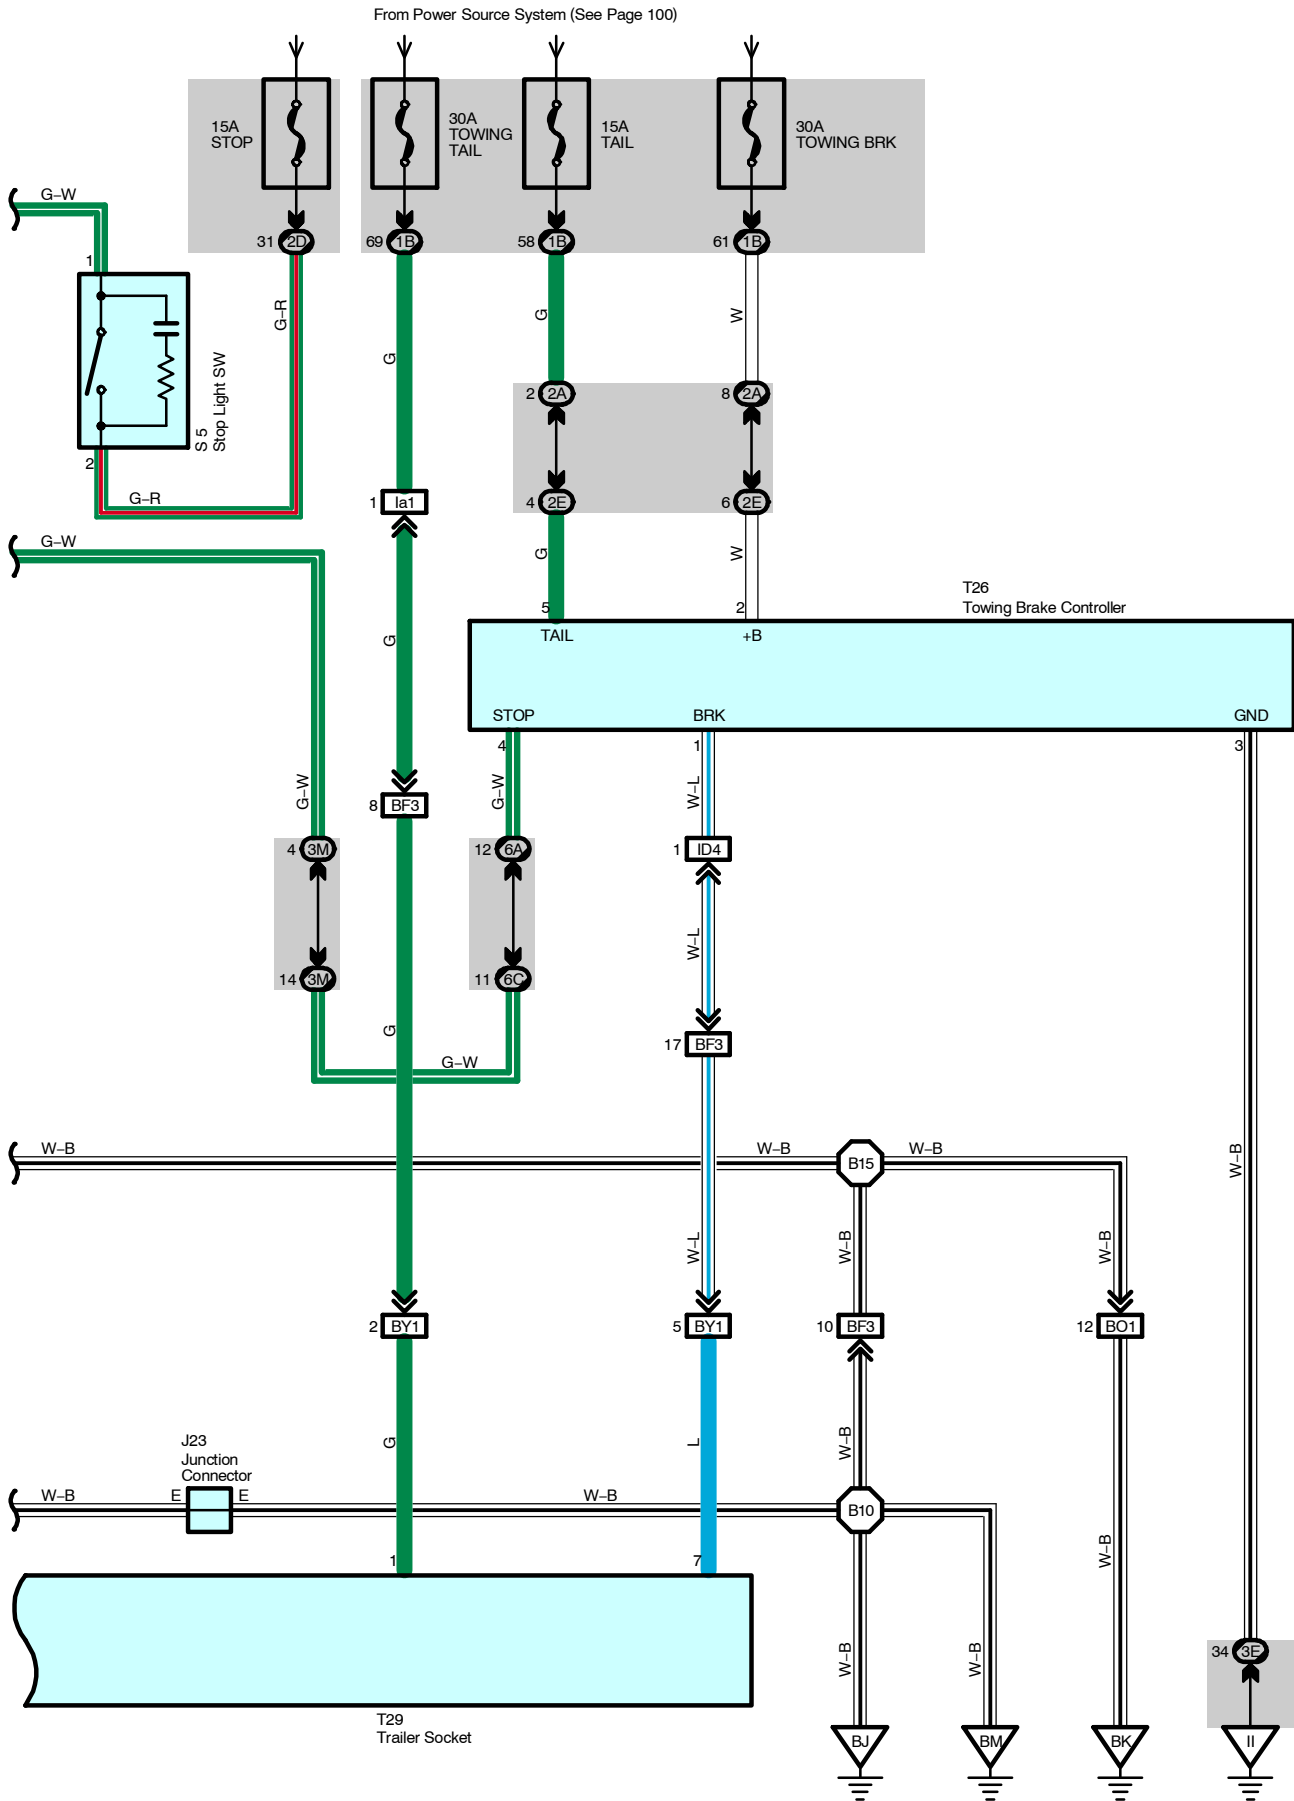

Trailer Towing

Service Hints

T23 Towing Converter Relay

- 1-Ground : Always approx. 12 volts
- 6-Ground : Always continuity

S5 Stop Light SW

- 2-1 : Closed with brake pedal depressed

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
J23	74	T12	73	T29	75
P1	69	T23	75	T33	75
S5	73	T26	73		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2A	28	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2D	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2E		
2K	28	Floor No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
3A	40	Engine Room No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3E	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3K	40	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3M	43	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
6A	60	Dash Wire and J/B No.6 (Behind the Grove Box)
6C		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID4	80	Dash Wire and Floor No.1 Wire (Left Kick Panel)
IO3	82	Engine Wire and Dash Wire (Behind the Glove Box)
Ia1	86	Engine Room No.2 Wire and Floor No.1 Wire (Left Kick Panel)
Ie2	86	Dash Wire and Dash Wire (Behind the Combination Meter)
BF3	90	Floor No.3 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BO1	94	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)
BO4		
BY1	94	Frame No.4 Wire and Floor No.3 Wire (Left Side of Rear Floor Crossmember)

▽ : Ground Points

Code	See Page	Ground Points Location
II	80	Set Bolt of Cowl Side J/B RH
BJ	90	Under the Driver's Seat
BK	90	Front Side Under the Front Passenger's Seat
BM	90	Left Rear Side Quarter Panel

○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B10	92	Floor No.1 Wire	B15	92	Floor No.3 Wire

