


Headlight Cleaner

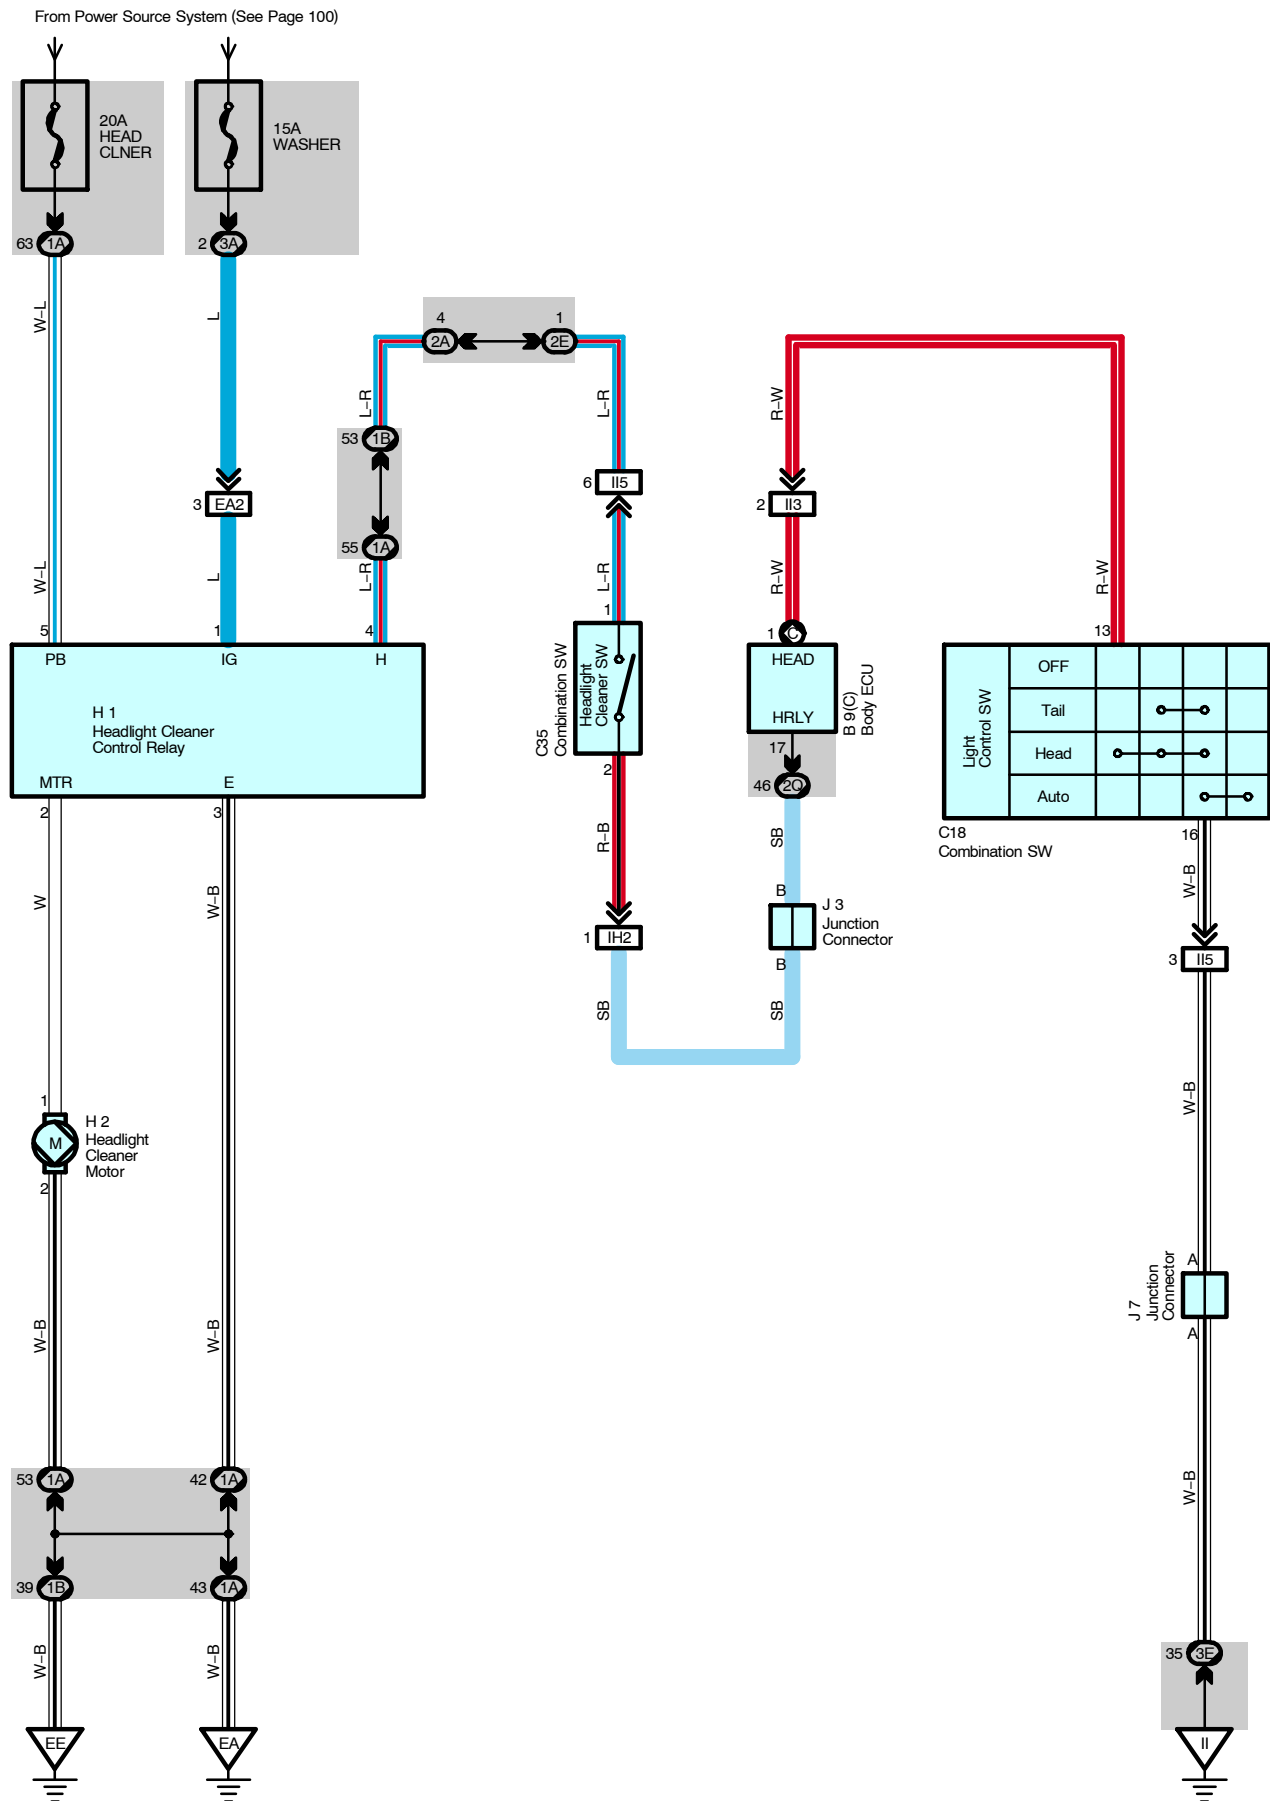

Service Hints

H1 Headlight Cleaner Control Relay

5-Ground : Always approx. 12 volts

1-Ground : Approx. 12 volts with ignition SW at ON or ST position

3-Ground : Always continuity

○ : Parts Location

Code		See Page	Code	See Page	Code	See Page
B9	C	70	H1	69	J7	72
C18		71	H2	69		
C35		71	J3	72		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1B	24	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2A	28	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2E	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3A	40	Engine Room No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3E	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA2	78	Engine Room Main Wire and Engine Room No.2 Wire (Engine Compartment Right)
IH2	82	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)
II3	82	Dash Wire and Column Wire (Near the Ignition SW)
II5		

▽ : Ground Points

Code	See Page	Ground Points Location
EA	78	Front Right Side of Fender Apron
EE	78	Front Left Side of Fender Apron
II	80	Set Bolt of Cowl Side J/B RH