


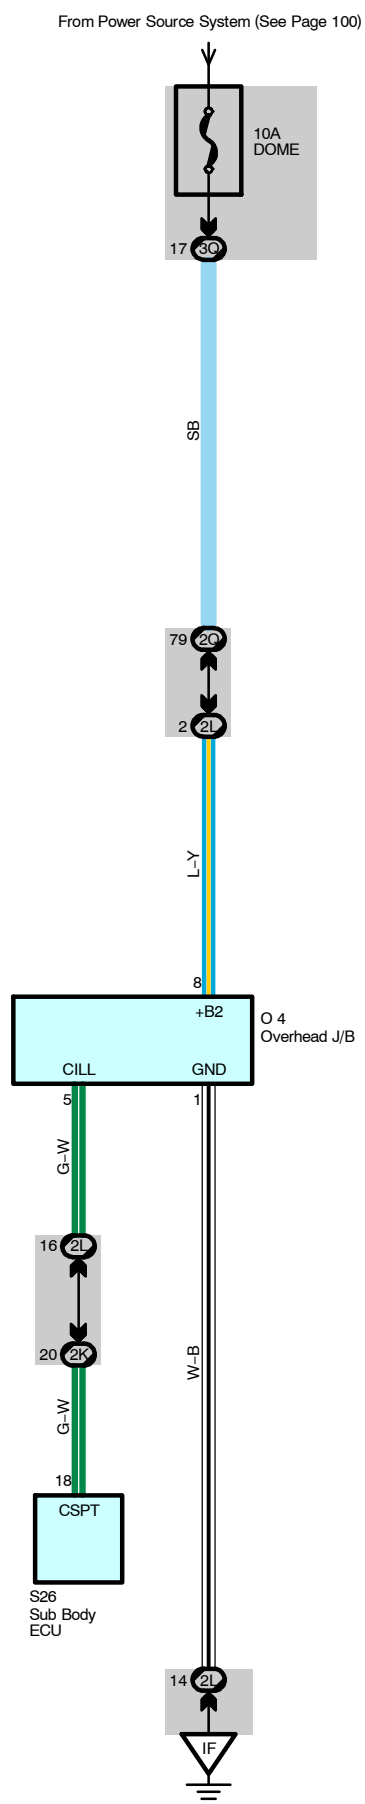

Service Hints

O4 Overhead J/B

8-Ground : Always approx. 12 volts

1-Ground : Always continuity

: Parts Location

Code	See Page	Code	See Page	Code	See Page
O4	74	S26	75		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2K	28	Floor No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
2L	28	Roof No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3Q	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

: Ground Points

Code	See Page	Ground Points Location
IF	80	Set Bolt of Cowl Side J/B LH