



Center Differential Lock

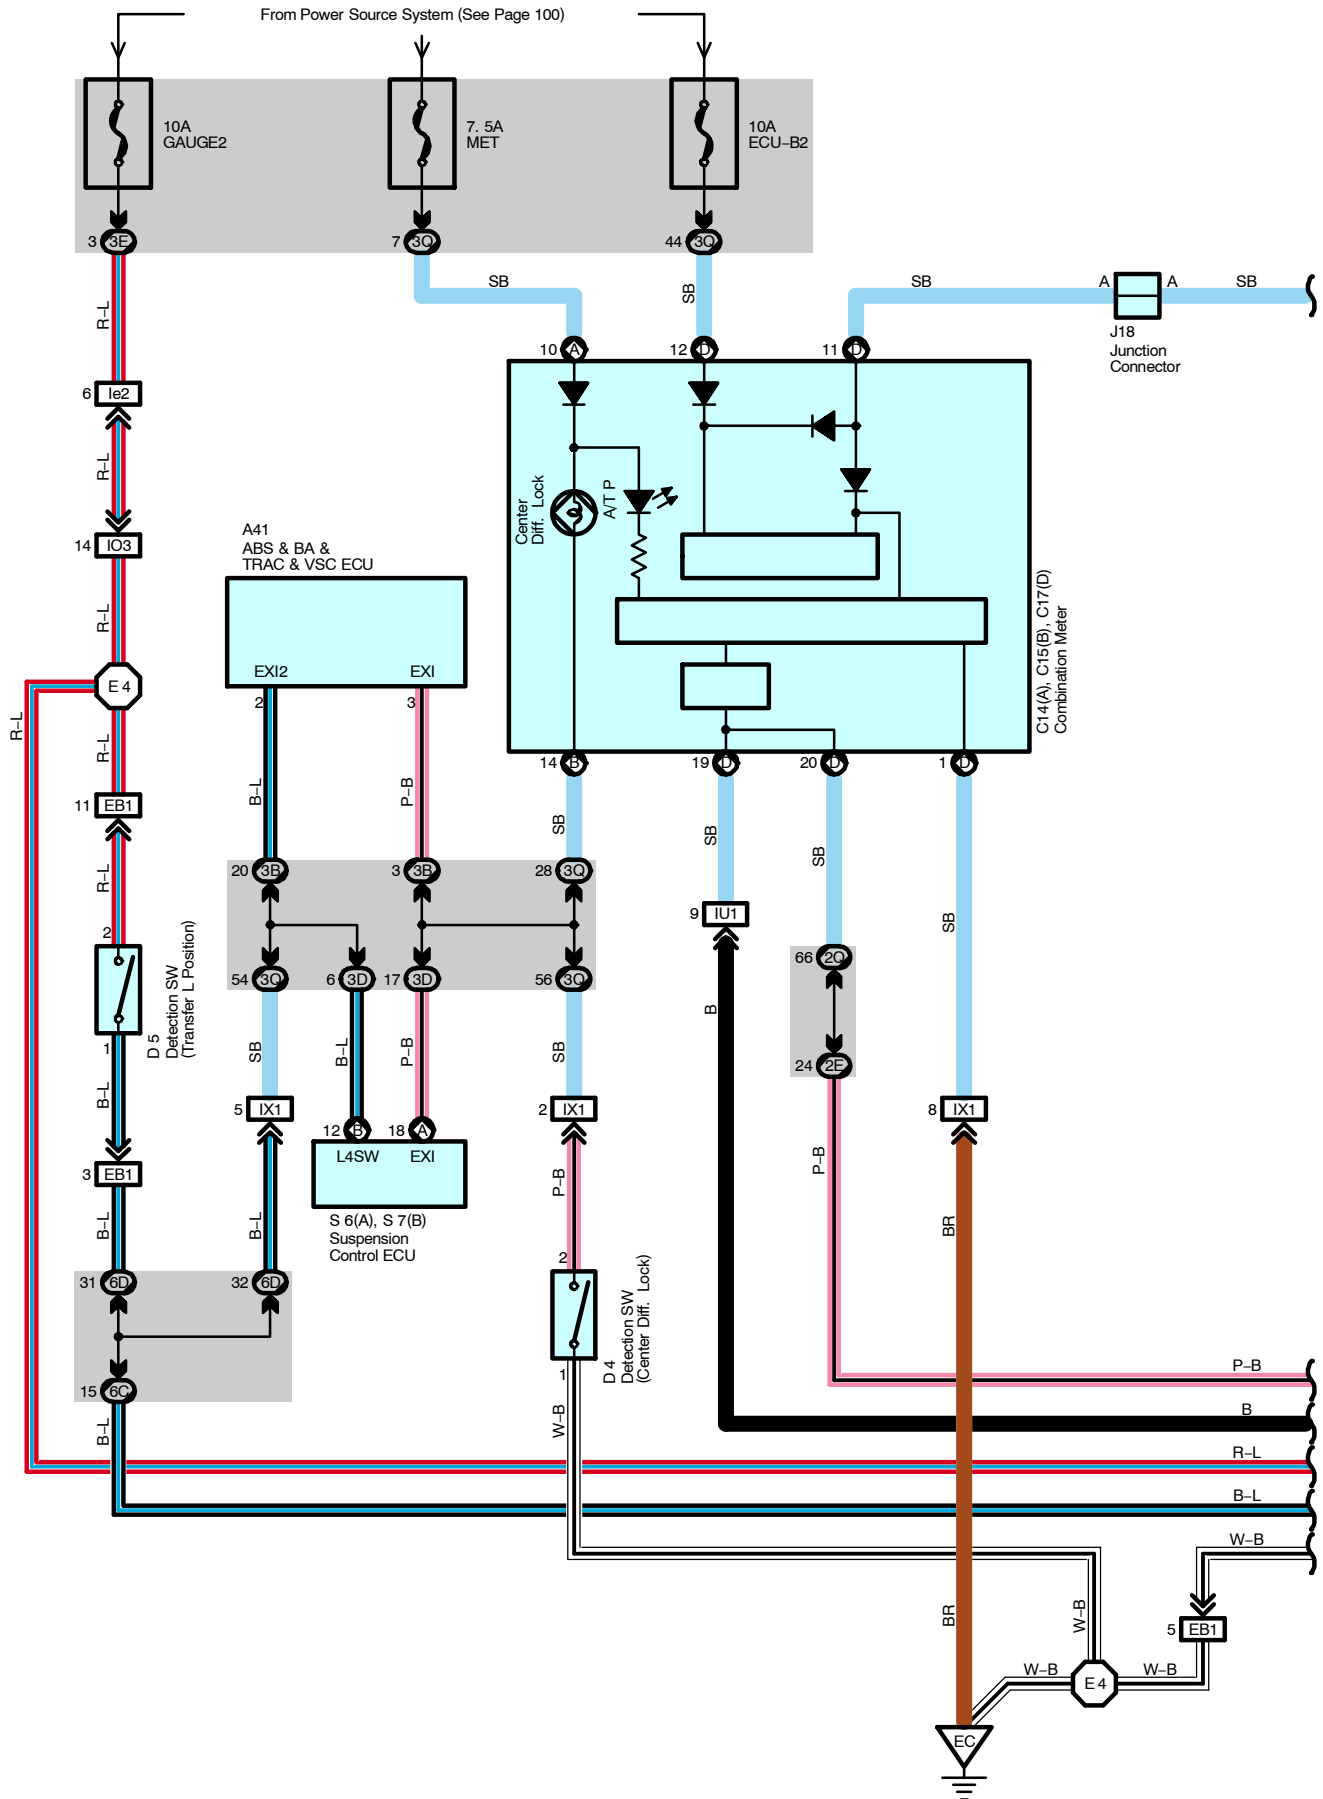

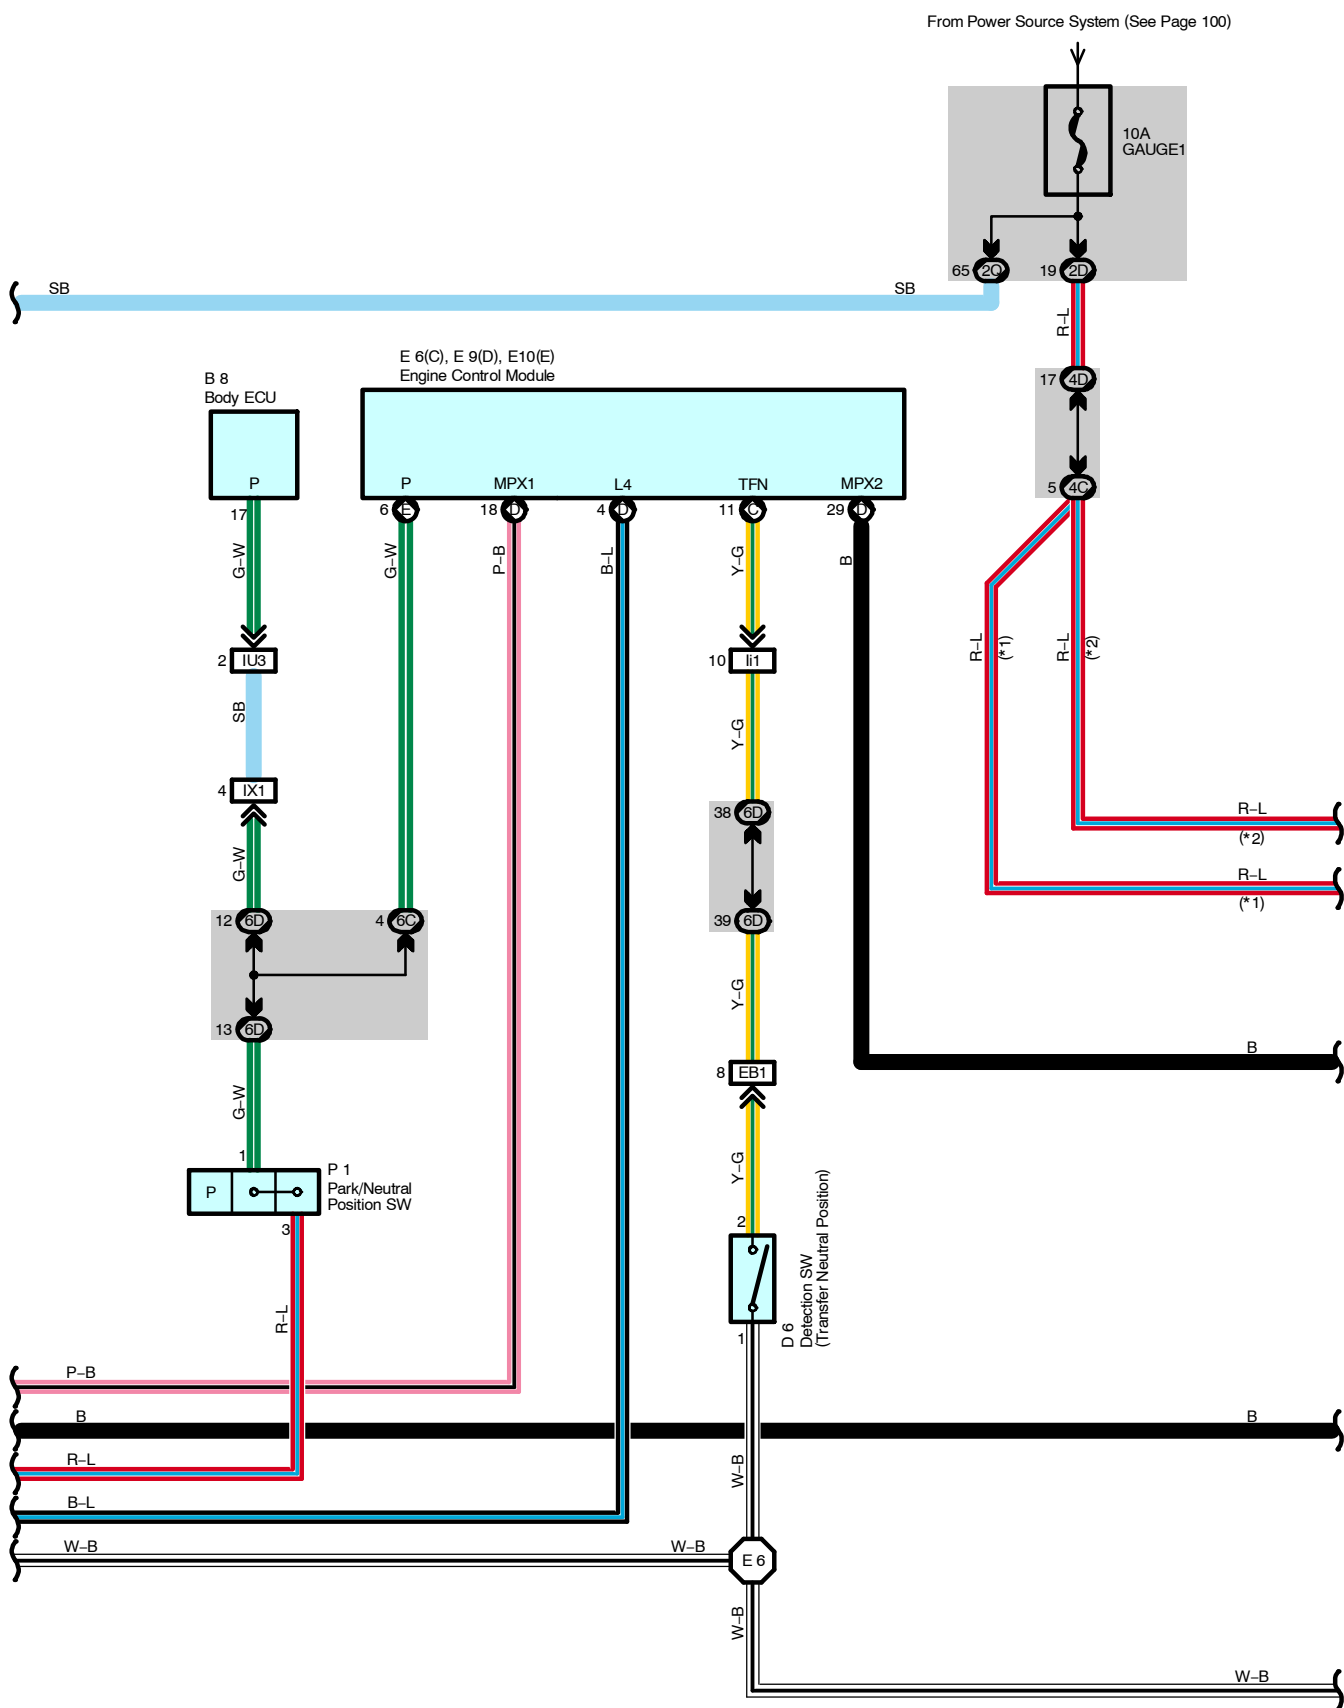



Service Hints

C7 Center Diff. Lock Control Relay

3-Ground : Approx. 12 volts with ignition SW at ON or ST position

2-Ground : Always continuity

○ : Parts Location

Code		See Page		Code		See Page		Code		See Page	
A41		70		C17	D	71		E10	E	71	
A47		70		C34		71		G5		71	
B8		70		D4		68		J18		72	
C2		68		D5		68		P1		69	
C7		71		D6		68		S6	A	73	
C14	A	71		E6	C	71		S7	B	73	
C15	B	71		E9	D	71					

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2D	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2E		
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3B	40	Engine Room No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3D	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3E		
3Q	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)
4A	52	Dash Wire and J/B No.4 (Instrument Panel Center)
4C		
4D		
4E		
4F		
6B	60	Dash Wire and J/B No.6 (Behind the Grove Box)
6C		
6D	60	Engine Wire and J/B No.6 (Behind the Grove Box)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	78	Engine Wire and Transmission Wire (On the Transmission)
IO3	82	Engine Wire and Dash Wire (Behind the Glove Box)
IU1	84	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IU3		
IX1	86	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)
Ie1	86	Dash Wire and Dash Wire (Behind the Combination Meter)
Ie2		
Ii1	88	Engine Wire and Engine Wire (Behind the Glove Box)

▽ : Ground Points

Code	See Page	Ground Points Location
EC	78	Rear Bank of Right Cylinder Head
II	80	Set Bolt of Cowl Side J/B RH

○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E4	78	Engine Wire	E6	78	Transmission Wire