


Power Seat for Front Passenger's Seat

From Power Source System (See Page 100)

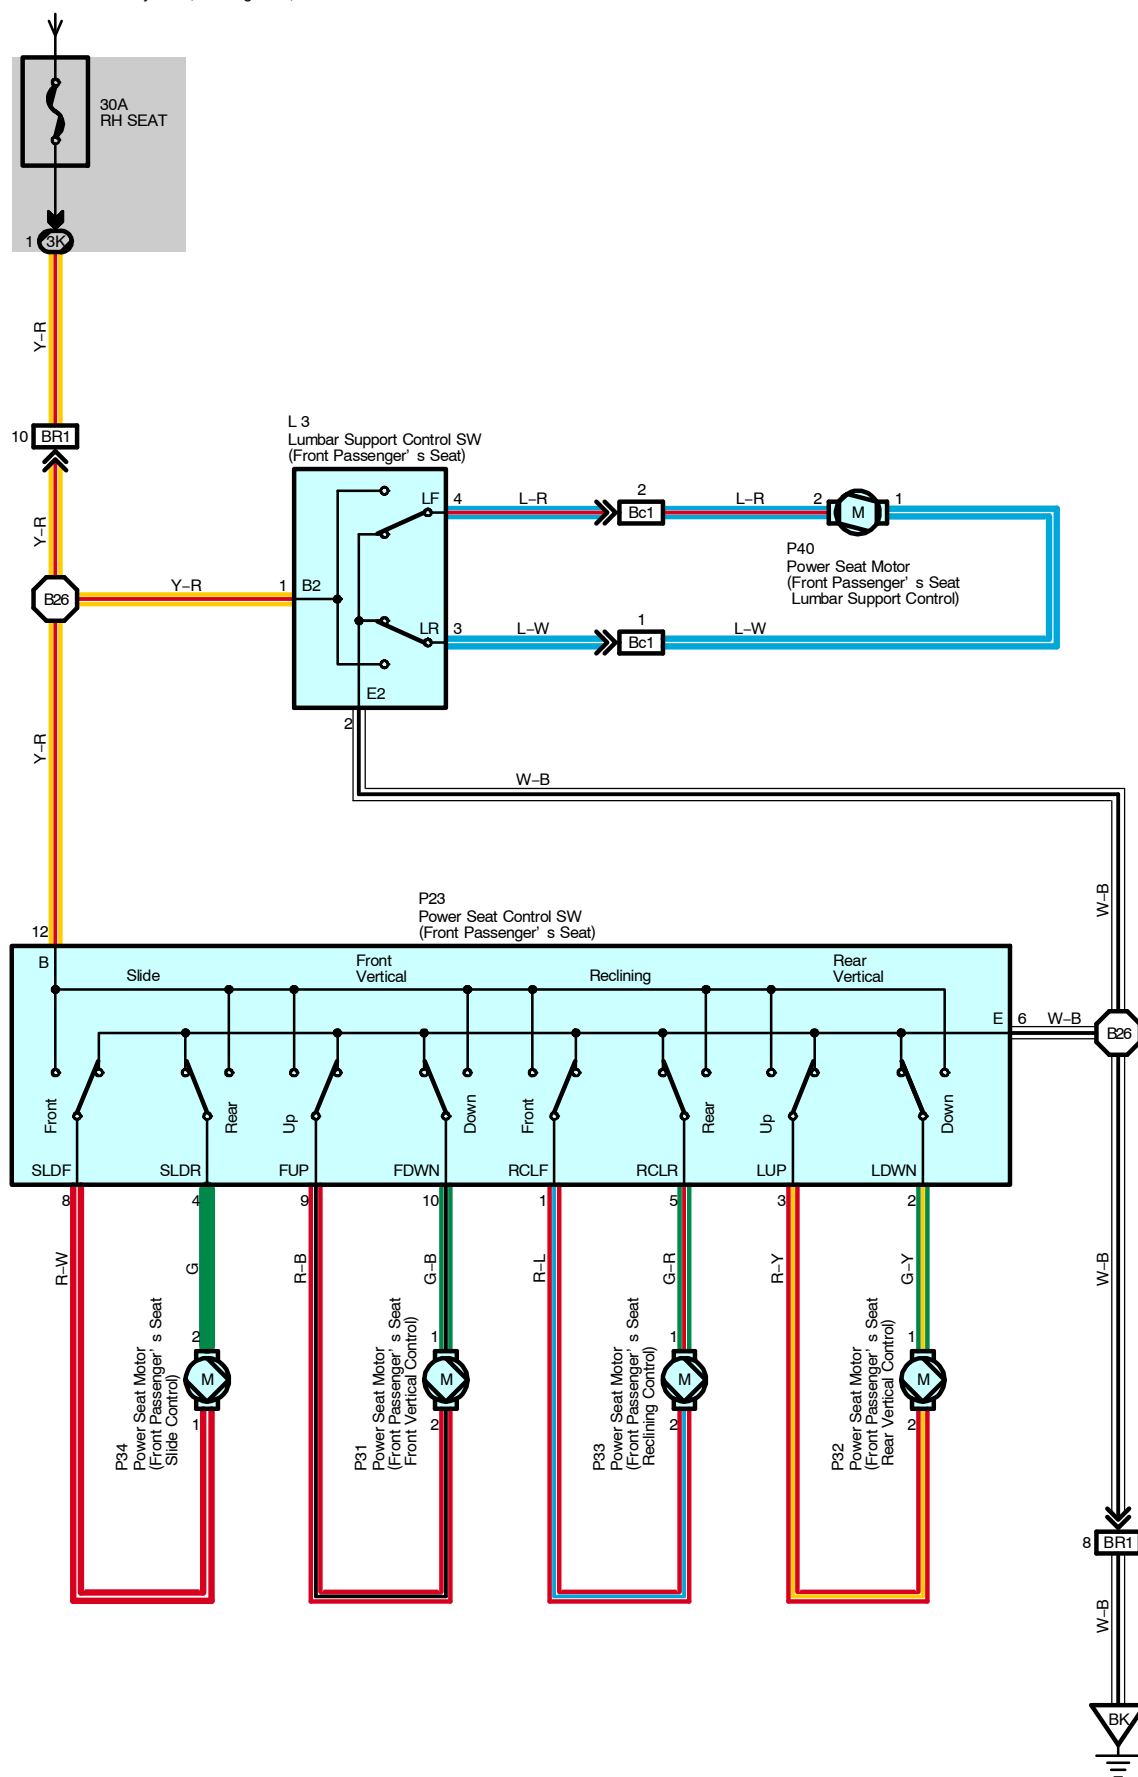

Service Hints

P23 Power Seat Control SW (Front Passenger's Seat)

- 12-1 : Closed with front passenger's seat at front reclining operation
- 12-5 : Closed with front passenger's seat at rear reclining operation
- 12-9 : Closed with front passenger's seat at front vertical up operation
- 12-10 : Closed with front passenger's seat at front vertical down operation
- 12-3 : Closed with front passenger's seat at rear vertical up operation
- 12-2 : Closed with front passenger's seat at rear vertical down operation
- 12-8 : Closed with front passenger's seat at front slide operation
- 12-4 : Closed with front passenger's seat at rear slide operation
- 6-Ground : Always continuity

: Parts Location

Code	See Page	Code	See Page	Code	See Page
L3	76	P32	76	P40	76
P23	76	P33	76		
P31	76	P34	76		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3K	40	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BR1	96	Floor No.2 Wire and Front Seat RH Wire (Front Side Under the Front Passenger's Seat)
Bc1	96	Seat No.2 Wire and Front Seat RH Wire (Rear Side Under the Front Passenger's Seat)

: Ground Points

Code	See Page	Ground Points Location
BK	90	Front Side Under the Front Passenger's Seat

: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B26	96	Front Seat RH Wire			