




Audio System with Navigation System

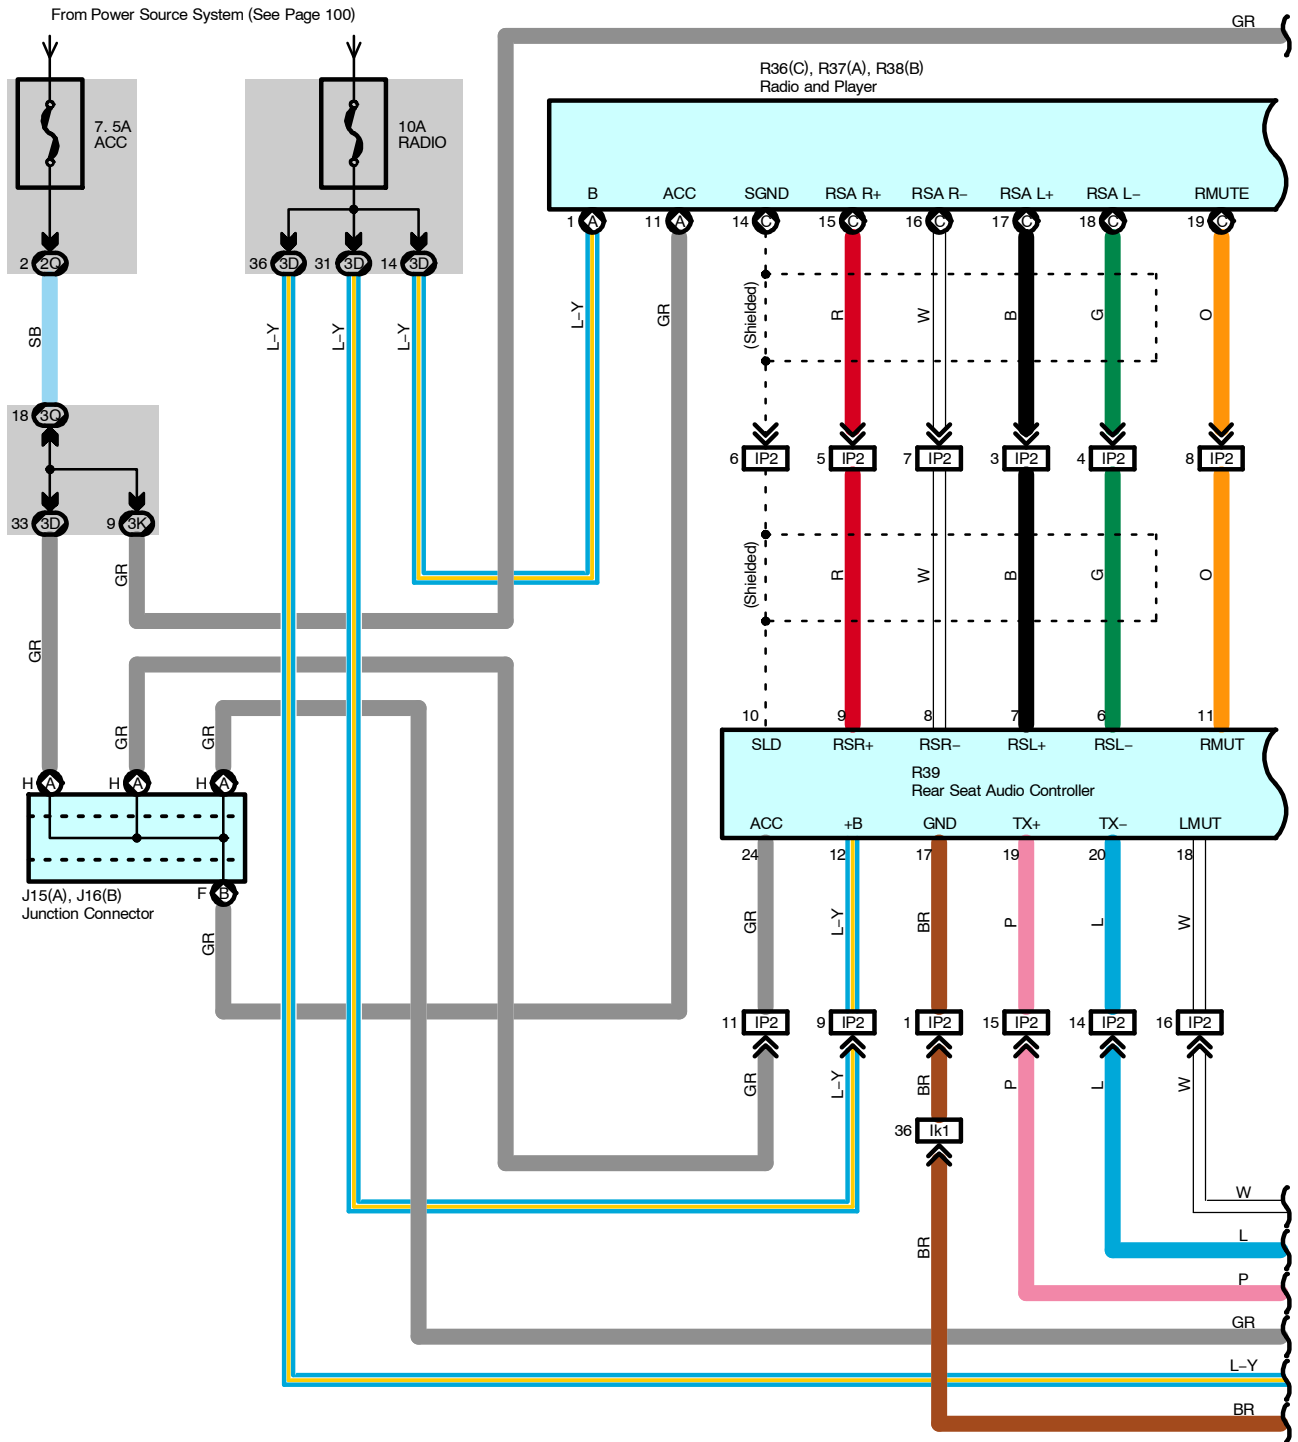


* 1 : w/ Option Connector (LEXUS Link System (Mayday System))
 * 2 : w/o Option Connector (LEXUS Link System (Mayday System))

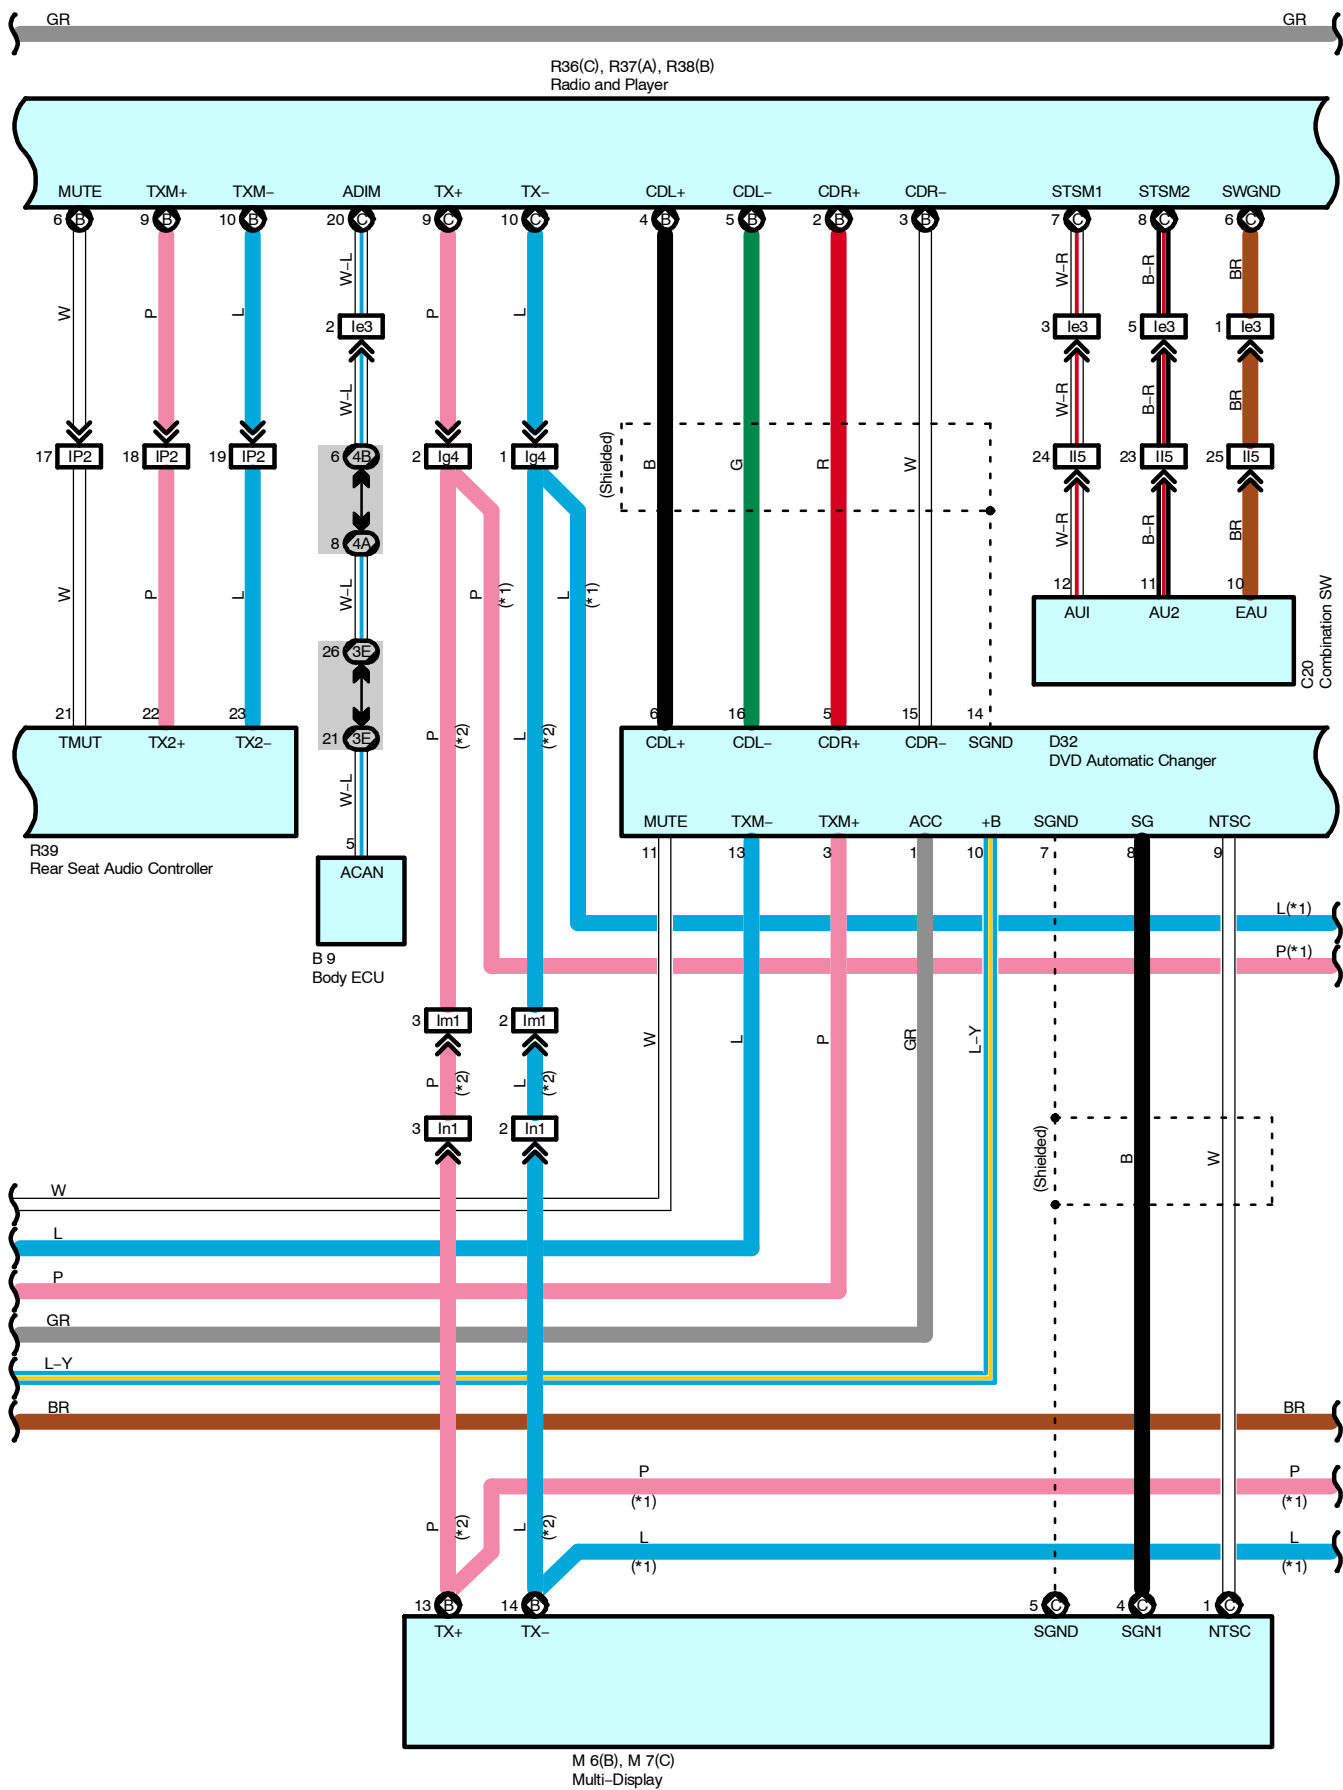

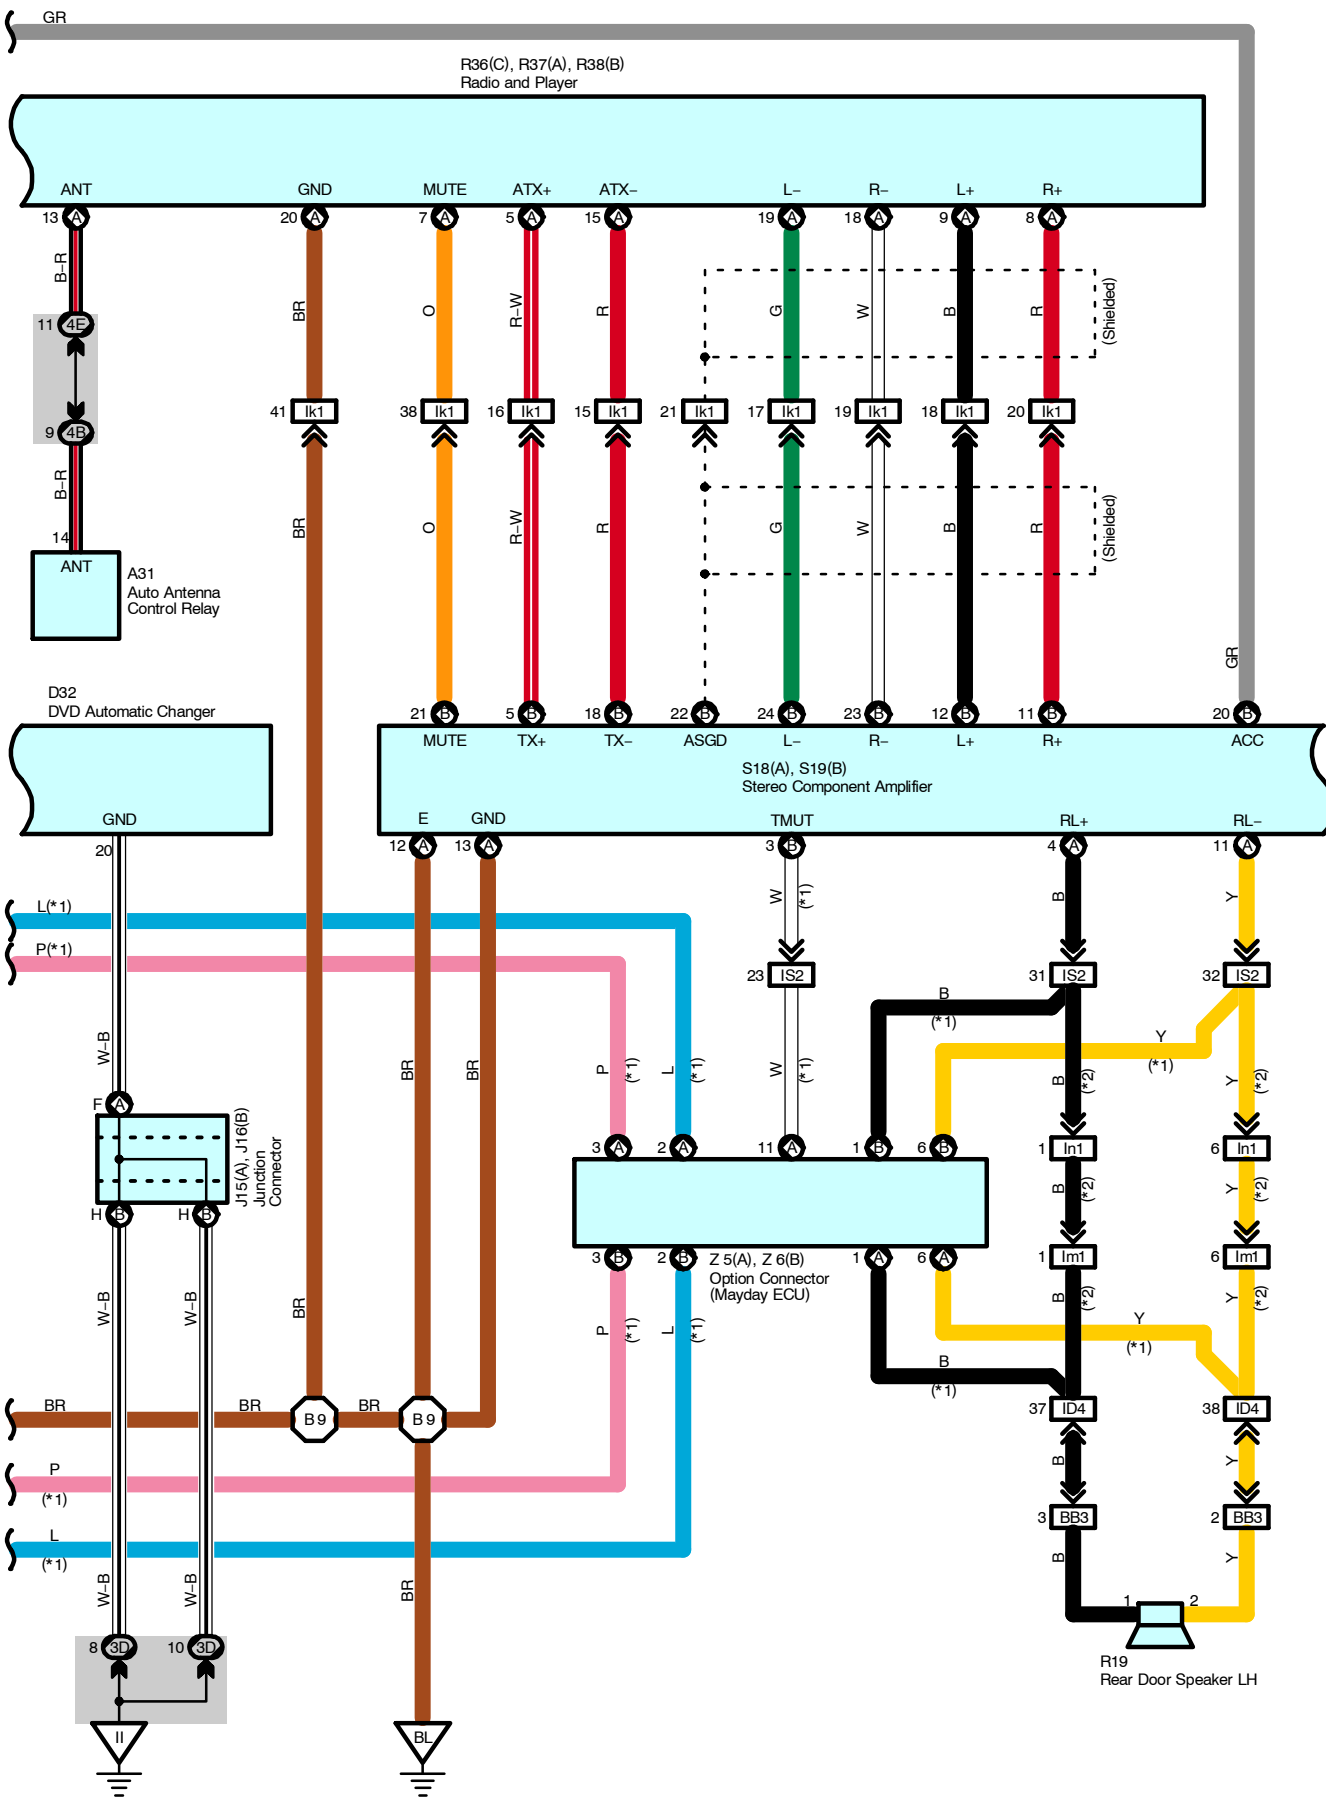


From Power Source System (See Page 100)

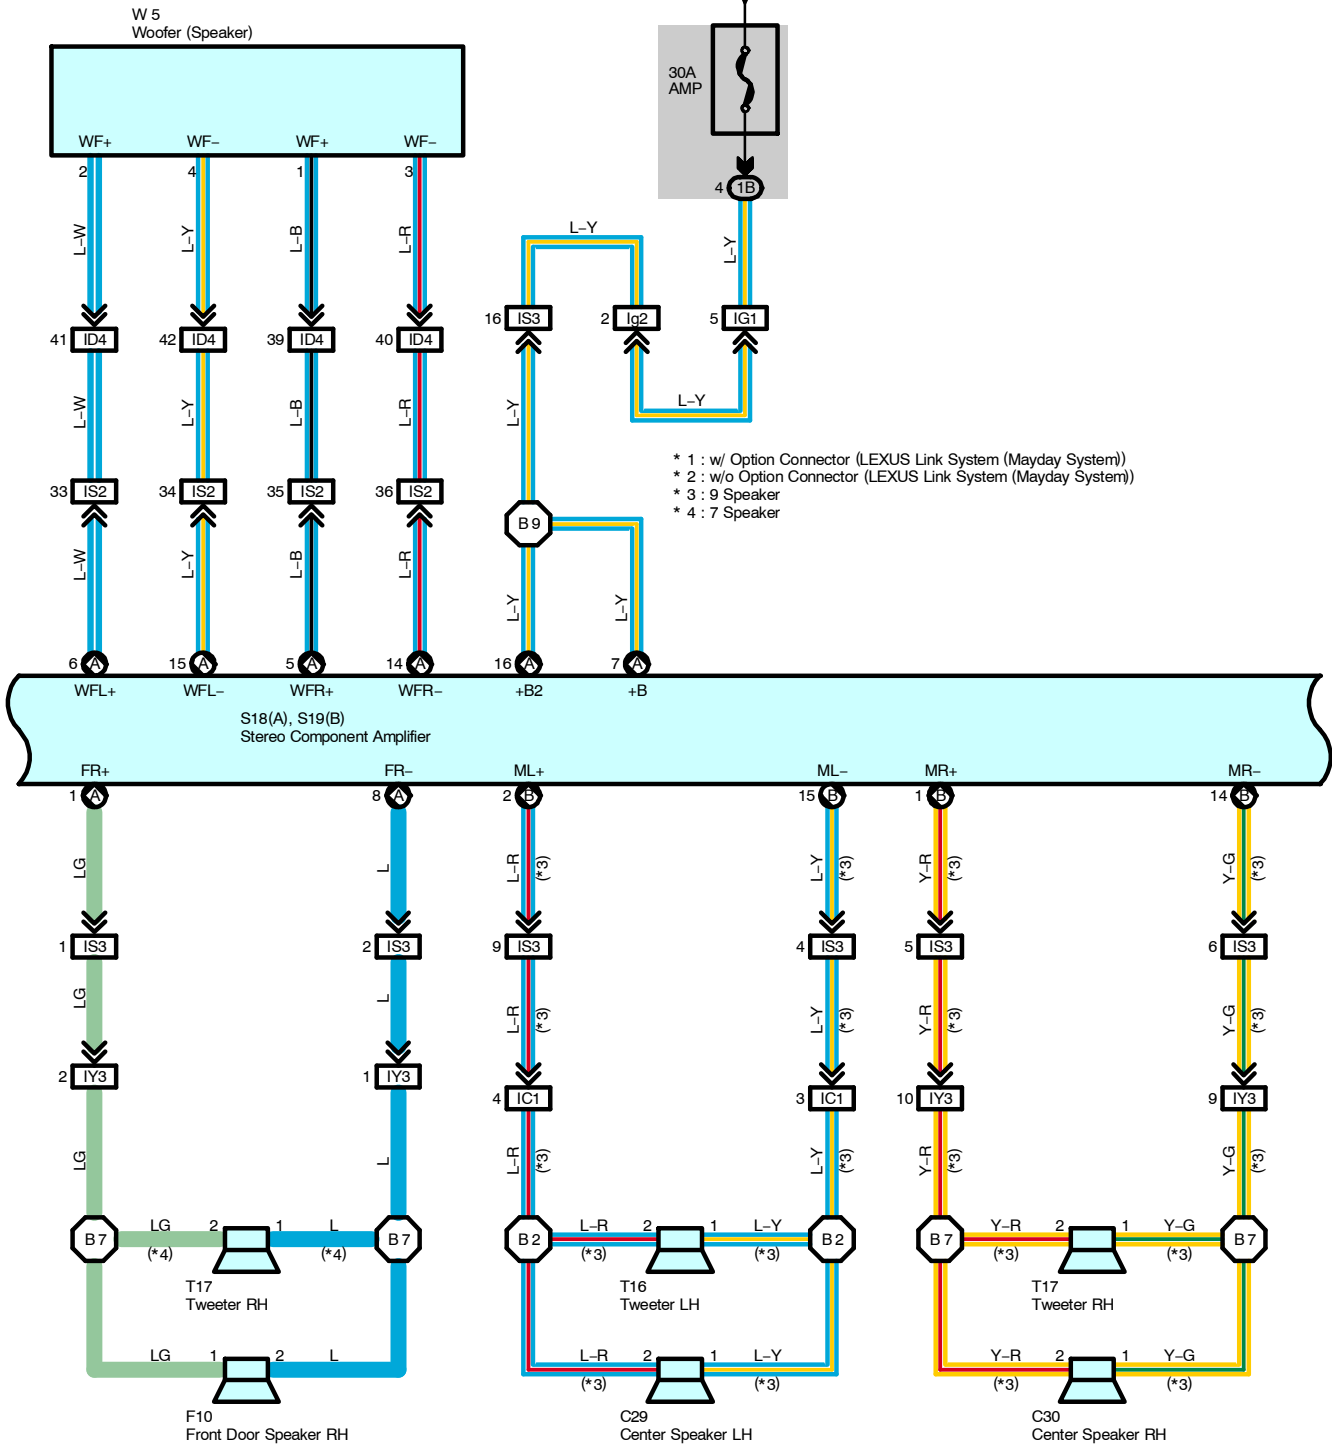

Audio System with Navigation System

* 4 : 7 Speaker

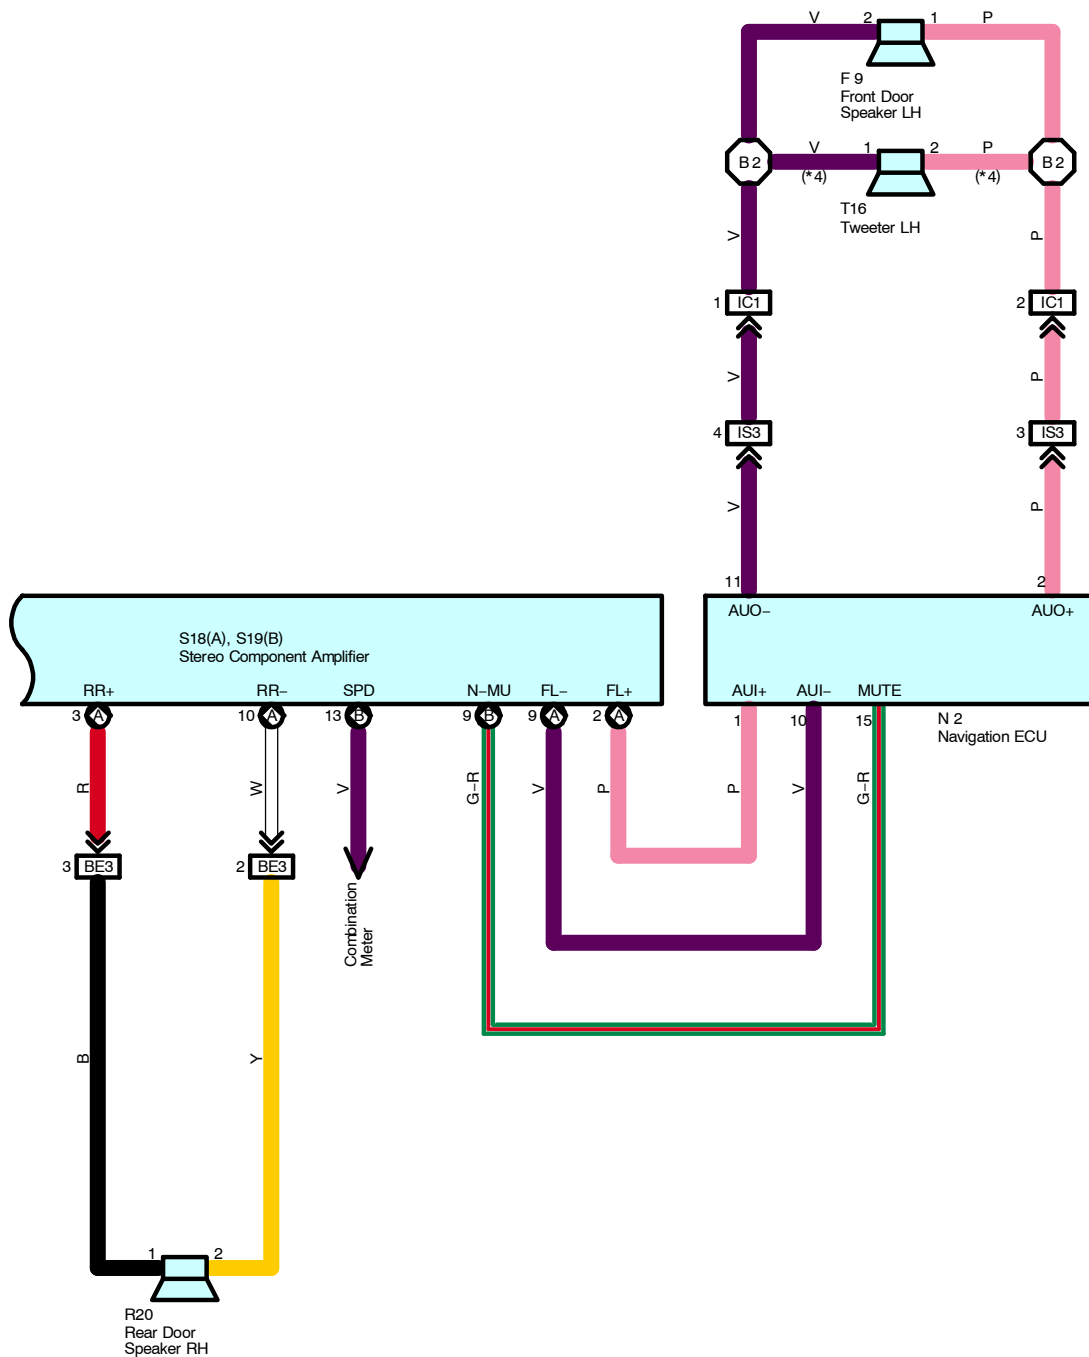

Service Hints

R37 Radio and Player

- 1-Ground : Always approx. 12 volts
- 11-Ground : Approx. 12 volts with ignition SW at ACC or ON position
- 20-Ground : Always continuity

S18 (A), S19 (B) Stereo Component Amplifier

- (A) 7, (A) 16-Ground : Always approx. 12 volts
- (B) 20-Ground : Approx. 12 volts with ignition SW at ACC or ON position
- (A) 12, (A) 13-Ground : Always continuity

○ : Parts Location

Code		See Page		Code		See Page		Code		See Page	
A31		70		J16	B	72		R39		73	
B9		70		M6	B	72		S18	A	75	
C20		71		M7	C	72		S19	B	75	
C29		74		N2		74		T16		75	
C30		74		R19		75		T17		75	
D32		71		R20		75		W5		75	
F9		74		R36	C	73		Z5	A	73	
F10		74		R37	A	73		Z6	B	73	
J15	A	72		R38	B	73					

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3D	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3E	40	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3K	40	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)
3Q	42	Dash Wire and J/B No.4 (Instrument Panel Center)
4A	52	
4B		
4E		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	80	Front Door LH Wire and Dash Wire (Left Kick Panel)
ID4	80	Dash Wire and Floor No.1 Wire (Left Kick Panel)
IG1	82	Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)
II5	82	Dash Wire and Column Wire (Near the Ignition SW)
IP2	84	Rear Console Box Wire and Dash Wire (Right Side of Rear Console)
IS2	84	Dash Wire and Floor No.2 Wire (Right Kick Panel)
IS3	86	Front Door RH Wire and Dash Wire (Right Kick Panel)
IY3	86	Dash Wire and Dash Wire (Behind the Combination Meter)
Ie3	88	Dash Wire and Dash Wire (Instrument Panel Center)
Ig2	88	Dash Wire and Floor No.2 Wire (Right Side of Front Console)
Ig4	88	Dash Wire and Computer No.4 Wire (Right Side of Rear Console)
Ik1	88	Computer No.4 Wire and Dash Wire (Right Side of Rear Console)
Im1	90	Rear Door LH Wire and Floor No.1 Wire (Left Side of Center Pillar)
In1	90	Rear Door RH Wire and Floor No.2 Wire (Right Side of Center Pillar)

Audio System with Navigation System



: Ground Points

Code	See Page	Ground Points Location
II	80	Set Bolt of Cowl Side J/B RH
BL	90	Rear Side Under the Front Passenger's Seat



: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B2	92	Front Door LH Wire	B9	92	Floor No.2 Wire
B7	92	Front Door RH Wire			

