



Combination Meter

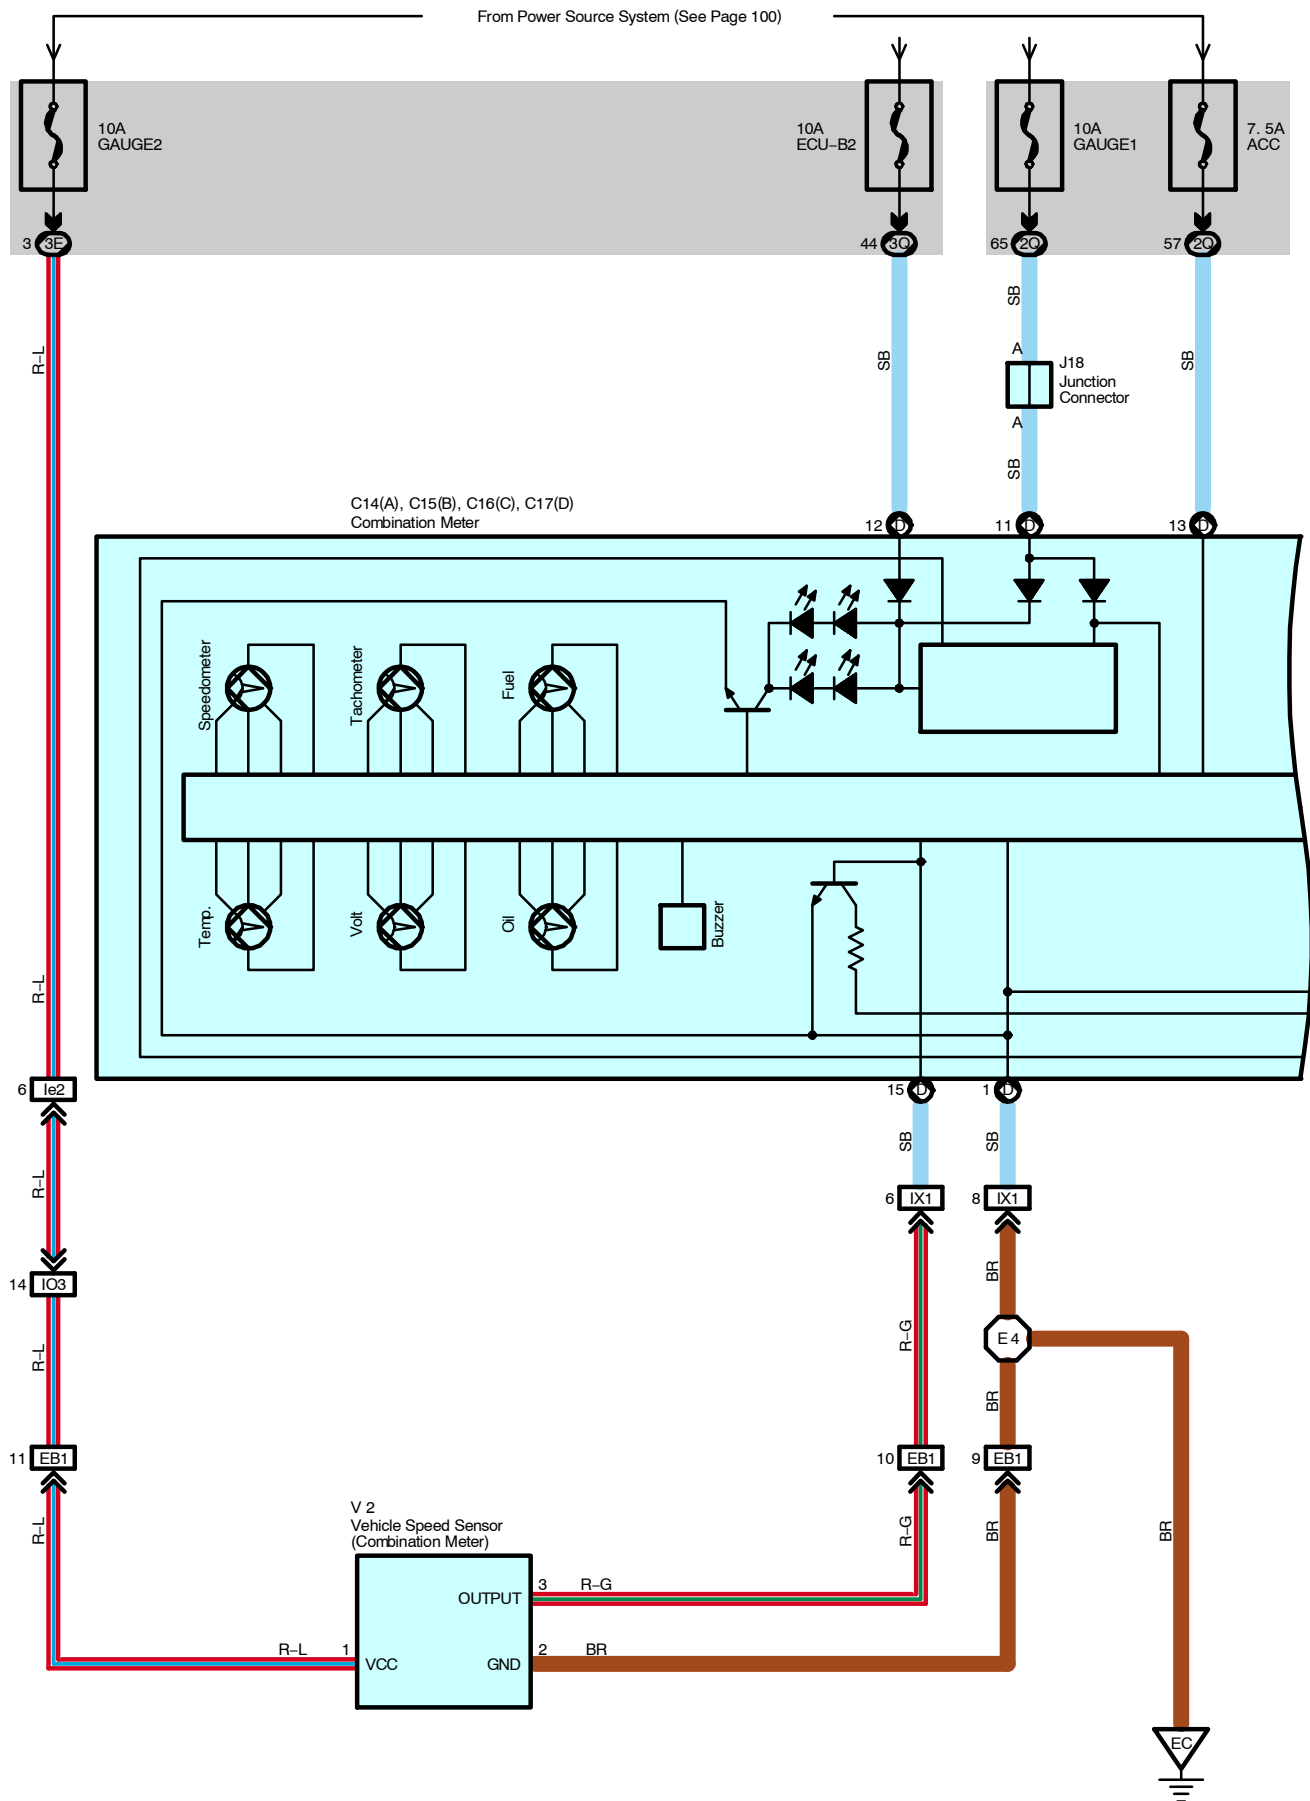



From Power Source System (See Page 100)

* 1 : w/ LEXUS Navigation System

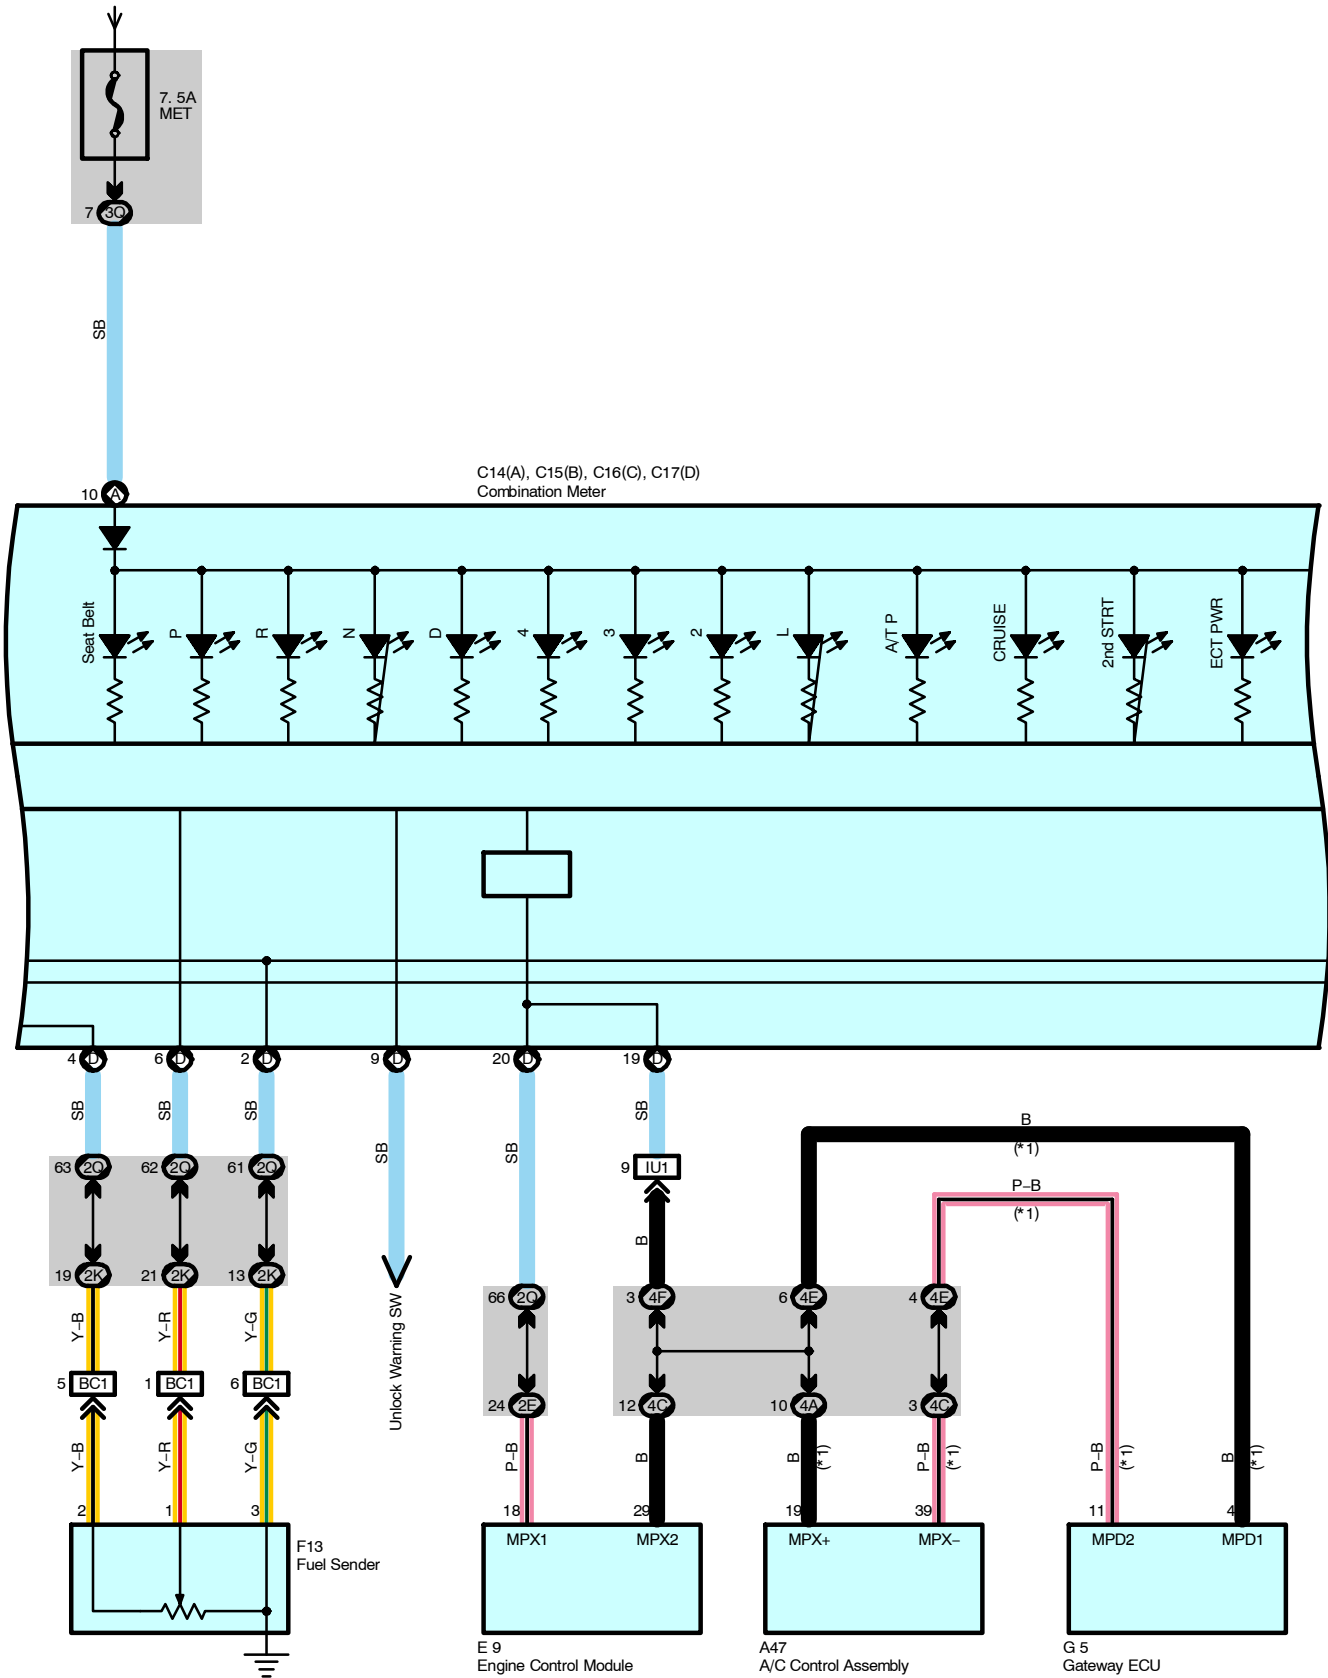


- * 1 : w/ LEXUS Navigation System
- * 2 : w/o LEXUS Navigation System
- * 3 : w/ Daytime Running Light
- * 4 : w/o Daytime Running Light
- * 5 : Except USA
- * 6 : USA
- * 7 : Except *8
- * 8 : Taiwan

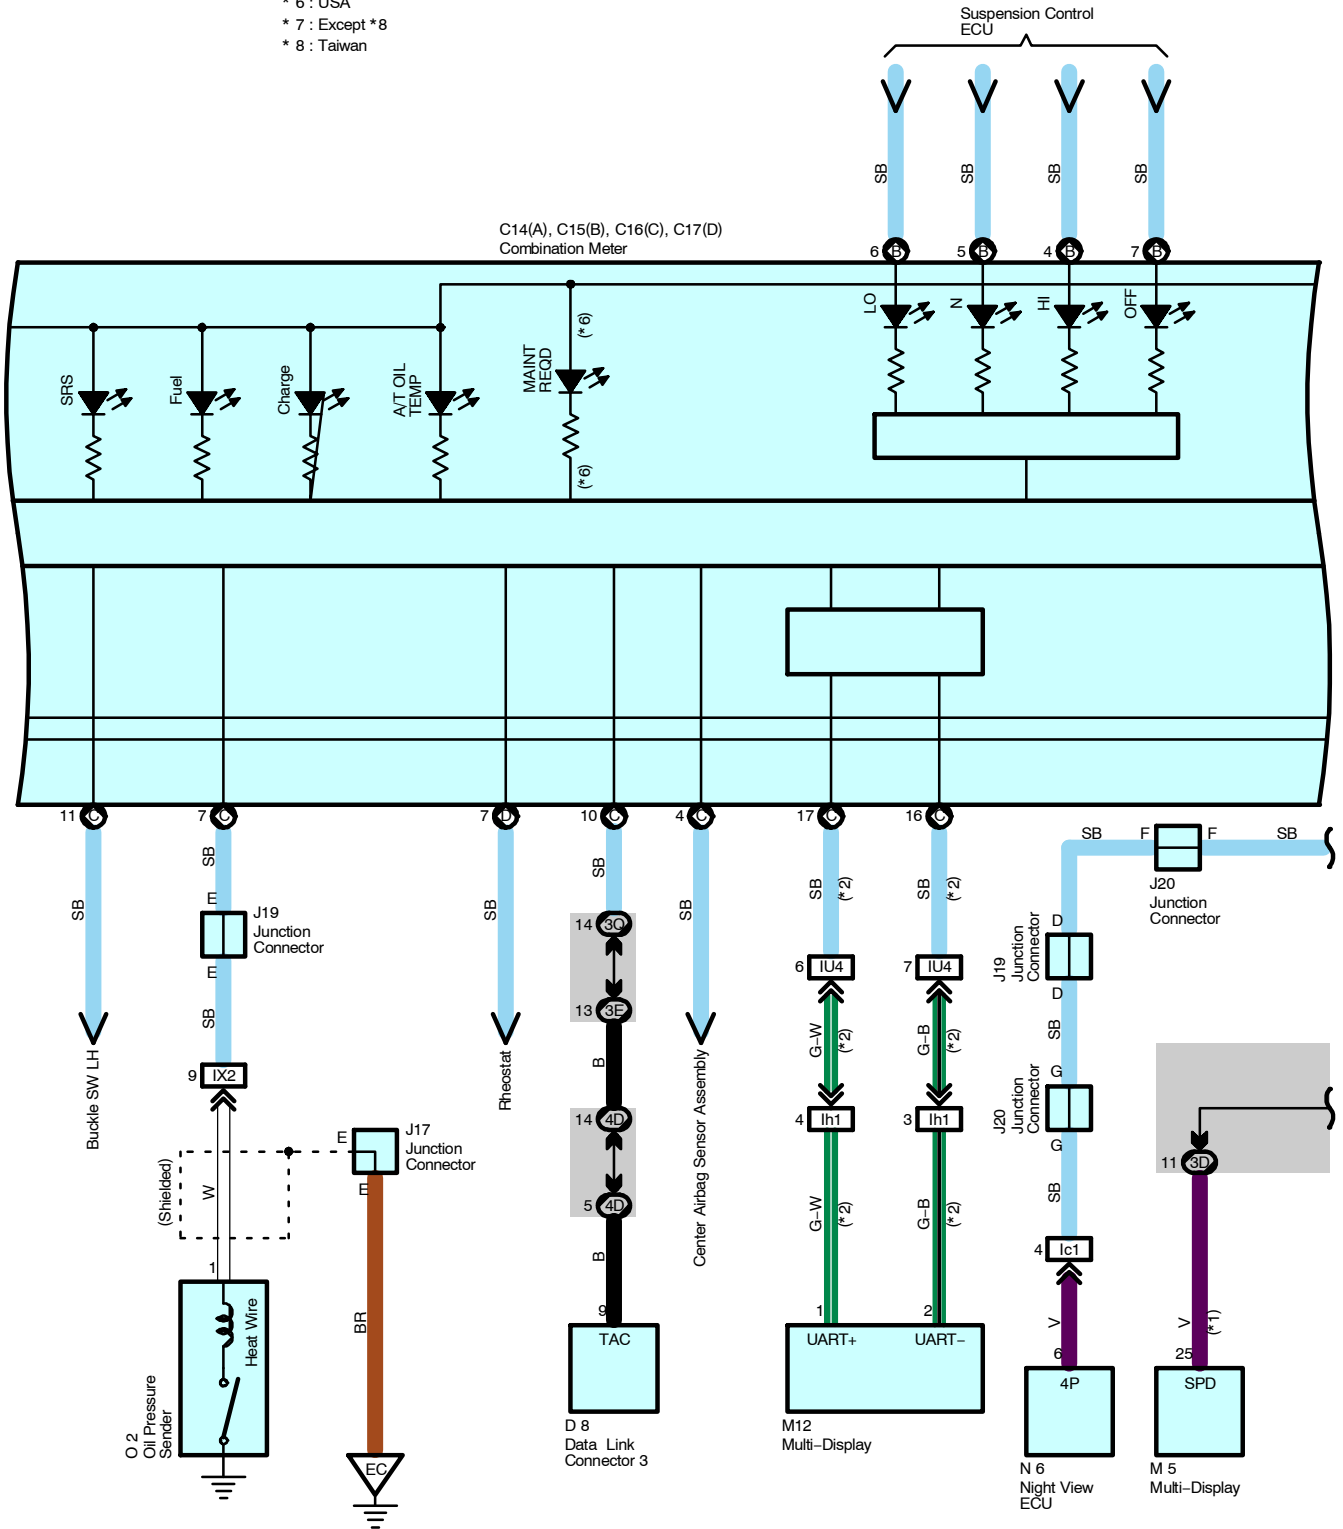

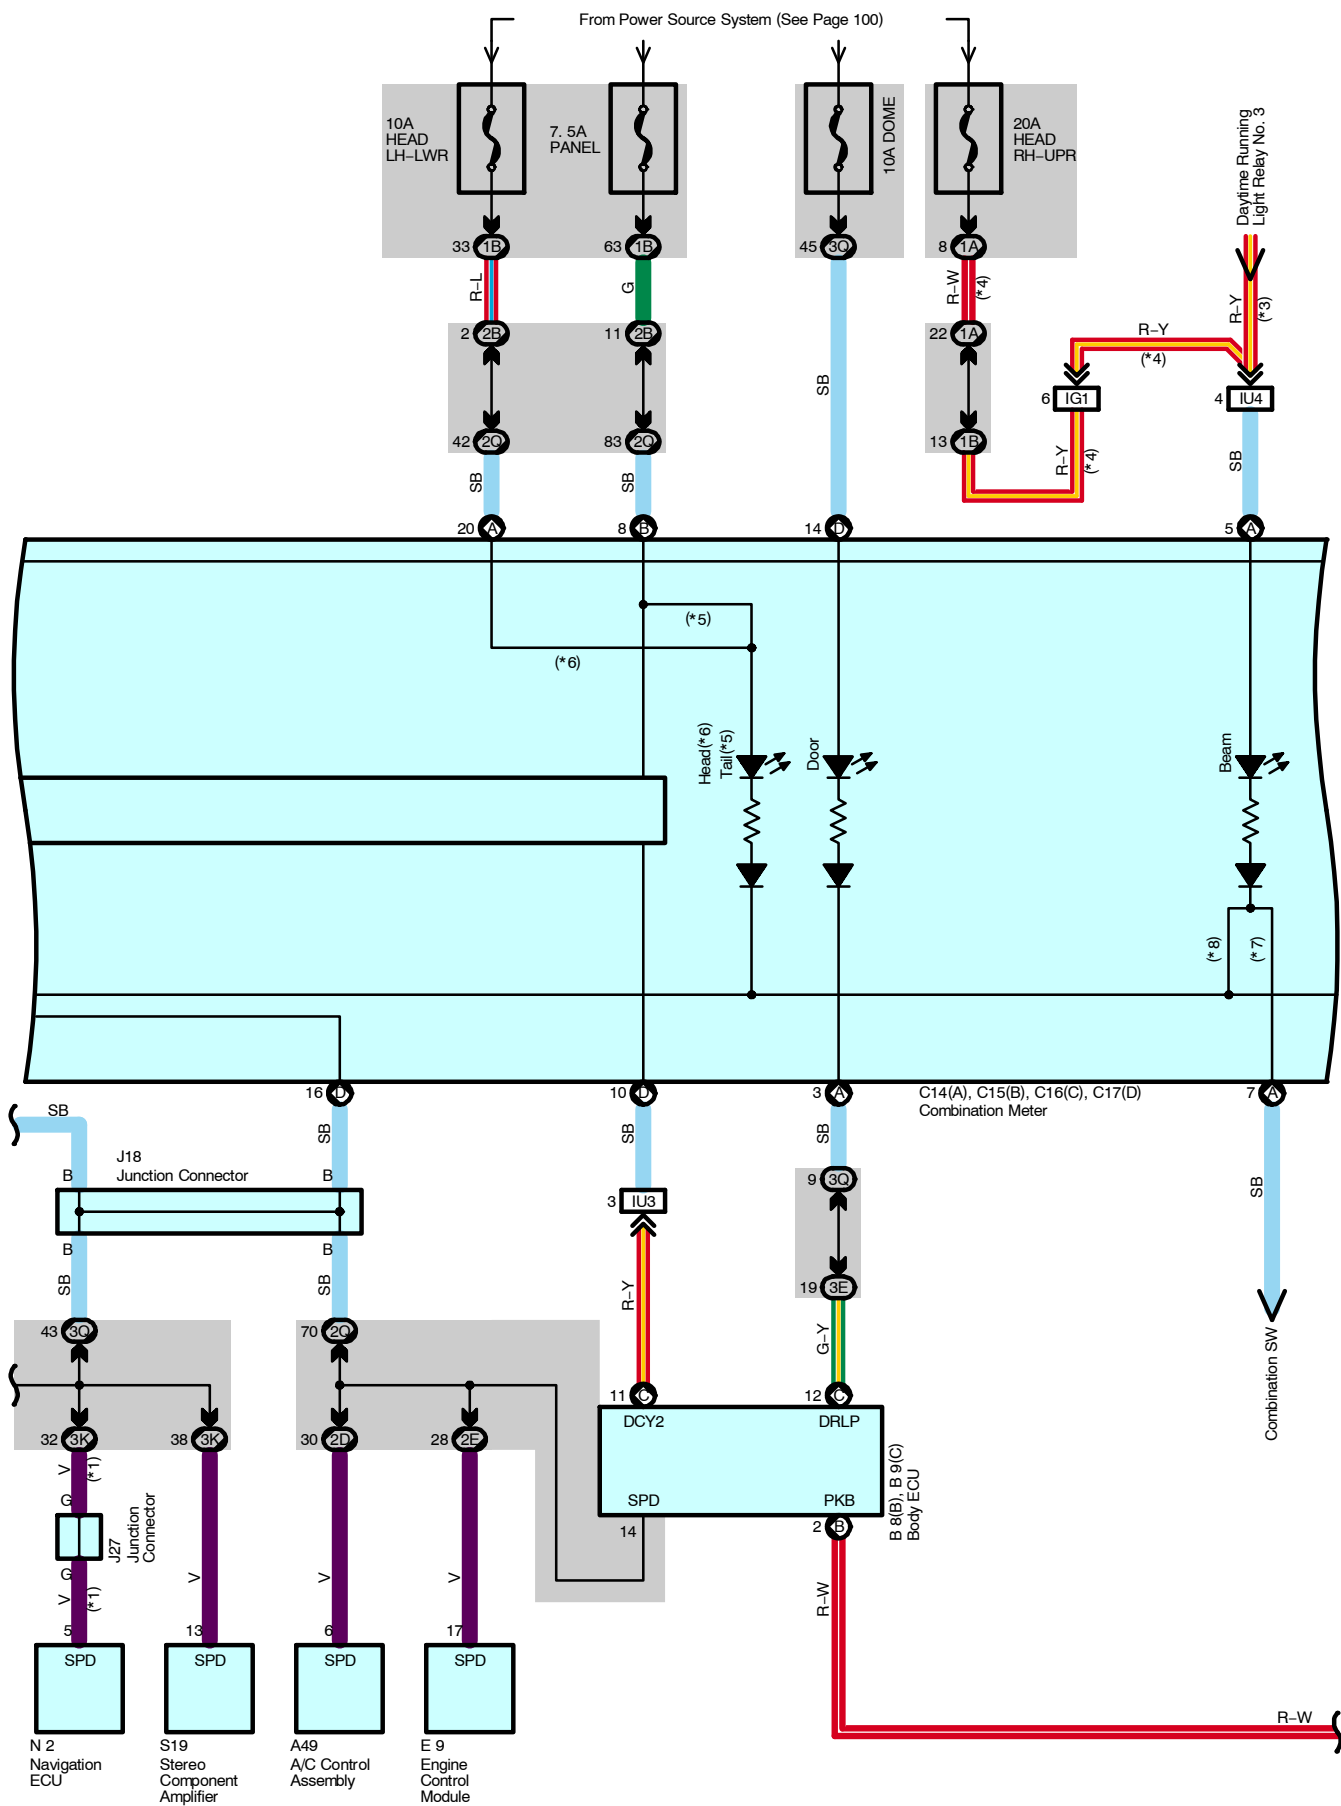



* 5 : Except USA
 * 6 : USA

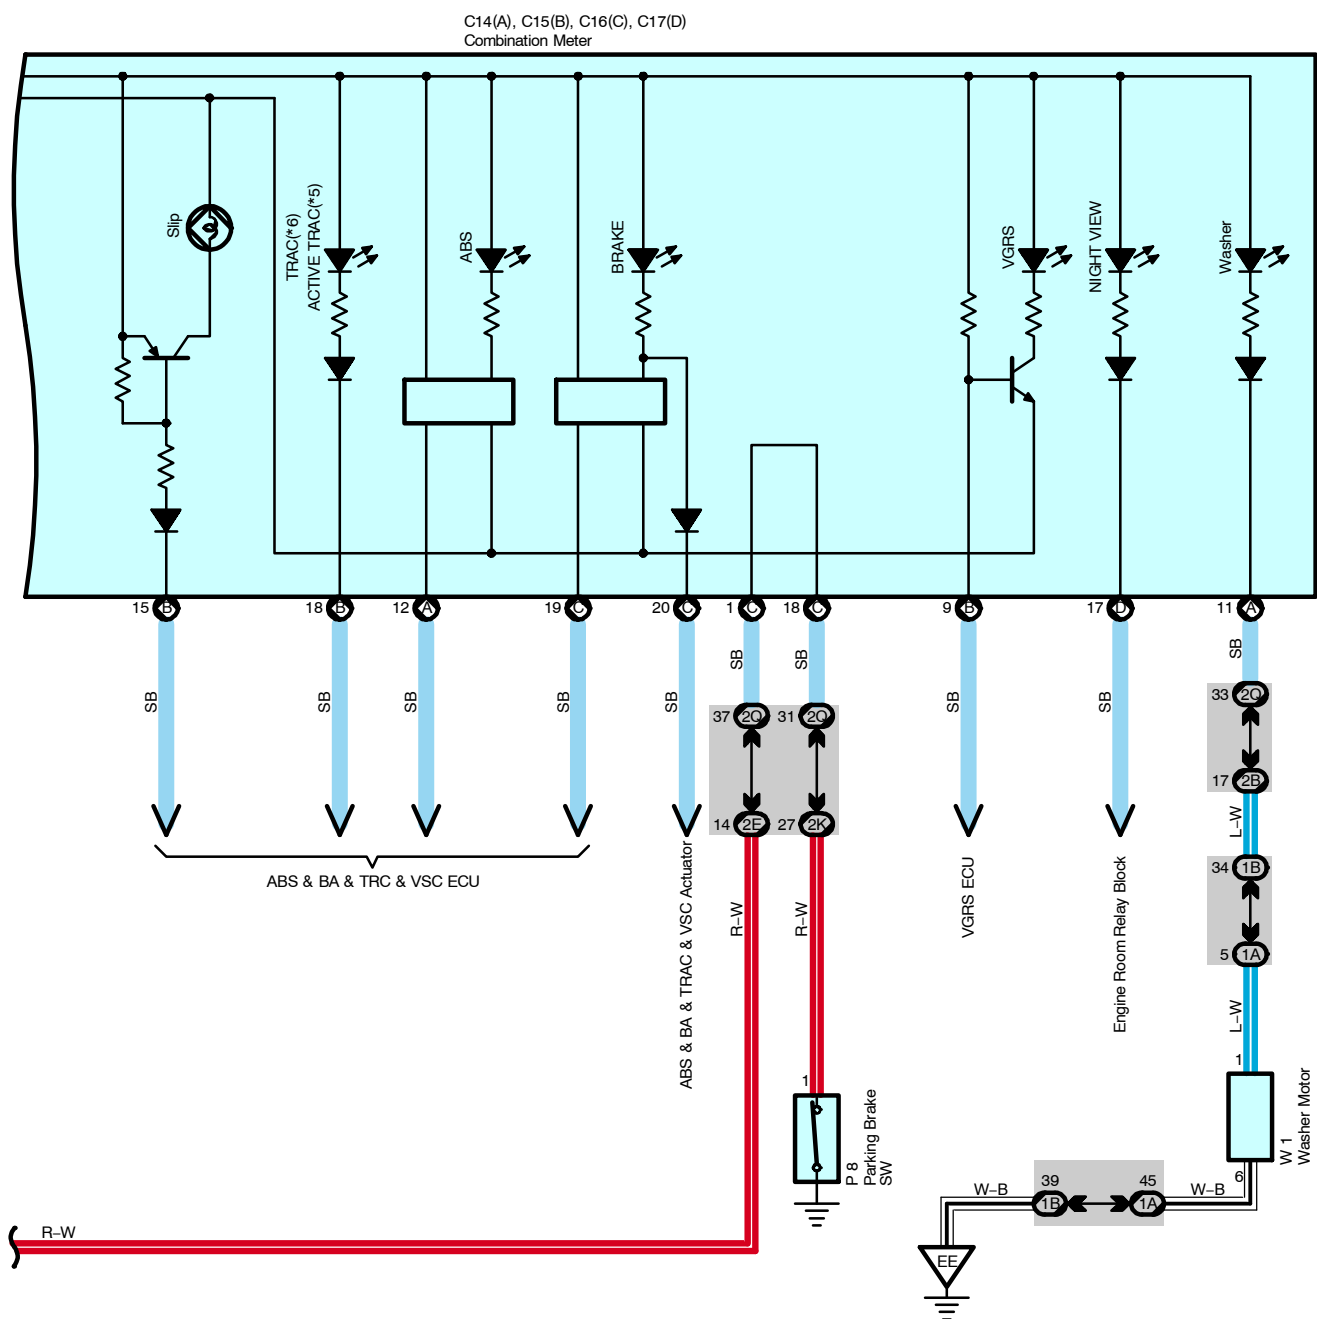

Combination Meter

Service Hints

P8 Parking Brake SW

1–Ground : Closed with parking brake lever pulled up

C14 (A), C15 (B), C17 (D) Combination Meter

(D) 12, (D) 14–Ground : Always approx. 12 volts

(D) 13–Ground : Approx. 12 volts with ignition SW at ACC or ON position

(A) 10, (D) 11–Ground : Approx. 12 volts with ignition SW at ON or ST position

(B) 8–Ground : Approx. 12 volts with light control SW at TAIL or HEAD position

(D) 1–Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A47	70	E9	71	M12	72
A49	70	F13	74	N2	74
B8	70	G5	71	N6	72
B9	70	J17	72	O2	69
C14	71	J18	72	P8	75
C15	71	J19	72	S19	75
C16	71	J20	72	S26	75
C17	71	J27	74	V2	69
D8	71	M5	72	W1	69

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1B	24	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2B	28	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2D	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2E		
2K	28	Floor No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3D	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3E		
3K	40	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3Q	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)
4A	52	Dash Wire and J/B No.4 (Instrument Panel Center)
4C		
4D		
4E		
4F		

 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	78	Engine Wire and Transmission Wire (On the Transmission)
ID6	80	Dash Wire and Floor No.1 Wire (Left Kick Panel)
IG1	82	Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)
IO3	82	Engine Wire and Dash Wire (Behind the Glove Box)
IU1	84	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IU2		
IU3		
IU4		
IX1	86	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)
IX2		
Ic1	86	Instrument Panel Integration Wire and Instrument Panel Integration Wire (Left Side of Instrument Panel)
Ie2	86	Dash Wire and Dash Wire (Behind the Combination Meter)
Ih1	88	Dash Wire and Dash Wire (Behind the Glove Box)
BC1	90	Floor No.1 Wire and Fuel Tank Wire (Near the Fuel Tank)

 : **Ground Points**

Code	See Page	Ground Points Location
EC	78	Rear Bank of Right Cylinder Head
EE	78	Front Left Side of Fender Apron

 : **Splice Points**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E4	78	Engine Wire			