
 
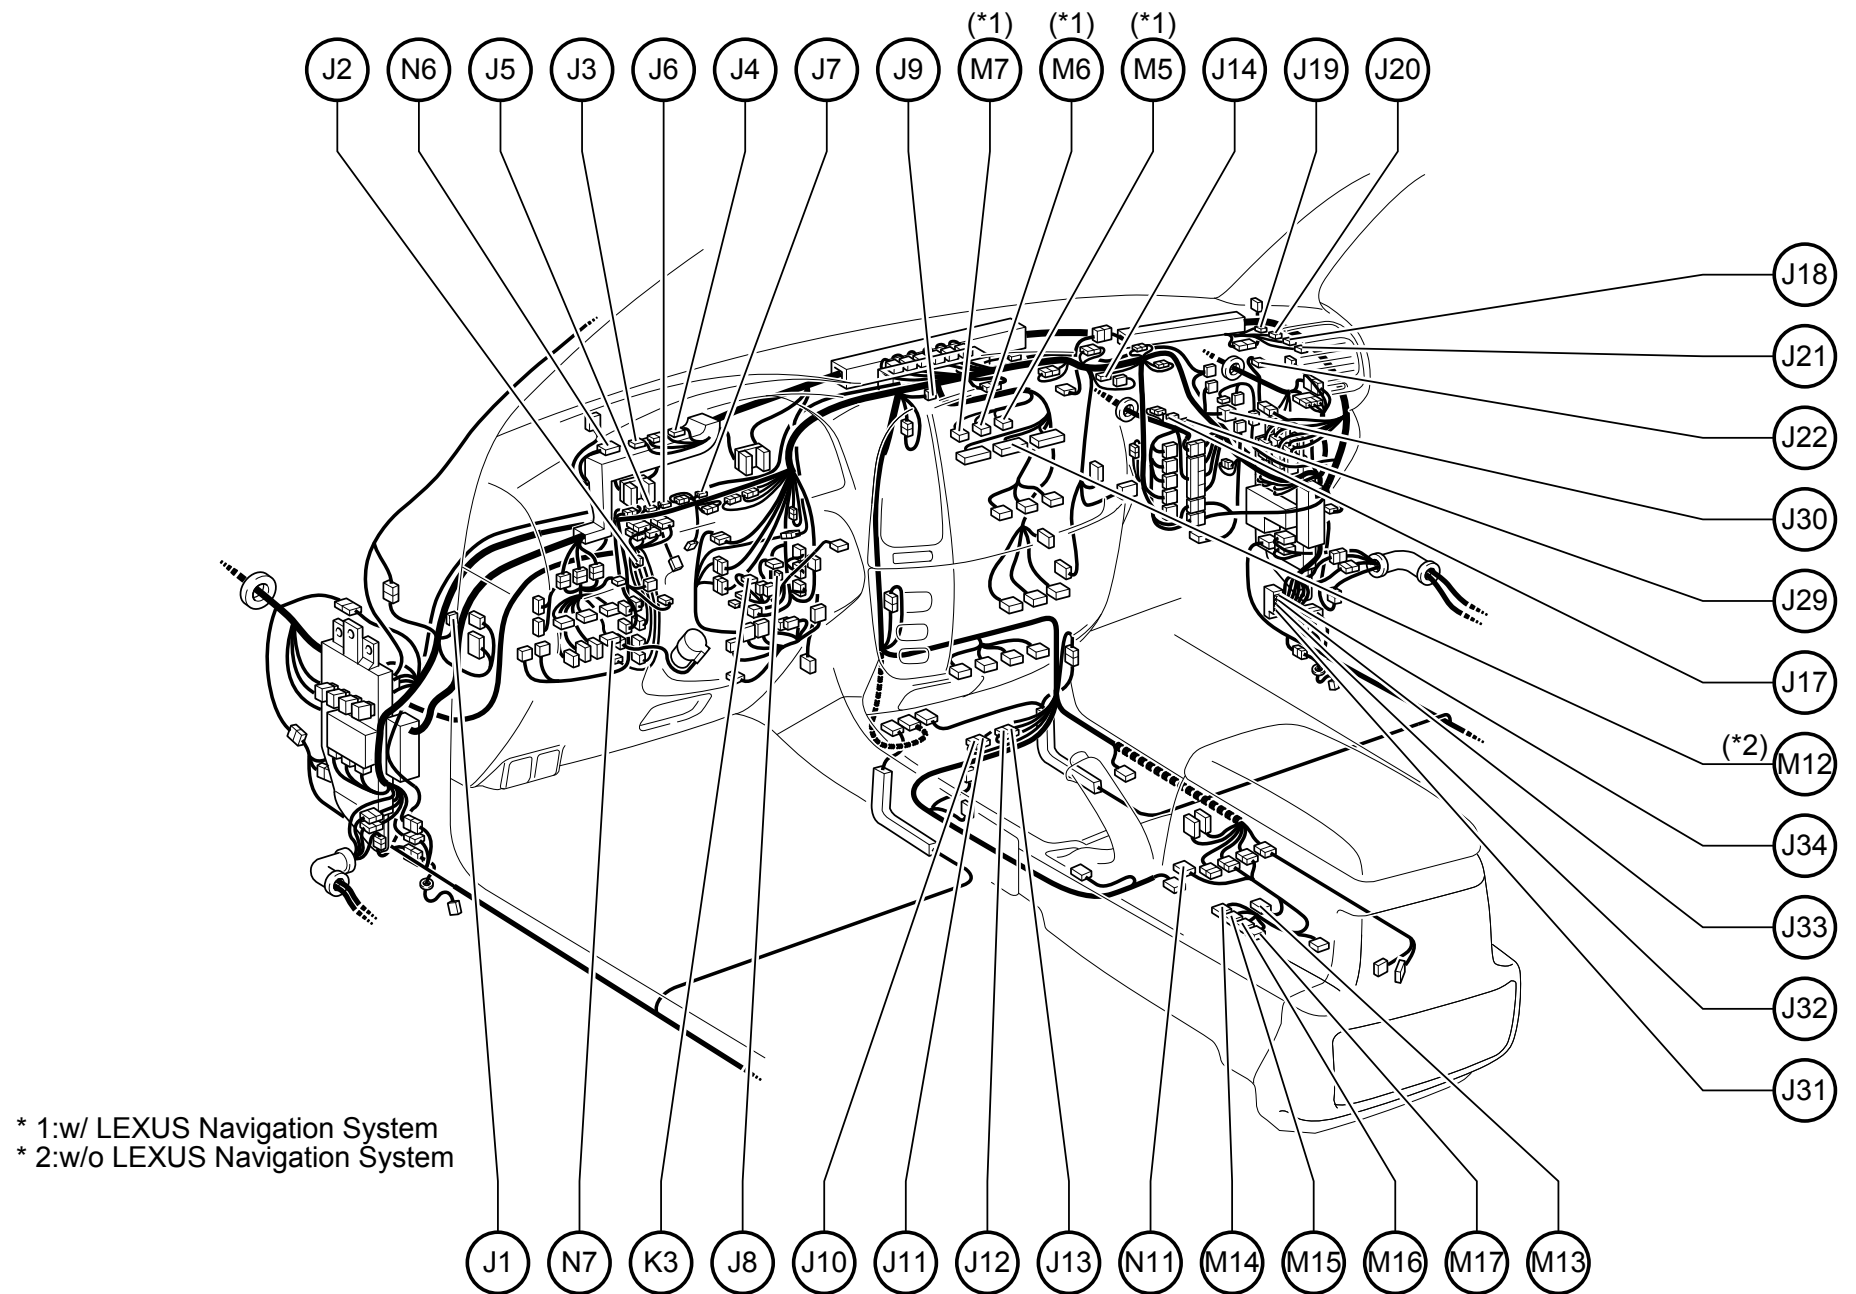

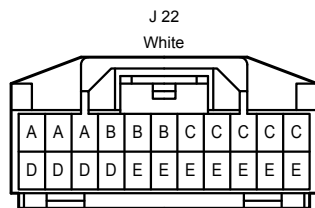
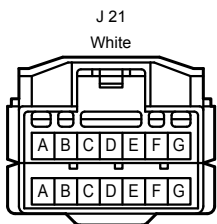
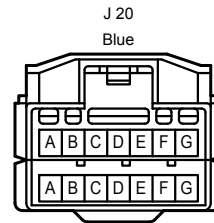
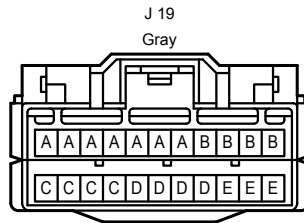
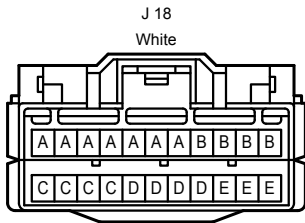
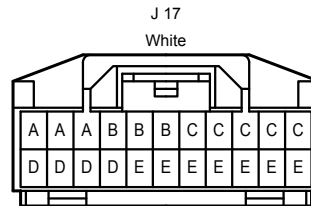
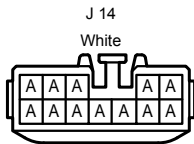
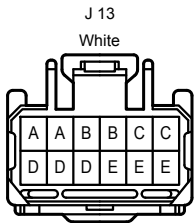
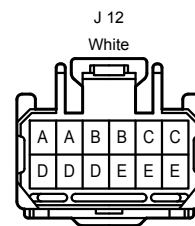
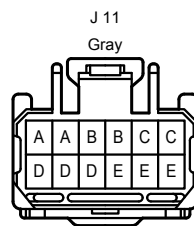
 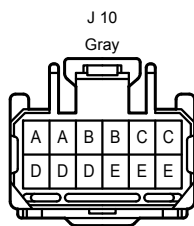
 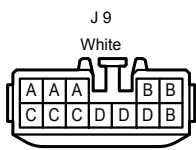
 
 


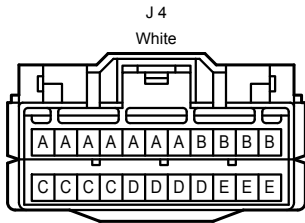
 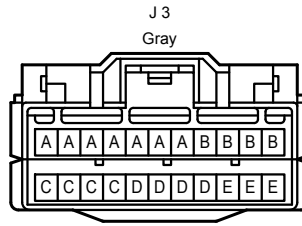


Position of Parts in Instrument Panel

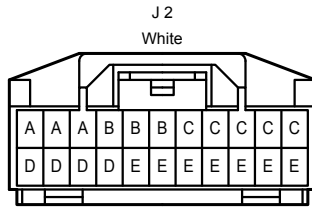

J	1	Junction Connector
J	2	Junction Connector
J	3	Junction Connector
J	4	Junction Connector
J	5	Junction Connector
J	6	Junction Connector
J	7	Junction Connector
J	8	Junction Connector
J	9	Junction Connector
J	10	Junction Connector
J	11	Junction Connector
J	12	Junction Connector
J	13	Junction Connector
J	14	Junction Connector
J	17	Junction Connector
J	18	Junction Connector
J	19	Junction Connector
J	20	Junction Connector
J	21	Junction Connector
J	22	Junction Connector
J	29	Junction Connector
J	30	Junction Connector
J	31	Junction Connector
J	32	Junction Connector
J	33	Junction Connector
J	34	Junction Connector
K	3	Key Interlock Solenoid
M	5	Multi-Display
M	6	Multi-Display
M	7	Multi-Display
M	12	Multi-Display
M	13	Mayday Battery
M	14	Mayday ECU
M	15	Mayday ECU
M	16	Mayday ECU
M	17	Mayday ECU
N	6	Night View ECU
N	7	Night View SW
N	11	Navigation Antenna

Position of Parts in Instrument Panel



Position of Parts in Instrument Panel

